



V2

Brand	Codes
A.R. Systems	0132, 0422
Acme	0464
Acura	0029, 0419, 0457
ADA	0456
ADC	0451, 0452
Admiral	0005, 0044, 0108, 0410, 0418, 0450, 0451
Agashi	0418
Agazi	0451
Aiko	0413, 0419, 0420, 0422, 0429, 0452, 0457
Aim	0422
Aiwa	0020, 0161, 0234
Akai	0059, 0100, 0287, 0409, 0413, 0418, 0419, 0420, 0422, 0423, 0424, 0429, 0452, 0454, 0456, 0457, 0458, 0484
Akiba	0074, 0113, 0422, 0423, 0458
Akito	0135, 0466
Akura	0060, 0071, 0074, 0419, 0422, 0423, 0451, 0458
Alba	0021, 0029, 0060, 0062, 0079, 0086, 0100, 0104, 0108, 0235, 0280, 0281, 0419, 0421, 0422, 0423, 0426, 0457, 0458, 0468, 0469, 0494
ALBIRAL	0016
Allorgan	0080, 0467
Allstar	0422, 0484
Amplivision	0105
Amstrad	0029, 0052, 0096, 0100, 0107, 0139, 0418, 0419, 0422, 0423, 0451, 0457, 0458, 0471
Anam	0004, 0457
Anglo	0419, 0457
Anitech	0029, 0040, 0043, 0418, 0419, 0422, 0451, 0457, 0479
Ansonic	0419, 0422, 0426, 0427, 0457, 0460
ANTECNO	0413
Arc en Ciel	0480



V2

Brand	Codes
Aristona	0287, 0422, 0484
ASA	0044, 0047, 0081, 0410, 0450, 0461, 0462, 0463
Asberg	0043, 0422, 0479, 0484
Astra	0418, 0457
Asuka	0060, 0074, 0413, 0423, 0451, 0458
Atlantic	0057, 0412, 0422, 0484
Atori	0419, 0457
Atoro	0418
Audiosonic	0413, 0418, 0422, 0423, 0428, 0457, 0458, 0484
AudioTon	0418
Ausind	0415, 0430, 0479
Autovox	0043, 0044, 0057, 0063, 0081, 0426, 0430, 0450, 0451, 0479
Awa	0409, 0418
Baird	0409, 0429
Bang & Olufsen	0044, 0450
Barco	0015, 0016
Basic Line	0029, 0060, 0074, 0413, 0419, 0422, 0423, 0457, 0458, 0484
Bauer	0418
Baur	0030, 0118, 0120, 0124, 0126, 0422, 0489
Beko	0009, 0012, 0099, 0116, 0202, 0236, 0282, 0283, 0422, 0455, 0474, 0494
Beon	0108, 0422, 0484
Best	0428
Bestar	0422, 0484
BIGSTON	0418
Black Star	0426
Blacktron	0074
Blackway	0074
Blaupunkt	0054, 0056, 0067, 0085, 0124, 0126, 0456



V2

Brand	Codes
Blue Sky	0060, 0074, 0113, 0422, 0423, 0458
Blue Star	0074
Bondstec	0426
Boots	0466
BPL	0074, 0422
Brandt	0002, 0025, 0089, 0090, 0203, 0237, 0284, 0476, 0480, 0481
Brinkmann	0108, 0422
Brionvega	0044, 0410, 0412, 0422, 0450, 0484
Bruns	0044, 0136, 0410, 0411, 0450, 0455
BSR	0080, 0467
BTC	0060, 0423, 0458
Bush	0009, 0012, 0026, 0029, 0060, 0062, 0074, 0079, 0080, 0086, 0097, 0100, 0102, 0122, 0135, 0180, 0238, 0262, 0285, 0286, 0287, 0288, 0289, 0290, 0291, 0419, 0421, 0422, 0423, 0457, 0458, 0465, 0466, 0468, 0469, 0484, 0087
Capsonic	0451
Carena	0113, 0422
Carrefour	0421, 0468
Cascade	0029, 0419, 0422, 0457
Cathay	0422, 0484
Centurion	0422, 0484
Century	0044, 0410, 0426, 0450
CGE	0016, 0043, 0108, 0418, 0426, 0479
CGM	0413, 0418
CIE	0413
Cimline	0029, 0062, 0419, 0423, 0457, 0469
City	0419, 0457
Clarivox	0410, 0417, 0430
Clatronic	0043, 0099, 0413, 0419, 0422, 0423, 0426, 0427, 0451, 0457, 0458, 0471, 0479, 0484, 0494
Concorde	0419, 0457



V2



Brand	Codes
Condor	0074, 0099, 0418, 0419, 0422, 0426, 0427, 0484, 0494
Contec	0029, 0418, 0419, 0421, 0457, 0468, 0470, 0471
Continental Edison	0089, 0476, 0480, 0481
Cosmel	0418, 0419, 0428, 0457
Crosley	0043, 0044, 0410, 0426, 0450, 0479
Crown	0029, 0043, 0099, 0101, 0108, 0413, 0418, 0419, 0422, 0457, 0479, 0484, 0494
CS Electronics	0413, 0423, 0426, 0458
CTC	0426
CTC Clatronic	0413, 0418, 0460
Cybertron	0060, 0423, 0458
Daewoo	0022, 0029, 0102, 0157, 0194, 0239, 0287, 0413, 0418, 0419, 0422, 0423, 0457, 0484, 0486
Dainichi	0060, 0423, 0458
Dansai	0420, 0422, 0451, 0484
Dantax	0157, 0474
Datsura	0101
Dawa	0422
Daytron	0029, 0419, 0457
De Graaf	0059, 0454, 0473
Decca	0042, 0065, 0066, 0135, 0409, 0422, 0429, 0452, 0466, 0471, 0484
Denver	0147, 0418
Desmet	0422, 0484
Diamant	0422
Diamond	0418
Dixi	0029, 0136, 0419, 0422, 0457, 0484
DTS	0419, 0457
Dual	0012, 0095, 0122, 0132, 0418, 0422, 0497
Dual Tec	0412, 0418
Dual-Tec	0457



V2

proximus

Brand	Codes
Dumont	0041, 0044, 0047, 0081, 0410, 0411, 0427, 0450, 0460, 0462, 0463
Dynatron	0422, 0484
Elbe	0069, 0412, 0422, 0423, 0425
Elcit	0426, 0427, 0450
ELECTRO TECH	0418, 0457
ELECTRONIC	0418
Elektra	0074
Elin	0047, 0411, 0412, 0418, 0419, 0422, 0461, 0463, 0484
Elite	0060, 0422, 0423, 0458, 0484
Elman	0411, 0427, 0460
Elta	0029, 0418, 0419, 0457
Emerson	0044, 0410, 0415, 0422, 0426, 0450
Emperor	0074
Epson	0431, 0433
Erres	0031, 0422, 0484
Etron	0457
Euro-Feel	0451
Euroline	0157
Euroman	0074
Euromann	0422, 0451, 0484
Europhon	0137, 0411, 0422, 0426, 0427, 0460, 0466, 0484
Expert	0057, 0412
Exquisit	0422
Fenner	0418, 0419, 0457
Ferguson	0018, 0019, 0053, 0075, 0090, 0240, 0475, 0476, 0483, 0485, 0492
FIDELIS	0418
Fidelity	0016, 0100, 0422
Finlandia	0059, 0454



V2

Brand	Codes
Finlux	0041, 0042, 0044, 0047, 0048, 0081, 0411, 0415, 0416, 0422, 0427, 0429, 0430, 0450, 0452, 0460, 0461, 0462, 0463, 0479, 0484
FIRST LINE	0086, 0418, 0457, 0467, 0484
Firstline	0029, 0062, 0080, 0086, 0123, 0418, 0419, 0422, 0426, 0427, 0429
Fisher	0047, 0059, 0083, 0099, 0127, 0410, 0421, 0429, 0450, 0454, 0463, 0468, 0470, 0477, 0494
Flint	0113, 0422, 0423, 0429, 0484
FNR	0427
Formenti	0005, 0044, 0412, 0415, 0450, 0479
Formenti/Phoenix	0415
Fortress	0005, 0450
Fraba	0422
Frontech	0071, 0100, 0418, 0419, 0426, 0451, 0457
Fujitsu	0042, 0057, 0413, 0427, 0429, 0452
Funai	0071, 0080, 0083, 0418, 0451, 0467
Galaxi	0422, 0427
Galaxis	0108, 0422, 0427
Galaxy	0494
GALERIA	0418
GBC	0409, 0413, 0418, 0419, 0423, 0457, 0468
GEC	0016, 0035, 0042, 0409, 0422, 0429, 0452, 0478, 0484
Geloso	0029, 0413, 0418, 0419, 0426, 0457
General Technic	0418, 0419, 0457
Genexxa	0060, 0422, 0423, 0458, 0484
GM	0418
GMG	0418
GoldHand	0418
Goldline	0422
GoldStar	0078, 0418, 0419, 0422, 0426, 0457, 0459, 0484, 0495, 0499



V2

Brand	Codes
Goodmans	0016, 0042, 0062, 0084, 0100, 0102, 0157, 0287, 0418, 0419, 0420, 0421, 0422, 0424, 0429, 0451, 0452, 0457, 0468, 0469, 0484, 0499, 0133
Gorenje	0099, 0494
GPM	0060, 0413, 0418, 0423, 0458
Granada	0016, 0037, 0042, 0059, 0090, 0092, 0138, 0249, 0421, 0422, 0429, 0430, 0452, 0454, 0468, 0472, 0477, 0479, 0484, 0487
Grandin	0074, 0417, 0457, 0458
Grundig	0001, 0016, 0041, 0054, 0056, 0063, 0124, 0126, 0159, 0241, 0287, 0413, 0422, 0430, 0456, 0462, 0479, 0498
Halifax	0451
Hanseatic	0012, 0074, 0110, 0128, 0419, 0422, 0455, 0457, 0467, 0468, 0484
Hantarex	0418, 0419, 0422, 0457
Hantor	0422
Harwood	0419, 0422
Hauppauge	0275
HCM	0029, 0074, 0107, 0108, 0418, 0419, 0422, 0423, 0451, 0457
Hema	0419
HiLine	0422
Hinari	0016, 0029, 0060, 0062, 0079, 0106, 0418, 0419, 0421, 0422, 0423, 0454, 0457, 0458, 0468, 0479, 0484
Hisawa	0074, 0105, 0113, 0423, 0458
Hisonix	0418
Hitachi	0222, 0269, 0402, 0403, 0404, 0437, 0165, 0276, 0168, 0167, 0279, 0011, 0012, 0016, 0035, 0036, 0048, 0061, 0112, 0129, 0141, 0144, 0151, 0205, 0242, 0287, 0292, 0293, 0294, 0295, 0421, 0422, 0429, 0452, 0461, 0464, 0468, 0473, 0478, 0480, 0481, 0482, 0496
Hornyphon	0484
Hornyphone	0422
Hoshai	0113, 0413, 0423, 0458
Huanyu	0102
Hyper	0413, 0418, 0419, 0426, 0457



V2

Brand	Codes
Hypson	0071, 0074, 0113, 0422, 0451, 0484
Iberia	0422
ICE	0071, 0100, 0413, 0419, 0422, 0423, 0451, 0457, 0458, 0484
ICE/ITS	0413
ICeS	0060, 0423
Imperial	0016, 0043, 0099, 0108, 0422, 0426, 0479, 0484, 0494
Indesit	0063, 0465
Indiana	0422, 0484
Ingersol	0419, 0457
Inno Hit	0042, 0121, 0409, 0413, 0418, 0419, 0422, 0423, 0426, 0429, 0452, 0457, 0458, 0484, 0499
Innovation	0004, 0100, 0451, 0457
Interbuy	0040, 0419, 0426, 0457
Interfunk	0120, 0410, 0422, 0450, 0484
Intervision	0012, 0040, 0071, 0074, 0113, 0131, 0411, 0422, 0423, 0426, 0427, 0451, 0460
Irradio	0100, 0413, 0416, 0418, 0419, 0422, 0423, 0426, 0430, 0457, 0458, 0484
Isukai	0060, 0074, 0422, 0423, 0458
ITS	0074, 0100, 0422, 0423, 0458, 0484
ITT	0424, 0457, 0472
ITT Nokia	0412
ITV	0157, 0422, 0426, 0457
JEC	0420
JVC	0010, 0016, 0038, 0053, 0055, 0093, 0094, 0100, 0177, 0204, 0223, 0243, 0296, 0297, 0298, 0299, 0300, 0421, 0423, 0468, 0484, 0492
Kaisui	0029, 0060, 0074, 0113, 0413, 0418, 0419, 0422, 0423, 0457, 0458
Kapsch	0047, 0057, 0412
Karcher	0074, 0418, 0422, 0425, 0427, 0457, 0461
Kathrein	0128
Kendo	0062, 0418, 0422, 0425, 0426, 0427, 0460, 0469



V2

Brand	Codes
Kennedy	0412
KLARMAX	0016
Kneissel	0069, 0111, 0422
Kolster	0422, 0484
Konka	0423, 0458
Korpel	0422, 0484
Korting	0044, 0076, 0410, 0450
Kosmos	0422
Koyoda	0029, 0457
Kuro	0101
Lenco	0047, 0419, 0457
Lenoir	0418, 0419, 0457
Lerico	0411
Lesla	0426
Leyco	0042, 0071, 0080, 0409, 0422, 0429, 0451, 0452, 0467, 0484
LG	0265, 0405, 0164, 0218, 0244, 0301, 0302, 0175, 0278, 0009, 0012, 0157, 0247, 0307, 0308, 0309, 0310, 0311, 0312, 0313, 0419, 0422, 0426, 0457, 0459, 0484, 0495, 0499
Liesenkotter	0422
Life	0004, 0100, 0451, 0457
Lifetec	0004, 0012, 0100, 0419, 0422, 0423, 0451, 0457
Lloyds	0419
Loewe	0006, 0044, 0077, 0120, 0201, 0248, 0314, 0422, 0500
Loewe Opta	0410, 0414, 0450, 0484
Logik	0471
Luma	0057, 0412, 0419, 0422
Lumatron	0422, 0484
Lux May	0484
Luxor	0016, 0063, 0410, 0424, 0440, 0482, 0499



V2

Brand	Codes
M Electronic	0100, 0457, 0461, 0463, 0476, 0484
MAAZ	0016
Magnadyne	0044, 0131, 0410, 0411, 0418, 0426, 0427, 0450, 0460
Magnafon	0043, 0131, 0137, 0411, 0415, 0427, 0430, 0460, 0479
Magnum	0004, 0100, 0451, 0457
Mandor	0451
Manesth	0062, 0071, 0420, 0422, 0451, 0469, 0484
Marantz	0128, 0422, 0484
Marelli	0044, 0450
Mark	0419, 0422, 0484
Matsui	0016, 0029, 0034, 0042, 0052, 0059, 0062, 0070, 0079, 0080, 0086, 0090, 0096, 0097, 0100, 0113, 0135, 0287, 0418, 0419, 0420, 0421, 0422, 0429, 0452, 0457, 0466, 0467, 0468, 0469, 0471, 0484, 0498, 0156
Matsushita	0004
MAXELL	0418
MAXWELL	0016
McMichael	0035, 0478
Mediator	0031, 0287, 0422, 0484
Medion	0004, 0100, 0422, 0451, 0457
M-Electronic	0029, 0039, 0040, 0047, 0048, 0075, 0102, 0115, 0120, 0410, 0419, 0422, 0424, 0426, 0440
Memorex	0029, 0419, 0457
Memphis	0091, 0419, 0428, 0429, 0452, 0457
Mercury	0419, 0422
Metz	0044, 0082, 0098, 0124, 0256, 0410, 0450, 0456, 0488
MGA	0413
Micromaxx	0004, 0100, 0451, 0457
Microstar	0004, 0100, 0451, 0457
Minerva	0041, 0063, 0124, 0126, 0430, 0456, 0462
Minoka	0107, 0422, 0484



V2

Brand	Codes
Mitsubishi	0016, 0024, 0033, 0044, 0049, 0063, 0096, 0120, 0124, 0249, 0315, 0410, 0418, 0421, 0422, 0450, 0456, 0468, 0471, 0484, 0263, 0399, 0446
Mivar	0078, 0121, 0479, 0499
Motion	0043, 0479
MTC	0120
Multistandard	0427
Multitech	0029, 0043, 0131, 0413, 0418, 0419, 0422, 0426, 0427, 0457, 0460, 0468, 0479, 0480
Murphy	0047, 0429, 0463
National	0063, 0487
NEC	0051, 0418, 0421, 0468
Neckermann	0044, 0054, 0108, 0118, 0126, 0128, 0287, 0410, 0422, 0426, 0450, 0456, 0484, 0494
NEI	0091, 0100, 0422, 0428, 0484
Nesco	0426
Network	0428
Neufunk	0287, 0419, 0422
New Tech	0457, 0484
New World	0423, 0458
NewTech	0287, 0419, 0422
Nikkai	0034, 0042, 0060, 0071, 0091, 0419, 0420, 0421, 0422, 0423, 0428, 0429, 0451, 0452, 0458, 0484
NOBLEX	0418
Nobliko	0043, 0131, 0410, 0411, 0415, 0416, 0427, 0430, 0460, 0462, 0479
Nokia	0115, 0424, 0440, 0472
Nordmende	0015, 0450, 0465, 0476, 0480, 0481, 0484
Normende	0075
Novatronic	0422
Oceanic	0417, 0430
Okano	0422, 0429, 0494
ONCEAS	0418



V2

Brand	Codes
Onwa	0139, 0423
Opera	0422
ORAVA/OTF	0418
Orbit	0422, 0484
Orion	0008, 0009, 0016, 0062, 0079, 0080, 0086, 0097, 0154, 0161, 0419, 0422, 0427, 0457, 0467, 0469, 0471, 0484, 0488
Orline	0422, 0423
Osaki	0042, 0060, 0071, 0107, 0422, 0423, 0429, 0451, 0452, 0458, 0489
Oso	0060, 0423, 0458
Osume	0042, 0050, 0421, 0423, 0429, 0452, 0470
Otake	0084
Otto Versand	0005, 0030, 0054, 0062, 0118, 0120, 0124, 0126, 0128, 0138, 0287, 0418, 0421, 0422, 0426, 0456, 0468, 0484, 0489
Pael	0416, 0430
Palladium	0099, 0108, 0287, 0422, 0426, 0459, 0494
Panama	0071, 0419, 0422, 0426, 0451, 0457, 0489
Panasonic	0225, 0250, 0266, 0270, 0406, 0174, 0226, 0274, 0171, 0184, 0004, 0016, 0058, 0063, 0067, 0072, 0098, 0130, 0138, 0152, 0209, 0215, 0250, 0316, 0317, 0318, 0319, 0320, 0321, 0422, 0487
Panavision	0422
Pathe Cinema	0417
Pathe Marconi	0089, 0480, 0481
Pausa	0029, 0418, 0419, 0457
Perdio	0422, 0429, 0452
Perfekt	0422
PERSHIN	0417, 0430
Philco	0016, 0043, 0044, 0108, 0410, 0422, 0426, 0450, 0479
Philharmonic	0489



V2

Brand	Codes
Philips	0220, 0271, 0407, 0408, 0443, 0444, 0445, 0068, 0182, 0182, 0176, 0221, 0016, 0031, 0032, 0035, 0044, 0088, 0102, 0126, 0128, 0157, 0173, 0182, 0195, 0196, 0197, 0210, 0251, 0287, 0322, 0323, 0324, 0325, 0326, 0327, 0328, 0329, 0330, 0331, 0332, 0333, 0334, 0335, 0336, 0337, 0338, 0339, 0340, 0341, 0342, 0343, 0344, 0345, 0346, 0347, 0348, 0349, 0350, 0351, 0352, 0353, 0354, 0368, 0410, 0412, 0422, 0450, 0478, 0479, 0484, 0497, 0068
Phoenix	0044, 0422, 0429, 0450, 0484
Phonola	0016, 0031, 0032, 0044, 0287, 0410, 0422, 0450, 0484
Pioneer	0023, 0232, 0277, 0181, 0227, 0075, 0146, 0422, 0476, 0484
Plantron	0418, 0419, 0422, 0451, 0484
Poppy	0419, 0457
Prandoni	0411, 0416
Prandoni-Prince	0416, 0426
Precision	0489
Prima	0418, 0419, 0457
Prinz	0429, 0482
Profex	0029, 0043, 0418, 0419, 0457, 0479
Profi-Tronic	0422, 0427, 0484
Proline	0086, 0422, 0429, 0452, 0484
Prosonic	0422
Protech	0029, 0071, 0091, 0108, 0131, 0451, 0457, 0460, 0484, 0489
Provision	0287, 0422
Pye	0028, 0031, 0100, 0252, 0287, 0422, 0484
Pymi	0419, 0457
Quasar	0430
Quelle	0030, 0041, 0047, 0081, 0118, 0120, 0124, 0126, 0410, 0416, 0418, 0421, 0422, 0426, 0430, 0451, 0456, 0461, 0462, 0463, 0467, 0471, 0484, 0489
Questa	0421, 0468
Radialva	0422, 0423
Radio Shack	0422



V2

Brand	Codes
Radiola	0031, 0287, 0422, 0484
Radiomarelli	0044, 0422, 0426, 0450
RADIONETTE	0461, 0463
Radiotone	0108, 0419, 0422, 0455, 0484
Rank	0462, 0468
RBM	0041, 0462
RCA	0472
Recor	0422
Rediffusion	0016
Redstar	0422
Reflex	0422
Revox	0422, 0484
Rex	0057, 0069, 0071, 0412, 0426, 0451
RFT	0044, 0110, 0136, 0429, 0450, 0455
R-Line	0422, 0484
Roadstar	0029, 0060, 0071, 0108, 0158, 0413, 0418, 0419, 0423, 0451, 0457, 0458
Robotron	0410, 0450
Royal	0418
RTF	0410, 0450
Saba	0002, 0015, 0018, 0019, 0044, 0075, 0090, 0093, 0253, 0355, 0410, 0450, 0476, 0480, 0481, 0486
Sagem	0113, 0425
Saisho	0016, 0029, 0033, 0052, 0062, 0070, 0071, 0096, 0413, 0419, 0451, 0457, 0469, 0471
Salora	0016, 0114, 0410, 0472, 0482, 0499
Sambers	0043, 0121, 0131, 0137, 0411, 0415, 0416, 0427, 0430, 0460, 0479
Samsung	0170, 0228, 0229, 0245, 0172, 0273, 0170, 0007, 0029, 0045, 0071, 0078, 0099, 0121, 0128, 0140, 0159, 0160, 0170, 0185, 0208, 0212, 0254, 0287, 0356, 0357, 0358, 0359, 0360, 0409, 0418, 0419, 0422, 0429, 0451, 0452, 0457, 0471, 0484, 0489, 0494, 0499
Sansui	0422, 0484



V2

Brand	Codes
Sanyo	0027, 0037, 0042, 0047, 0050, 0059, 0092, 0142, 0206, 0255, 0361, 0409, 0410, 0418, 0419, 0421, 0429, 0439, 0452, 0454, 0461, 0463, 0468, 0470, 0471, 0472, 0477, 0479
SBR	0031, 0032, 0035, 0287, 0422, 0478
Schaub Lorenz	0413, 0418
Schneider	0012, 0016, 0017, 0032, 0039, 0060, 0083, 0095, 0100, 0103, 0132, 0256, 0287, 0362, 0363, 0364, 0365, 0413, 0418, 0422, 0423, 0426, 0430, 0458, 0484
SEG	0043, 0071, 0136, 0157, 0249, 0419, 0421, 0422, 0426, 0451, 0460, 0468, 0479
SEI	0030, 0044, 0052, 0080, 0131, 0422, 0427
SEI-Sinudyne	0410, 0411, 0450, 0460, 0467, 0488
Seleco	0057, 0069, 0412, 0430, 0468
Sencora	0419, 0457
Sentra	0034, 0419, 0420, 0423
Serino	0113, 0425
Sharp	0134, 0267, 0407, 0436, 0134, 0179, 0230, 0231, 0246, 0303, 0304, 0305, 0306, 0005, 0016, 0046, 0179, 0198, 0207, 0214, 0257, 0366, 0367, 0421, 0453, 0468, 0470
Shiwan	0413
Shorai	0080, 0467
Siarem	0044, 0131, 0410, 0411, 0422, 0427, 0450, 0460
Siemens	0050, 0054, 0056, 0124, 0126, 0430, 0456, 0470
Sierra	0287, 0422, 0484
Silva	0418
Silver	0413, 0421, 0468
Singer	0044, 0410, 0411, 0417, 0418, 0426, 0427, 0450, 0460
Sinudyne	0016, 0030, 0044, 0052, 0062, 0131, 0136, 0410, 0411, 0413, 0422, 0427, 0450, 0460, 0467, 0469, 0488
Solavox	0429
Sonitron	0059, 0454, 0472
Sonoko	0029, 0074, 0413, 0418, 0419, 0422, 0451, 0457, 0484
Sonolor	0059, 0454
Sontec	0422, 0484



V2

Brand	Codes
Sony	0000, 0188, 0153, 0432, 0434, 0163, 0000, 0169, 0000, 0003, 0016, 0030, 0118, 0183, 0186, 0190, 0191, 0192, 0193, 0213, 0216, 0258, 0369, 0370, 0421, 0427, 0452, 0457, 0468, 0470, 0471, 0489
Sound & Vision	0423, 0427, 0458, 0460
Soundmaster	0413, 0418
Soundwave	0108, 0422, 0484
Stag	0413
Standard	0029, 0060, 0413, 0418, 0419, 0422, 0423, 0457, 0458, 0484, 0489
Starlite	0418, 0419, 0422
STARLUX	0418
Stenway	0074, 0423
Stern	0057, 0069, 0412
Strato	0419, 0422
Sunkai	0062, 0079, 0080, 0086, 0097, 0113, 0423, 0457, 0467
Sunstar	0419, 0422
Sunwood	0419, 0422, 0457, 0484
SuperTech	0287, 0418, 0419, 0422
Supra	0418, 0419, 0457
Susumu	0060, 0090, 0458
Sutron	0419, 0457
SYC LINE	0418
Sydney	0489
Tandberg	0081, 0414, 0428, 0467
Tandy	0005, 0042, 0060, 0417, 0423, 0426, 0429, 0452, 0458, 0489
Tashiko	0035, 0421, 0468, 0478, 0489
Tatung	0042, 0065, 0066, 0409, 0422, 0429, 0452, 0466, 0484, 0489
TCM	0004, 0100, 0451, 0457
Teac	0113, 0120, 0422
Tec	0090, 0418, 0419, 0426, 0428, 0457, 0489



V2

proximus

Brand	Codes
TECHNICA	0413
Technics	0004, 0067, 0130
TechniSat	0136
TEDELEX	0418
TEKNANT	0418
Tele+1	0016
Teleavia	0089, 0476, 0480
Telecor	0422, 0423
Telefunken	0013, 0016, 0018, 0090, 0150, 0259, 0371, 0372, 0422, 0475, 0476, 0483, 0484, 0485, 0490, 0491
Telegazi	0422, 0423
Telemeister	0422
TELEOPTA	0418
Telesonic	0422
Telestar	0422
Teletech	0029, 0157, 0419, 0422, 0426, 0428, 0457
Teleton	0057, 0421, 0489
Televideon	0415, 0430
Tensai	0047, 0060, 0080, 0084, 0411, 0413, 0418, 0419, 0422, 0423, 0426, 0457, 0458, 0463, 0467, 0484
Tesmet	0484
Tevion	0004, 0100, 0451, 0457
Textet	0060, 0419, 0489
Thomson	0002, 0015, 0018, 0019, 0063, 0075, 0089, 0090, 0143, 0148, 0149, 0162, 0199, 0211, 0219, 0233, 0260, 0373, 0374, 0375, 0376, 0377, 0378, 0422, 0430, 0447, 0476, 0480, 0481, 0483, 0484, 0485, 0486, 0268, 0145, 0178
Thorn	0016, 0034, 0042, 0047, 0053, 0055, 0073, 0090, 0118, 0120, 0124, 0125, 0157, 0287, 0409, 0422, 0430, 0452, 0463, 0475, 0492
TOBO	0418
Tokai	0418, 0422, 0428, 0429, 0452, 0484



V2

Brand	Codes
Tokyo	0420
Tomashi	0074
Toshiba	0400, 0401, 0435, 0438, 0441, 0448, 0272, 0014, 0166, 0009, 0014, 0034, 0041, 0064, 0119, 0125, 0155, 0161, 0187, 0200, 0217, 0224, 0261, 0379, 0380, 0381, 0382, 0383, 0384, 0385, 0386, 0387, 0388, 0389, 0390, 0391, 0392, 0393, 0394, 0395, 0396, 0397, 0398, 0420, 0421, 0427, 0462, 0468, 0493
Towada	0427
Trans Continens	0422
TREVI	0413, 0418
Trident	0489
Tristar	0423
Triumph	0052, 0064, 0287, 0422, 0493
Uher	0057, 0083, 0108, 0410, 0412, 0422, 0430, 0479, 0484
Ultra	0055
Ultravox	0131, 0410, 0422, 0426, 0427, 0450, 0460
Unic Line	0422
United	0157
Universum	0047, 0048, 0071, 0099, 0108, 0109, 0117, 0120, 0124, 0418, 0421, 0422, 0424, 0426, 0428, 0430, 0440, 0451, 0461, 0463, 0484, 0494
Univox	0422, 0428
URANIA	0418, 0430
VANGUARD	0418
Vestel	0422, 0484, 0494
Vexa	0413, 0418, 0419, 0422, 0457
Victor	0004, 0468, 0484
VIDEOLOGIC	0413
Videologique	0423, 0458
VideoSystem	0422, 0484
VIDION	0418



V2

proximus

Brand	Codes
Viewsonic	0189, 0264
VISA	0015
Vision	0422, 0484
Vortec	0422, 0484
Voxson	0044, 0108, 0410, 0416, 0422, 0430, 0450, 0479, 0484
Waltham	0108, 0422, 0489
Watson	0012, 0422, 0423, 0484
Watt Radio	0131, 0137, 0411, 0427, 0460
Wega	0044, 0421, 0422, 0450, 0468
Wegavox	0418, 0419
Weltblick	0422, 0484
White Westinghouse	0422, 0428, 0460, 0479
Windstar	0074
WINSTON	0413, 0418
WINTERNITZ	0418
Xrypton	0422
Yamaha	0442, 0449
Yamishi	0074, 0113, 0422, 0423
Yokan	0422
Yoko	0071, 0418, 0419, 0422, 0423, 0451, 0457, 0458, 0484, 0489
Yorx	0413, 0418, 0423, 0458
Zanussi	0057