



V1

Brand	Codes
Admiral	0044, 0410, 0418
Aiko	0413, 0419, 0420, 0422, 0429
Aiwa	0020, 0161, 0234, 0161
Akai	0059, 0409, 0413, 0418, 0419, 0420, 0422, 0423, 0424, 0429
Akura	0060, 0071, 0419, 0422, 0423
Alba	0021, 0029, 0060, 0062, 0100, 0104, 0235, 0280, 0281, 0419, 0421, 0422, 0423, 0426
Amplivision	0105
Amstrad	0029, 0052, 0096, 0100, 0107, 0139, 0418, 0419, 0422, 0423
Anglo	0419
Anitech	0029, 0040, 0043, 0418, 0419, 0422
Ansonic	0419, 0422, 0426, 0427
Aristona	0422
ASA	0044, 0047, 0081, 0410
Asberg	0043, 0422
Astra	0418
Atlantic	0057, 0412, 0422
Atori	0419
Audiosonic	0413, 0418, 0422, 0423, 0428
AudioTon	0418
Ausind	0415, 0430
Autovox	0043, 0044, 0057, 0063, 0081, 0426, 0430
Awa	0409, 0418
Baird	0409, 0429
Bang & Olufsen	0044
Barco	0015, 0016
Baur	0030, 0118, 0120, 0124, 0126, 0422
Beko	0012, 0099, 0116, 0202, 0236, 0282, 0283, 0422
Beon	0422



V1

Brand	Codes
Best	0428
Blaupunkt	0054, 0056, 0067, 0085, 0124, 0126
BPL	0074, 0422
Brandt	0025, 0089, 0090, 0203, 0237, 0284
Brionvega	0044, 0410, 0412, 0422
Bruns	0044, 0136, 0410, 0411
BSR	0080
BTC	0060, 0423
Bush	0026, 0029, 0060, 0062, 0074, 0080, 0097, 0100, 0102, 0122, 0135, 0180, 0238, 0262, 0285, 0286, 0287, 0288, 0289, 0290, 0291, 0419, 0421, 0422, 0423, 0180, 0262
Carrefour	0421
Cascade	0029, 0419, 0422
Cathay	0422
Centurion	0422
Century	0044, 0410, 0426
CGE	0016, 0043, 0418, 0426
Cimline	0029, 0062, 0419, 0423
Clatronic	0043, 0099, 0413, 0419, 0422, 0423, 0426, 0427
Condor	0099, 0418, 0419, 0422, 0426, 0427
Contec	0029, 0418, 0419, 0421
Continental Edison	0089
Cosmel	0418, 0419, 0428
Crosley	0043, 0044, 0410, 0426
Crown	0029, 0043, 0099, 0101, 0108, 0413, 0418, 0419, 0422
CS Electronics	0413, 0423, 0426
CTC	0426
Daewoo	0022, 0029, 0102, 0157, 0194, 0239, 0413, 0418, 0419, 0422, 0423
Dainichi	0060, 0423



V1

Brand	Codes
Dansai	0420, 0422
Daytron	0029, 0419
Decca	0042, 0065, 0066, 0135, 0409, 0422, 0429
Desmet	0422
Diamond	0418
Dixi	0029, 0136, 0419, 0422
Dual	0095, 0122, 0418, 0422
Dumont	0041, 0044, 0047, 0081, 0410, 0411, 0427
Dynatron	0422
Elbe	0069, 0412, 0422, 0423, 0425
Elcit	0426, 0427
Elin	0047, 0411, 0412, 0418, 0419, 0422
Elite	0060, 0422, 0423
Elman	0411, 0427
Elta	0029, 0418, 0419
Emerson	0044, 0410, 0415, 0422, 0426
Erres	0031, 0422
Europhon	0137, 0411, 0422, 0426, 0427
Expert	0057, 0412
Fenner	0418, 0419
Ferguson	0019, 0053, 0075, 0090, 0240
Fidelity	0016, 0422
Finlandia	0059
Finlux	0041, 0042, 0044, 0047, 0048, 0081, 0411, 0415, 0416, 0422, 0427, 0429, 0430
Firstline	0029, 0062, 0080, 0086, 0123, 0419, 0422, 0426, 0427, 0429
Fisher	0047, 0059, 0083, 0099, 0127, 0410, 0421, 0429
Formenti	0044, 0412, 0415
Frontech	0071, 0418, 0419, 0426



V1

Brand	Codes
Fujitsu	0042, 0057, 0413, 0427, 0429
Funai	0071, 0080, 0083, 0418
Galaxi	0422, 0427
Galaxis	0422, 0427
GBC	0409, 0413, 0418, 0419, 0423
GEC	0016, 0035, 0042, 0409, 0422, 0429
Geloso	0029, 0413, 0418, 0419, 0426
Genexxa	0060, 0422, 0423
GoldHand	0418
Goldline	0422
GoldStar	0078, 0418, 0419, 0422, 0426
Goodmans	0016, 0042, 0062, 0084, 0100, 0102, 0157, 0418, 0419, 0420, 0421, 0422, 0424, 0429
Gorenje	0099
GPM	0060, 0413, 0418, 0423
Granada	0016, 0037, 0042, 0059, 0092, 0421, 0422, 0429, 0430
Grandin	0074, 0417
Grundig	0001, 0016, 0041, 0054, 0056, 0063, 0124, 0126, 0159, 0241, 0413, 0422, 0430
Hanseatic	0110, 0128, 0419, 0422
Hantarex	0418, 0419, 0422
Harwood	0419, 0422
Hauppauge	0275
HCM	0029, 0074, 0107, 0418, 0419, 0422, 0423
Hinari	0016, 0029, 0060, 0062, 0106, 0418, 0419, 0421, 0422, 0423
Hisawa	0074, 0105, 0113, 0423
Hitachi	0222, 0269, 0402, 0403, 0404, 0165, 0276, 0168, 0167, 0279, 0011, 0016, 0035, 0036, 0048, 0061, 0112, 0129, 0144, 0205, 0242, 0292, 0293, 0294, 0295, 0421, 0422, 0429
Hornyphone	0422
Hoshai	0413, 0423



V1

Brand	Codes
Huanyu	0102
Hyper	0413, 0418, 0419, 0426
ICE	0071, 0100, 0413, 0419, 0422, 0423
Imperial	0016, 0043, 0099, 0108, 0422, 0426
Indesit	0063
Ingersol	0419
Inno Hit	0042, 0121, 0409, 0413, 0418, 0419, 0422, 0423, 0426, 0429
Interbuy	0040, 0419, 0426
Interfunk	0120, 0410, 0422
Intervision	0040, 0071, 0131, 0411, 0422, 0423, 0426, 0427
Irradio	0413, 0416, 0418, 0419, 0422, 0423, 0426, 0430
ITS	0100, 0422, 0423
ITT	0424
ITV	0422, 0426
JVC	0010, 0016, 0038, 0053, 0055, 0093, 0094, 0100, 0204, 0223, 0296, 0297, 0298, 0299, 0300, 0421, 0423, 0243, 0177
Kaisui	0029, 0060, 0074, 0413, 0418, 0419, 0422, 0423
Kapsch	0047, 0057, 0412
Karcher	0418, 0422, 0425, 0427
Kathrein	0128
Kendo	0062, 0418, 0422, 0425, 0426, 0427
Kennedy	0412
Kneissel	0069, 0111, 0422
Kolster	0422
Konka	0423
Korting	0044, 0076
Kosmos	0422
Lenco	0047, 0419



V1

Brand	Codes
Lenoir	0418, 0419
LG	0265, 0405, 0164, 0218, 0244, 0301, 0302, 0175, 0278, 0009, 0247, 0307, 0308, 0309, 0310, 0311, 0312, 0313, 0419, 0422, 0426
Liesenkotter	0422
Lloyds	0419
Loewe	0006, 0044, 0077, 0120, 0201, 0248, 0314, 0422
Loewe Opta	0410, 0414
Luma	0057, 0412, 0419, 0422
Lumatron	0422
Luxor	0016, 0063, 0410, 0424
M Electronic	0029, 0039, 0040, 0047, 0048, 0075, 0102, 0115, 0419, 0422, 0424, 0426
Magnadyne	0044, 0131, 0410, 0411, 0418, 0426, 0427
Magnafon	0043, 0131, 0137, 0411, 0415, 0427, 0430
Marantz	0128, 0422
Matsui	0016, 0029, 0034, 0042, 0052, 0059, 0062, 0070, 0080, 0096, 0097, 0100, 0135, 0418, 0419, 0420, 0421, 0422, 0429
Medion	0422
Memorex	0029, 0419
Metz	0044, 0098, 0124, 0410
MGA	0413
Minerva	0041, 0063, 0124, 0126, 0430
Minoka	0107, 0422
Mitsubishi	0016, 0024, 0033, 0044, 0049, 0063, 0096, 0120, 0124, 0249, 0315, 0410, 0418, 0421, 0422, 0263, 0399
Mivar	0078, 0121
MTC	0120
Multitech	0029, 0043, 0131, 0413, 0418, 0419, 0422, 0426, 0427
Murphy	0047, 0429
National	0063



V1

Brand	Codes
NEC	0051, 0418, 0421
Neckermann	0044, 0054, 0118, 0126, 0128, 0410, 0422, 0426
NEI	0091, 0422, 0428
Nesco	0426
Network	0428
Neufunk	0419, 0422
Nikkai	0034, 0042, 0060, 0071, 0091, 0419, 0420, 0421, 0422, 0423, 0428, 0429
NOBLEX	0418
Nokia	0115, 0424
Nordmende	0015
Novatronic	0422
Oceanic	0417, 0430
Okano	0422, 0429
Onwa	0139, 0423
Orbit	0422
Orion	0008, 0016, 0062, 0080, 0086, 0097, 0154, 0419, 0422, 0427
Osaki	0042, 0060, 0071, 0107, 0422, 0423, 0429
Oso	0060, 0423
Osume	0042, 0050, 0421, 0423, 0429
Otake	0084
Otto Versand	0030, 0054, 0062, 0118, 0120, 0124, 0126, 0128, 0418, 0421, 0422, 0426
Pael	0416, 0430
Palladium	0099, 0108, 0422, 0426
Panasonic	0225, 0266, 0270, 0406, 0174, 0226, 0274, 0171, 0184, 0004, 0016, 0058, 0063, 0067, 0072, 0098, 0130, 0152, 0209, 0215, 0250, 0316, 0317, 0318, 0319, 0320, 0321, 0422, 0058
Panavision	0422
Pathe Cinema	0417
Pathe Marconi	0089



V1

Brand	Codes
Perdio	0422, 0429
Philco	0016, 0043, 0044, 0410, 0422, 0426
Philips	0220, 0271, 0407, 0408, 0182, 0176, 0221, 0016, 0031, 0032, 0035, 0044, 0088, 0102, 0126, 0128, 0173, 0195, 0196, 0197, 0210, 0251, 0322, 0323, 0324, 0325, 0326, 0327, 0328, 0329, 0330, 0331, 0332, 0333, 0334, 0335, 0336, 0337, 0338, 0339, 0340, 0341, 0342, 0343, 0344, 0345, 0346, 0347, 0348, 0349, 0350
Phoenix	0044, 0422, 0429
Phonola	0016, 0031, 0032, 0044, 0410, 0422
Pioneer	0023, 0232, 0277, 0181, 0227, 0075, 0146, 0422
Prandoni-Prince	0416, 0426
Prima	0418, 0419
Prinz	0429
Profex	0029, 0043, 0418, 0419
Profi-Tronic	0422, 0427
Proline	0086, 0422, 0429
Protech	0029, 0071, 0091, 0108, 0131
Provision	0422
Pye	0028, 0031, 0252, 0422
Quasar	0430
Quelle	0030, 0041, 0047, 0081, 0118, 0120, 0124, 0126, 0410, 0416, 0418, 0421, 0422, 0426, 0430
Radiola	0031, 0422
Radiomarelli	0044, 0422, 0426
RadioShack	0422
Radiotone	0419, 0422
Recor	0422
Rediffusion	0016
Revox	0422
Rex	0057, 0069, 0071, 0412, 0426
RFT	0044, 0110, 0136, 0429



V1

Brand	Codes
Roadstar	0029, 0060, 0071, 0108, 0413, 0418, 0419, 0423
Robotron	0410
Saba	0015, 0018, 0044, 0075, 0090, 0093, 0253, 0355, 0410
Sagem	0425
Saisho	0016, 0029, 0033, 0052, 0062, 0070, 0071, 0096, 0413, 0419
Salora	0016, 0114, 0410
Sambers	0043, 0121, 0131, 0137, 0411, 0415, 0416, 0427, 0430
Samsung	0170, 0228, 0229, 0245, 0172, 0273, 0007, 0029, 0045, 0071, 0078, 0099, 0121, 0128, 0140, 0160, 0185, 0208, 0212, 0254, 0356, 0357, 0358, 0359, 0360, 0409, 0418, 0419, 0422, 0429, 0185
Sansui	0422
Sanyo	0027, 0037, 0042, 0047, 0050, 0059, 0092, 0142, 0206, 0255, 0361, 0409, 0410, 0418, 0419, 0421, 0429
SBR	0031, 0032, 0035, 0422
Schneider	0016, 0017, 0032, 0039, 0060, 0083, 0095, 0100, 0103, 0256, 0362, 0363, 0364, 0365, 0413, 0418, 0422, 0423, 0426, 0430
SEG	0043, 0071, 0136, 0419, 0421, 0422, 0426
SEI	0030, 0044, 0052, 0080, 0131, 0422, 0427
SEI-Sinudyne	0410, 0411
Seleco	0057, 0069, 0412, 0430
Sentra	0034, 0419, 0420, 0423
Sharp	0267, 0179, 0230, 0231, 0246, 0303, 0304, 0305, 0306, 0005, 0016, 0046, 0198, 0207, 0214, 0257, 0366, 0367, 0421
Shorai	0080
Siarem	0044, 0131, 0410, 0411, 0422, 0427
Siemens	0050, 0054, 0056, 0124, 0126, 0430
Sierra	0422
Singer	0044, 0410, 0411, 0417, 0418, 0426, 0427
Sinudyne	0016, 0030, 0044, 0052, 0062, 0131, 0136, 0410, 0411, 0413, 0422, 0427
Solavox	0429



V1

Brand	Codes
Sonitron	0059
Sonoko	0029, 0413, 0418, 0419, 0422
Sonolor	0059
Sontec	0422
Sony	0163, 0000, 0003, 0016, 0030, 0118, 0183, 0186, 0190, 0191, 0192, 0193, 0213, 0216, 0258, 0369, 0370, 0421, 0427, 0188, 0169, 0186
Star Lite	0419, 0422
Starlite	0418
Stern	0057, 0069, 0412
Sunkai	0062, 0080, 0086, 0097, 0423
Sunstar	0419, 0422
SuperTech	0418, 0419, 0422
Supra	0418, 0419
Susumu	0060
Tandberg	0081, 0414, 0428
Tandy	0042, 0060, 0417, 0423, 0426, 0429
Tashiko	0035, 0421
Tatung	0042, 0065, 0066, 0409, 0422, 0429
Teac	0422
Tec	0418, 0419, 0426, 0428
Technics	0067, 0130
TechniSat	0136
Teleavia	0089
Telecor	0422, 0423
Telefunken	0013, 0016, 0090, 0150, 0259, 0371, 0372, 0422
Telegazi	0422, 0423
Telemeister	0422
Telesonic	0422



V1

Brand	Codes
Telestar	0422
Teletch	0029, 0419, 0422, 0426, 0428
Teleton	0057, 0421
Televideon	0415, 0430
Tensai	0047, 0060, 0080, 0084, 0411, 0413, 0418, 0419, 0422, 0423, 0426
Texet	0060, 0419
Thomson	0268, 0178, 0002, 0015, 0063, 0075, 0089, 0143, 0148, 0149, 0162, 0199, 0211, 0219, 0233, 0260, 0373, 0374, 0375, 0376, 0377, 0378, 0422, 0430, 0162
Thorn	0016, 0034, 0042, 0047, 0053, 0055, 0073, 0118, 0120, 0124, 0125, 0157, 0409, 0422, 0430
Toshiba	0400, 0401, 0272, 0166, 0014, 0034, 0041, 0064, 0119, 0125, 0155, 0187, 0200, 0217, 0224, 0261, 0379, 0380, 0381, 0382, 0383, 0384, 0385, 0386, 0387, 0388, 0389, 0390, 0391, 0392, 0393, 0394, 0395, 0396, 0397, 0398, 0420, 0421, 0427, 0187, 0398
Towada	0427
Tristar	0423
Triumph	0052, 0064, 0422
Uher	0057, 0083, 0410, 0412, 0422, 0430
Ultra	0055
Ultravox	0131, 0410, 0422, 0426, 0427
Universum	0047, 0048, 0071, 0099, 0109, 0117, 0124, 0418, 0421, 0422, 0424, 0426, 0428, 0430
Univox	0422, 0428
Vestel	0422
VideoSystem	0422
Viewsonic	0189, 0264
Vision	0422
Vortec	0422
Voxson	0044, 0410, 0416, 0422, 0430
Waltham	0422
Watson	0422, 0423
Watt Radio	0131, 0137, 0411, 0427



V1

Brand	Codes
Wega	0044, 0421, 0422
Weltblick	0422
White Westinghouse	0422, 0428
Yoko	0071, 0418, 0419, 0422, 0423
Yorx	0413, 0418, 0423
Zanussi	0057