

User manual

Belgacom Twist 212



belgacom

TECHNICAL DETAILS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time** 100 hours standby**
Number of Handsets	Up to 5
Intercom Mode	Yes
Three-Way Conference (1 outside correspondent + 2 internal correspondents)	Yes
Electrical Connection/Base Mains Adaptor	<p>Base main adaptor: Model No.: S004LV0600030 Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/300 mA</p> <p>Only use the adaptor supplied with the telephone Single-phase AC, excluding IT installations defined by the EN60950 standard. Caution: The network voltage is classified as a hazard by the criteria of this standard.</p>
Telephone Connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue Belgacom telephone line as defined by the EN60950 standard.
Batteries	<p>AAA – 1.2 V – 400 mA</p> <p>Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.</p>
Operating Temperature	From 5°C to 40°C

* Values may vary according to environment.

** Depending on initial battery charge.

TABLE OF CONTENTS

1	IMPORTANT SAFETY INSTRUCTIONS	5
1.1	Package Contents	6
1.2	Precautions	6
2	INSTALLING YOUR PHONE	7
2.1	Installing and Charging the Batteries	7
2.2	Connecting the Base Station	8
2.3	Set the Handset Language	8
3	GETTING TO KNOW YOUR PHONE	9
3.1	Twist 212 Handset Overview	9
3.2	Base Station Overview	11
3.3	Display Icons and Symbols	12
4	USING YOUR PHONE	13
4.1	Make a Call	13
4.2	Answer a Call	13
4.3	End a Call	14
4.4	Adjust Earpiece and Handsfree Volume	14
4.5	Mute a Call	14
4.6	Set the Silent Mode	14
4.7	Turn on the Keypad Lock	14
4.8	Redial the Last Number	14
4.9	Find the Handset	15
4.10	Make an Internal Call	15
5	PRIVATE PHONEBOOK	17
5.1	Add a New Phonebook Entry	17
5.2	Search a Phonebook Entry	17
5.3	View a Phonebook Entry	17
5.4	Edit a Phonebook Entry	18
5.5	Delete a Phonebook Entry	18
5.6	Delete the Entire Private Phonebook	18
5.7	Check the Phonebook Usage	18
6	CALLER DISPLAY	19
6.1	View the Call List	19
6.2	Store a Call List Number into the Phonebook	19
6.3	Delete an Entry in the Call List	19
6.4	Delete the Entire List of the Call List	20
6.5	View the Details of the Call List Entry	20
6.6	Set the Category of the Call List	20

7	PHONEMAIL	21
8	PHONE SETTINGS	21
8.1	Date and Time Settings.....	21
8.2	Alarm Settings.....	22
8.3	Handset Settings.....	23
8.4	Base Settings	24
8.5	Registration.....	26
8.6	Reset Your Phone.....	26
9	TROUBLESHOOTING.....	27
10	GUARANTEE TERMS.....	28
11	SAFETY	30
12	ENVIRONMENT.....	31

1 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1) Read and understand all the instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4) Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- 5) Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
- 6) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 7) NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area.
- 8) Do not use the telephone to report a gas leak in the vicinity of the leak.
- 9) Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
- 10) The use of other battery types or non-rechargeable batteries can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
- 11) Do not use third party chargers. The batteries may be damaged.
- 12) Please note the correct polarity while inserting the batteries.
- 13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

1.1 Package Contents

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 rechargeable batteries
- 1 User's guide
- 1 Telephone connector

Please read this guide carefully to get to know the main features of your Twist 212, and read the safety instructions before using it. We also invite you to share the safety guidelines contained in this guide with all family members, and especially children.

1.2 Precautions

As with all radio communications, the signal quality will depend on the location and environment of the base and handset.

Your Twist 212 must be kept away from sources of excessive heat (radiators, direct sunlight, etc.) and protected against vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols.

To reduce the risk of interference and optimise reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc. To clean your set, use an antistatic cloth lightly moistened with water.

2 INSTALLING YOUR PHONE

2.1 Installing and Charging the Batteries


1. Slide down to open the battery compartment cover.
2. Place the 2 supplied AAA batteries as indicated. Pay extra attention to direction of polarity.
3. Slide the battery compartment cover back.
4. Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

Note:

Only use rechargeable batteries with exactly the same specifications as those supplied with the product.


Using non-rechargeable or non-conforming batteries can damage the product and could pose a health hazard (see Chapter "Technical details").

Batteries can split or leak if incorrectly inserted, opened or exposed to heat. Never dispose of batteries in a fire: they could explode.

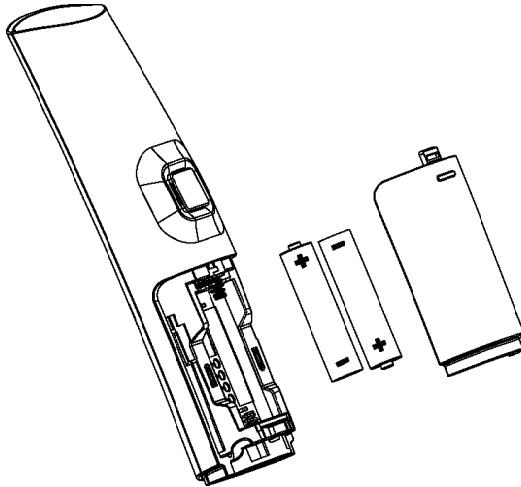





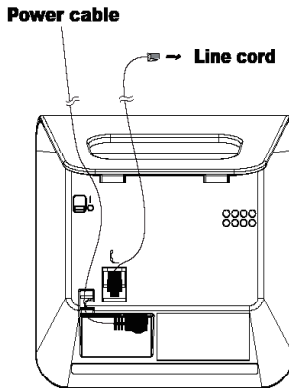


2.2 Connecting the Base Station

1. Plug one end of the telephone line cord into the telephone jack on base bottom.
2. Plug the small end of power adapter into a power jack on base bottom.
3. Connect the power supply plug to the base jack horizontally, and route the power supply cord through the slot.
4. Plug the large end of power adapter into a wall power outlet.
5. Plug the other end of the telephone line cord in to the telephone jack or micro-filter.
6. Always use the cables provided in the box.





2.3 Set the Handset Language


1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **LANGUAGE**.
3. Press  and  to select the desired language.
4. Press  to confirm.




 


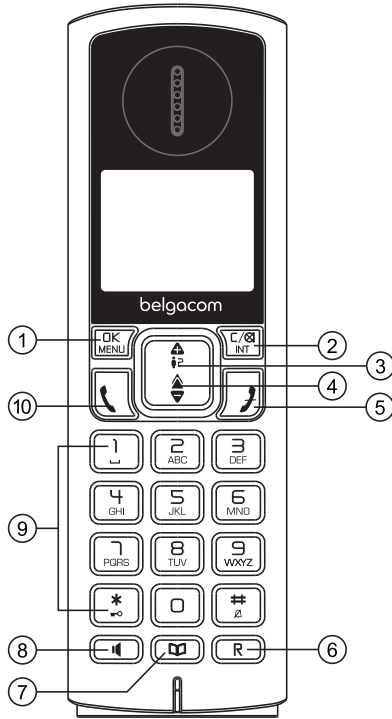


3 GETTING TO KNOW YOUR PHONE

3.1 Twist 212 Handset Overview



- 1.  In idle mode: Press to access the main menu
In sub-menu mode: Press to confirm the selection
During a call: Press to access Intercom/Phonebook/Redial list/Call list

- 2. 
 - In main menu mode: Press to go back to idle screen
 - In sub-menu mode: Press to go back to previous level
 - In sub-menu mode: Press and hold to go back to idle screen
 - In editing/predialing mode: Press to clear a character/digit
 - In editing/predialing mode: Press and hold to delete all the characters/digits
 - During a call: Press to mute/unmute the microphone
 - In idle mode: Press to intercom another handset
 - In ringing: Press to suppress handset ringer


3.  In idle mode: Press to access the call list
 In menu mode: Press to scroll up the menu items
 In Phonebook list/Redial list/Call List: Press to scroll up the list
 During a call: Press to increase the volume
 In ringing: Press to increase the ringer volume
4.  In idle mode: Press to access the redial list
 In menu mode: Press to scroll down the menu items
 In Phonebook list/Redial list/Call List: Press to scroll down the list
 During a call: Press to decrease the volume
 In ringing: Press to decrease the ringer volume
5.  During a call: Press to end a call and go back to idle screen
 In menu/editing mode: Press to go back to previous menu
 In menu/editing mode: Press and hold to go back to idle screen
 In idle mode: Press and hold to power off the handset
 In idle mode: Press and hold to power on/off the handset
6.  In idle/predialing mode: Press to insert a flash
 During a call: Press to dial a flash
7.  In idle mode: Press to access the phonebook list
8.  During a call: Press to turn on/off the speakerphone.
 In Idle mode/predialing mode/Redial list/Call list/Phonebook entry: Press to make a call with speakerphone
 During ringing: Press to answer a call with speakerphone
9. **ALPHANUMERIC KEYPAD**, , 
 * key in idle mode: Press and hold to enable or disable the keypad lock
 * key during a call (in Pulse mode): Press to switch to tone mode
 # key in idle mode: Press and hold to turn on/off the ringer
 # key in call list mode: Press to review caller's number if applicable.
 0 key in predialing/number editing mode: Press and hold to insert a pause
 1, 2, 3 key in idle/off hook mode: Press and hold to dial the stored direct memory number
 (Key 1 : direct access to Belgacom voicemail server* (PhoneMail))**
10.  In idle/predialing mode: Press to make a call
 In Redial list/Call list/Phonebook entry: Press to make a call to the selected entry in the list

During ringing: Press to answer a call


*Subject to technical availability and to subscription from Belgacom.


**See Chapter 8.3.8 on how to program the memory key.

3.2 Base Station Overview

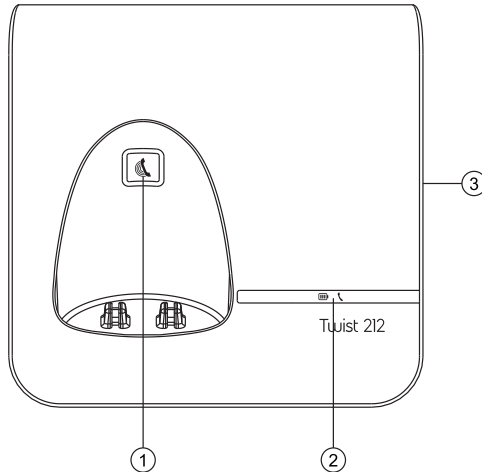

1. 

Press  on the base station to page your handset. It will ring for approximately 60 seconds.

Press and hold  on the base station for about five seconds, the base station is entered into registration mode and allows handset registration.

2.  

Steadily on while the handset is charging or in use. (Applicable only when the LED I/O switch is slid to "I")

Flash when receiving an incoming call. (Applicable only when the LED I/O switch is slid to "I")


3. **LED I/O SWITCH (Bottom of the Base)**









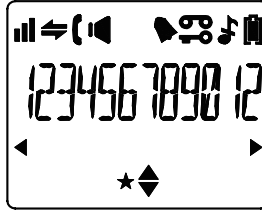





Slide the switch to "O" position to turn off the base LED

Slide the switch to "I" position to turn on the base LED when the handset is charging on the base or in use

3.3 Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.






-  Steadily on when the handset is in range of the base.
Flash when out of range of the base or not registered to the base.
-  Steadily on when an intercom is in progress.
Flash when there is an incoming internal call.
-  Indicates a call is in progress.
-  Indicate that handsfree is being used.
-  Steadily on when an alarm is set.
Flash when the alarm time set before reaches.
-  Indicate that the keypad is locked.
-  Indicate when there are new received Voice Message on Phonemail.
Disappear when all the voice messages have been read.
-  Indicate that the ringer is switched off.
-  Indicate when the battery is fully charged.
Whole icon flashes when the battery performs initial charging.
Internal block icon flashes when the battery is in final charging stage.
-  Indicate when the battery needs charging.
Flash when low battery power level is detected.
-  Indicate when more characters are existed before the text currently displayed.
-  Indicate when more characters are existed after the text currently displayed.
-  Indicate when new call is received.
Turn off when new call has been read.
-  Scroll up/down the menu items/Phonebook list/Redial list/Call List.

4 USING YOUR PHONE

4.1 Make a Call




4.1.1 Preparatory Dialing

Enter the phone number and press  or  to dial the number. Press  to clear the entry.







4.1.2 Direct Dialing

Press  or  to take the line and enter the phone number.







4.1.3 Dial from Direct Memory Keys

In idle or off hook mode, press and hold // to dial the direct memory number. You have to store number to the related key first. See section 8.3.8 for reference.

4.1.4 Call from the Phonebook

Press  to access the phonebook and press / to select the desired phonebook entry. Press  or  to dial out to the selected phonebook entry. Alternatively, press  to access the phonebook to get the desired phonebook entry.






4.1.5 Call from the Call List

Press  to access the Call List and press / to select the desired Call List entry. Press  or  to dial out to the selected Call List entry. Alternatively, press  to access the Call List from the main menu.

4.1.6 Call Timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has made. It is shown in hours, minutes and seconds format (HH:MM:SS).

4.1.7 Call from the Redial List

Press  to access the redial list and press / to select the desired redial number. Press  or  to dial out to the selected redial number.

4.2 Answer a Call


If the handset is not on the charging cradle:

When the phone rings, press  or  to answer a call.

If the handset is on the base station and if **AUTO ANSWER** is set to ON:

When the phone rings, pick up the handset to answer a call.

4.3 End a Call

During a call connection, press  to end the call.



OR

Put the handset on the base station to end the call.

4.4 Adjust Earpiece and Handsfree Volume

There are 5 levels (**VOLUME 1** to **VOLUME 5**).



During a call:

Press / to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.



4.5 Mute a Call



You can talk to someone nearby without letting the caller hear you during a call.

During a call:



Press  to mute the microphone and "**MUTED**" will display on the LCD. Your caller cannot hear you. Press  again to unmute the microphone.



 
4.6 Set the Silent Mode

In idle mode, press and hold  to turn off the handset ringer. The  icon is displayed on the LCD.

In silent mode, press and hold  to turn on the handset ringer. The  icon will disappear.

4.7 Turn on the Keypad Lock

In idle mode, press and hold  to turn on the keypad lock. The  icon is displayed on the LCD.


In keypad lock mode, if you press any key other than holding the  key, the screen will display "**KEYS LOCKED**" for around 2 seconds, and then "**HOLD ***" displays. You can press and hold  to turn off the keypad lock. The  icon will disappear.





4.8 Redial the Last Number

You can redial up to 10 of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

4.8.1 Redial a Number from the Redial List










1. In idle mode, press  to access the redial list.

Remarks: If redial entry with name, press  to view the number.





2. Press / to browse the redial list.
3. Press  or  to dial to the selected redial number.

Note: If there are no numbers in the redial list, the display shows “**EMPTY**”.






4.8.2 Store a Redial Number into the Phonebook

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press  and / to select **ADD TO PB**.
3. Press  to enter the name.
4. Press  to store the redial number into the phonebook.
5. Press  to select phonebook melody.
6. Press / to browse the melody list. The respective melody will be played when browsing the melody list.
7. Press  to confirm.







4.8.3 Delete a Redial Number

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press  and / to select **DELETE**.
3. Press  to confirm.

4.8.4 Delete the Entire Redial List

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press  and / to select **DELETE ALL**.
3. Press  to confirm.
4. Press  to confirm again.

4.9 Find the Handset


You can locate the handset by pressing  on the base station. All the handsets registered to the base will produce the paging tone and “**PAGING**” is displayed on the LCD. You can stop the paging by pressing /// on any handset or  on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.



4.10 Make an Internal Call


This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling

handset will return to standby mode.



Note: If only one handset is registered to the base station, press  will display "**NOT POSSIBLE**"

4.10.1 Intercom Another Handset

1. In idle mode, press  and the registered handsets will display except the calling handset.
2. Enter the desired handset number to intercom with.
3. The called handset rings and press  on the called handset to establish the internal call.






Note: If only two handsets are registered to the base station, press  will call another handset immediately.

4.10.2 Call All Handsets

1. In idle mode, press  and the registered handsets will display.
2. Press  to ring to all registered handsets.

4.10.3 Transfer an External Call to another handset


During an external call:

1. Press  and  to select **INTERCOM**.
2. Press  to select the desired handset to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press  on the called handset to establish an internal call.
5. Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred to the called handset.

4.10.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call:

1. Follow Steps 1 to 4 in section 4.10.3.
2. Press and hold  on the calling handset to establish the conference call.

Note: Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

5 PHONEBOOK

Your phone can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.







5.1 Add a New Phonebook Entry

In idle:

1. Press  to access the phonebook.


OR

Press  and  to select **PHONEBOOK** main menu item and then press  to access the phonebook.

2. Press  to select **ADD**.
3. Press  to enter the name.
4. Press  to enter the number.
5. Press  and  to select the desired ringtone for your phonebook entry.
6. Press  to store the phonebook entry.







5.2 Search a Phonebook Entry



In idle:

1. Press  to access the phonebook.
2. Enter the first character of the name by multi-tap.

5.3 View a Phonebook Entry







 


 




In idle:

1. Press  to access the phonebook.
2. Press  to select the desired phonebook entry.
3. Press  and  to select **VIEW**.
4. Press  and  to review the name, number and melody of the selected phonebook entry.

Note: If number is more than 12 digits, press  or  to view the remaining digits.




 
 

 
5.4 Edit a Phonebook Entry

In idle:







1. Press  to access the phonebook.
2. Press / to select the desired phonebook entry.
3. Press  and / to select **EDIT**.
4. Press  and the current contents of the selected phonebook entry displays.
5. Edit the name (press  to delete a character) and press .
6. Edit the number (press  to delete a digit) and press .
7. Press / to select the ringtone and press  to confirm.

5.5 Delete a Phonebook Entry

In idle:






1. Press  to access the phonebook.
2. Press / to select the desired phonebook entry.
3. Press  and / to select **DELETE**.
4. Press  to confirm.

5.6 Delete the Entire Private Phonebook

1. Press  to access the phonebook.
2. Press  and / to select **DELETE ALL**.
3. Press  to confirm.
4. Press  to re-confirm.

5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

1. Press  to access the phonebook.
2. Press  and / to select **PB STATUS**.
3. Press  to confirm.

6 CALLER DISPLAY

This feature is available if you have subscribed the Caller Line Identification service with Belgacom. Your phone can store up to 20 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "**WITHHELD**" will display.

If the caller number is not provided, "**OUT OF AREA**" will display.

In standby, if three unanswered calls are received, "**3 NEW CALLS**" will be displayed.

6.1 View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a ★ at the centre of the bottom line of the display.

1. Press **▲** to access the call list.

OR

Press **OK/MENU** and **▲/▼** to select **CALL LIST**.

2. Press **▲/▼** to select the desired entry.
3. Press **#/2** to view the caller's number if applicable.





6.2 Store a Call List Number into the Phonebook

1. Follow Steps 1 and 2 in Section 6.1.
2. Press **OK/MENU** and **▲/▼** to select **ADD TO PB**.
3. Press **OK/MENU** to enter the name.
4. Press **OK/MENU** and the selected call list number is displayed.
5. Edit the number if necessary.
6. Press **OK/MENU** and **▲/▼** to select the melody.
7. Press **OK/MENU** to confirm.





6.3 Delete an Entry in the Call List

1. Follow Steps 1 and 2 in Section 6.1.
2. Press **OK/MENU** and **▲/▼** to select **DELETE**.
3. Press **OK/MENU** to confirm.

6.4 Delete the Entire List of the Call List






1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and  to select **DELETE ALL**.
3. Press  to confirm.
4. Press  to re-confirm.

6.5 View the Details of the Call List Entry

1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and  to select **DETAILS**.
3. Press  to display the date and time of the selected call list entry.
4. Press  to go back to previous screen.


 
6.6 Set the Category of the Call List

You can choose to store the missed calls only or all incoming calls in call list.

1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and  to select **CATEGORY**.
3. Press  and  to select **MISSED CALLS** or **ALL CALLS**.
4. Press  to confirm.

7 PHONEMAIL

By subscription to Belgacom, you can have your calls diverted to Phonemail when you are absent. For more details, contact Belgacom.

When new messages are received, the icon appears on the screen. The  icon disappears once you have consulted the voicemail messages. If the icon doesn't disappear, press and hold  during call list review will turn off the voicemail icon manually.










8 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.










8.1 Date and Time Settings

You will need to set the correct time and date so that you know when you received call list entries.









8.1.1 Change the Date Format

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **DATE FORMAT**.
4. Press  and  to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
5. Press  to confirm.

8.1.2 Change the Time Format








 
1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **TIME FORMAT**.
4. Press  and  to select your desired time format (**12 HR** or **24 HR**).
5. Press  to confirm.

8.1.3 Set the Time

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **SET TIME**.
4. Press  to enter the time information. The time entered will be in the format you set in Section 8.1.2.
5. Press  to confirm.



Note: If time has been set before, the current time will display, otherwise, "**HH:MM**" will display.

8.1.4 Set the Date








1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **SET DATE**.
4. Press  to enter the date information. The date entered will be in the format you set in Section 8.1.1.
5. Press  to confirm.

Note: If date has been set before, the current date will display, otherwise, "**DD-MM-YY**" will display.

8.2 Alarm Settings





You can use this phone to set an alarm clock. When an alarm is set, the  icon displays on the LCD. When the alarm time is reached, the  icon and "**ALARM ON**" flash on the LCD ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of 7 minutes.

8.2.1 Turn on/off the Alarm

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **ALARM**.
3. Press  and  to select **ON/OFF**.
4. Press  to confirm.









Note: If **ON** is selected, you will be asked to set the alarm time.

8.2.2 Set the Alarm Time (if the Alarm is set to be ON)

1. Follow Steps 1 to 4 in Section 8.2.1.
2. Enter the alarm time.
3. Press  to set the snooze function.
4. Press  and  to select **ON** or **OFF**.
5. Press  to confirm.

8.3 Handset Settings









8.3.1 Set the Ringer Melody for Internal/External Calls

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **RING SETUP**.
3. Press  and  to select **INT RING** or **EXT RING**.
4. Press  and  to select the desired ringer melody from the melody list.

Note: The respective ringer melody will be played while browsing the melody list.

5. Press  to confirm.

8.3.2 Set the Ringer Volume

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **RING SETUP**.
3. Press  and  to select **RING VOLUME**.
4. Press  and  to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).










Note: The respective ringer volume will be played during your selection.

If **VOLUME OFF** is selected,  icon will display.








5. Press  to confirm.

8.3.3 Set Alert Tones







A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **tone SETUP**.
3. Press  and  to select **KEY TONE/BATTERY TONE/OUT OF RANGE**.
4. Press  and  to turn on or off these tones.
5. Press  to confirm.

8.3.4 Set the Handset Language








1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **LANGUAGE**.
3. Press  and  to select the desired language.
4. Press  to confirm.

8.3.5 Rename the Handset

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **RENAME HS**.
3. Press  and enter the name of your handset.
4. Press  to confirm.








8.3.6 Choose the Information to be displayed in idle

You can choose to display time or handset name in your idle screen.







 

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **HS DISPLAY**.
3. Press  and  to select **HANDSET NAME** or **TIME**.
4. Press  to confirm.

 

 
8.3.7 Set the Auto Answer

If you turn on the Auto Answer, you can pick up the call from the cradle without pressing any key.

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **AUTO ANSWER**.
3. Press  and  to turn on or off the auto answer feature.
4. Press  to confirm.

8.3.8 Set the Direct Memory Number

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DIRECT MEM**.
3. Press  and  to select the desired direct memory key from **KEY 1**, **KEY 2** and **KEY 3**.
4. Press  and input the number to be stored.
5. Press  to confirm.

Note: Press and hold ,  or  to call the stored number.









8.4 Base Settings

The current settings are marked an asterisk which is displayed at the rightmost of the menu item.

8.4.1 De-register a Handset








You are requested to enter the 4-digit PIN in order to de-register a handset from the base station. The antenna icon on the de-registered handset will blink.

Note: You cannot de-register the handset that you are currently using.

1. Press  and  to select **BS SETTINGS**.
2. Press  and  to select **DELETE HS**.
3. Press  and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN (default PIN is 0000).
5. Press  and a list of registered handsets is displayed.
6. Press  to select one of the handsets that you want to de-register.
7. Press  to confirm.








8.4.2 Change the Flash Time

On the Belgian public network, the recall time is **120 ms (SHORT)**.

1. Press  and  to select **BS SETTINGS**.
2. Press  and  to select **FLASH TIME**.
3. Press  and  to select your desired flash time (**SHORT, MEDIUM, LONG**).
4. Press  to confirm.

8.4.3 Change the System PIN Code








A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

1. Press  and  to select **BS SETTINGS**.
2. Press  and  to select **CHANGE PIN**.
3. Press  and you are requested to enter the 4-digit system PIN.
4. Enter the old system PIN.
5. Press  and enter the new system PIN.
6. Press  and enter the new system PIN again.

Note: If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

7. Press  to confirm.






8.4.4 ECO Mode Setting

1. Press  and  to select **BS SETTINGS**.
2. Press  and  to select **ECO MODE**.
3. Press  and  to select **ON** or **OFF**.
4. Press  to confirm.

8.5 Registration

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.






If for some reason, the handset is not registered to the base station (■ flashes even when the handset is near the base station), register your handset according to the following procedure.

1. Press and hold  on the base station for about five seconds, the base station is entered into registration mode.
2. Press  and  to select **REGISTRATION**.
3. Press  and you are requested to enter the 4-digit system PIN (default PIN is 0000).
4. Enter the 4-digit system PIN.
5. Press  to confirm.

If the handset registration is successful, the ■ will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the ■ will still flash.


8.6 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook remains unchanged.

1. Press  and  to select **DEFAULT**.
2. Press  and you are requested to enter the 4-digit system PIN (default PIN is 0000).
3. Enter the 4-digit system PIN.
4. Press  to confirm.
5. Press  to re-confirm.

9 TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below. As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solutions
No dialing tone when pressing  key	a. The connection cord of the base station is not plugged in.	<ul style="list-style-type: none"> a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station plug and the 220V plug (remove and plug-in). c. Wait until the line is unoccupied. d. Use the original connection cord.
"OUT OF RANGE" is displayed.	<ul style="list-style-type: none"> a. Base station out of range. b. Base station not connected to mains. 	<ul style="list-style-type: none"> a. Reduce the range. b. Connect base station to mains.
The call does not work.	Service not activated or wrong operator.	Check your Subscription with network.
No display.	Empty battery	Recharge battery

10 GUARANTEE TERMS

The Equipment you have bought has been carefully selected by Belgacom and is covered by a two-year warranty on spare parts and labor in the event of any material or manufacturing defect, unless otherwise specified. The warranty shall be valid from the date on which the equipment is collected or delivered.

If you have any problems with the equipment, you should take it to a Teleboutique or to one of our authorized agents, in its entirety and in its original packaging, or in packaging providing the same degree of protection, together with the original receipt. The addresses for our Teleboutiques and authorized agents are given in the Information Section of the White Pages.

Your equipment will be repaired or replaced free of charge, on presentation of the receipt, in the event of any material or manufacturing defect.

Belgacom alone shall determine what repairs and/or replacements are necessary. The warranty on the repaired or replaced equipment shall end on the date on which the original warranty on the purchased equipment expires, but shall not be less than 3 months.

The warranty shall not cover:

- damage of any kind that does not predate the sale;
- any damage, faults or defects attributable to the Customer or to causes unrelated to the Equipment: lightning, power surges, humidity, accidental damage, improper use or poor maintenance, failure to comply with the instructions in the user manual, and force majeure;
- the repair or replacement of movable parts (cords, wires, plugs, aerials, etc.), consumables (cells, batteries, paper, ink, etc.) needing regular replacement and the supply of cleaning products.

The warranty shall not apply:

- to any changes or repairs to the terminal Equipment undertaken by the Customer himself/herself or through the services of persons not designated by Belgacom;
- if the Customer removes or tampers with the manufacturer's serial numbers and/or brand names on the terminal Equipment;

Belgacom shall not be liable for any indirect or immaterial loss sustained by the Customer as a result of the malfunctioning of the terminal Equipment, such as any loss of production, revenue or contracts.

! *The General Terms and Conditions for the Sale of Terminal Equipment can be obtained on request from any Belgacom service available to the public or at www.belgacom.be.*

Belgacom shall not be liable for any indirect or immaterial loss sustained by the Customer as a result of the malfunctioning of the terminal Equipment, such as any loss of production, revenue or contracts.

belgacom

Belgacom SA under public law
Bd. du Roi Albert II 27, B-1030 Brussels VAT BE 0202.239.951,
Brussels Register of Legal Entities

11 SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

! Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.

It is recommended that you avoid using this device during electrical storms. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.



12 ENVIRONMENT



The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances for the health and the environment.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.

The crossed-bin symbol invites you to use those systems.

If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

You can also contact us for more information on the environmental performances of our products.



R&TTE DECLARATION OF CONFORMITY (DOC)

We,

ATLINKS EUROPE
22, Quai Gallieni
92150 SURESNES
FRANCE

Declare under our sole responsibility that the product:

Brand: Belgacom

Trade name: Twist 212

Model: Versatis F 250

complies :

- With the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) based on the following standards and other normative documents:
 1. SAFETY (art 3.1.a) : EN 60950-1 (2006) + A11 ('2009)
EN 301489-01 V1.8.1 (2008) / EN 301489-06 V1.3.1 (2008)
 2. EMC (art 3.1.b) :
 3. SPECTRUM (art. 3.2) : EN 301406 V2.1.1 (2009)
- With Commission regulation (EC) N° 278/2009 of April 6, 2009 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficiency of external power supplies
- With Commission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment.

This conformity is understood as being effective if the product for which it is given is installed and used according to the instructions provided in the user's guide.

Paris, 07/03/2012
Didier GOJJARD
CEO ATLINKS EUROPE

Twist 212

A/W No.:10000545 Rev.0(EN)