

Dear customer,

You have just acquired a new generation telephone and thank you for placing your confidence in us.

This product follows a strategy of continuous development. We reserve the right to make changes without notice, modifications and improvements to the products described in this user manual.

To operate the device safely and easily, please read carefully the paragraph **“Recommendations and safety instructions”**, page 2.




The CE label confirms that the product complies with the 1999/5/EC regulations of the European Union Parliament regarding wireless systems and telecommunications.

Recommendations and safety instructions



For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock.

To avoid damaging your handset/base, only use certified rechargeable batteries NiMH 1.2 V 750 mAh, never use no rechargeable batteries. Insert the batteries in the handset/base battery compartment respecting polarity.

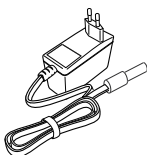

Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this user manual and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 230 volt power supply. Therefore the sockets should be near the device and easily accessible.




Do not install your telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.50 metres of a source of water or outside. This device is designed for use in temperatures of between 5 °C and 45 °C.



In zones where there is a risk of frequent thunder storms, we recommend that you protect your telephone line using an electric power surge protection device.



Do not attempt to remove screws or open the appliance. It does not contain any user-replaceable parts.

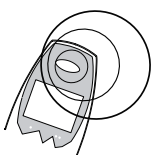


Your telephone has a range of approx. 50 metres indoors and up to 300 metres outdoors. The range can be affected by the proximity of metal objects, such as a television and electrical devices.

Zones without reception may appear owing to elements in the building. This can cause brief interruptions in the conversation, caused by faulty transmission.



Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information.

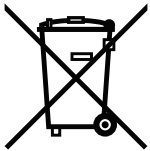

The used battery must be disposed of in line with the recycling regulations in this user manual.



Table of contents

Discover.....	7
Your phone	7
Unpacking	7
Installing the belt clip	8
The handset	9
Browser	10
Browsing principle	10
The screen	13
Charging	14
Handset set-up.....	14
Replacing the batteries	16
Menu tree structure	17
Call... ..	19
Managing calls	19
Making a call.....	19
Receiving a call	19
Choose your line.....	20
Managing several calls	21
Receiving a second call	21
Switching from one call to the other	21
Ending one of the calls in progress	22
Talking with two contacts at the same time (3-way conference)	22
Making a second call	23
Transferring calls	24
Options during a call	25
Enable/Disable loudspeaker (handsfree mode).....	25
Adjusting volume.....	25
Enable the mute mode.....	26

Manage your contacts... ..27

Use the phonebook 27

Add a contact.....	27
Call a contact	27
Edit a contact	28
Delete a contact	28
Search for a contact.....	28
Delete all contacts	29
Speed dialling	29

PhoneMail Service... ..30

Modifying the PhoneMail number	30
Use PhoneMail services	30

Audio adjustment... ..31

Changing the ringing tone.....	31
Enabling/Disabling the silent mode	31
Enabling/Disabling audio alerts	32

Setting up... ..33

The phone 33

Setting the date and the time.....	33
Picking up and hanging up calls automatically.....	33
Changing the display language.....	34
Adjust the brightness.....	34
Change the screen background.....	34

The handset 35

Handset version.....	35
Resetting the handset.....	35

The base 36

Changing the base code.....	36
Resetting the base.....	36
Base version.....	37

The line 38

Change the line name	38
Pair the handset with a line	38
Call forwarding	39
Mask the line number	40
Manage several calls	40

Allow three-way communication (Intrusion)	41
Managing your calls	42
The list of handsets	43
Manage handsets	43
Enjoy... ..	44
The alarm.....	44
Programming the alarm.....	44
The timer	45
Program the timer	45
Tracing your calls.....	46
Call logs	46
Displaying the list of all calls.....	46
Viewing the received or dialled call log.....	47
Consulting the missed call log	48
Managing incoming or outgoing calls.....	48
The events log.....	49
Checking new events.....	49
Environmental information	50

 
Discover...

Discover...

Your phone

Unpacking

Place the box in front of you, open it and make sure it contains the following items:

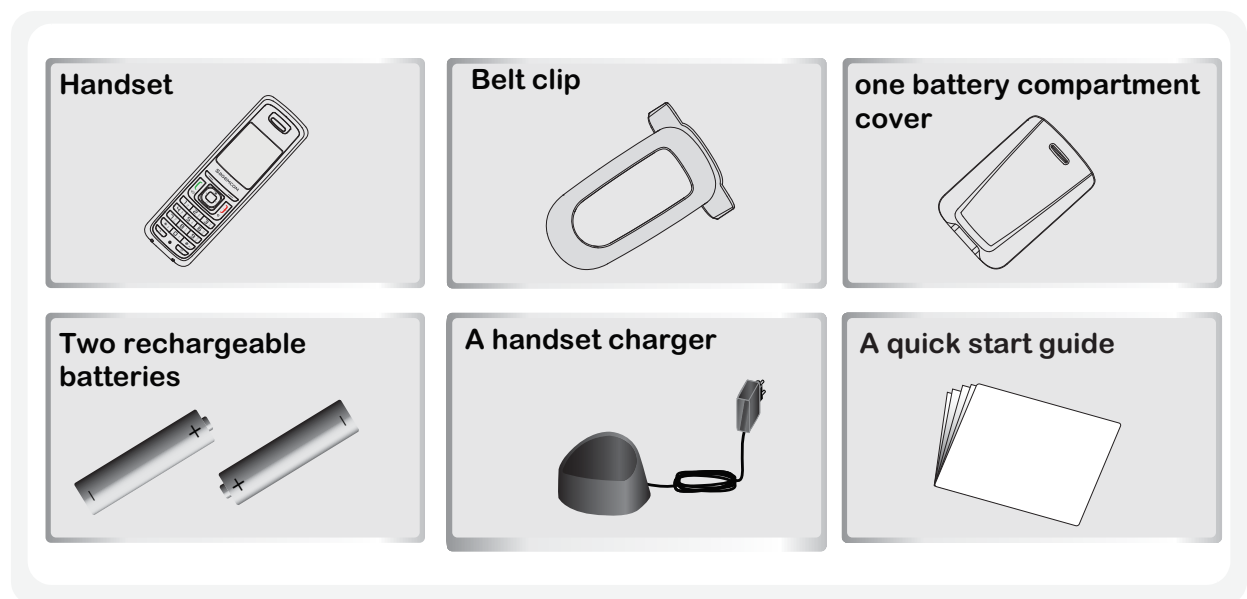


Discover...


Installing the belt clip

To install the belt clip:

 - 1 First insert one side of the clip into the dedicated slot (A).

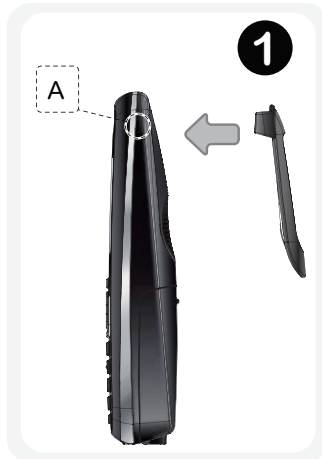

 - 2 Gently press on the other side of the clip until the pin snaps into the other slot. The "TIC" sound indicates that the belt clip is in the locked position.

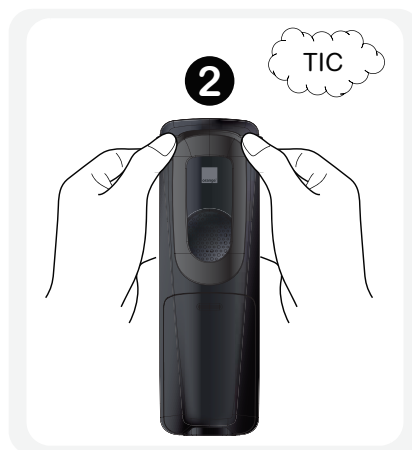


To remove the belt clip:

Lift the clip by one of the sides (B).



 
The handset

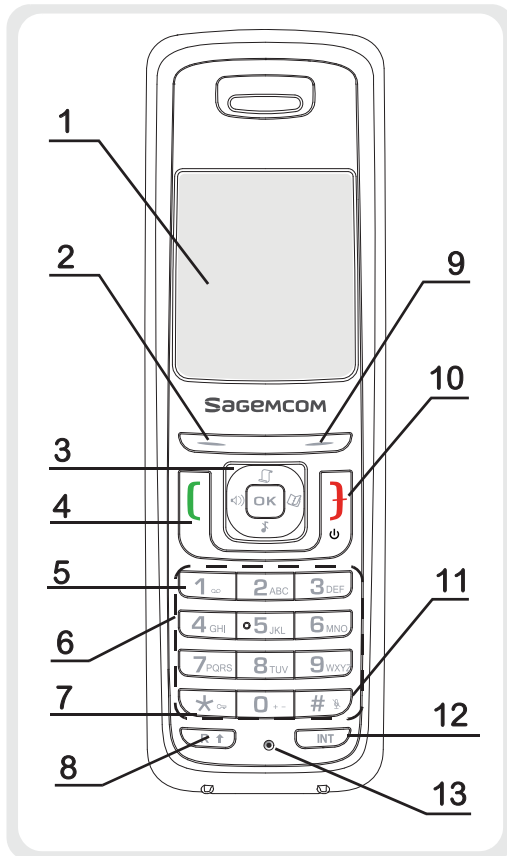

N	Description
1	Screen
2	Access to the main menu / Validation key.
3	Browser.
4	"Answer" key (long press) / Access to the "Tous les appels" log (short press)
5	Access to Phonemail (long press in standby mode).
6	Alphanumeric keyboard: long press the numeric buttons to initiate calls to pre-programmed numbers.
7	Star key: lock / unlock keypad (long press).
8	R key: allows you to put a conversation on hold by pressing the R key followed by 2 or disconnect the call in process, by pressing the R key followed by 1 for a double call.
9	Cancel key / return to previous menu.
10	Hang up key / Turn off/on the handset (long press).
11	Sharp key: activate/deactivate secret mode (long press during a call).
12	" INT " key intercom function. Allows you to call other HD phones connected to your b-box 3v+.
13	Microphone.

Discover...

 Browser

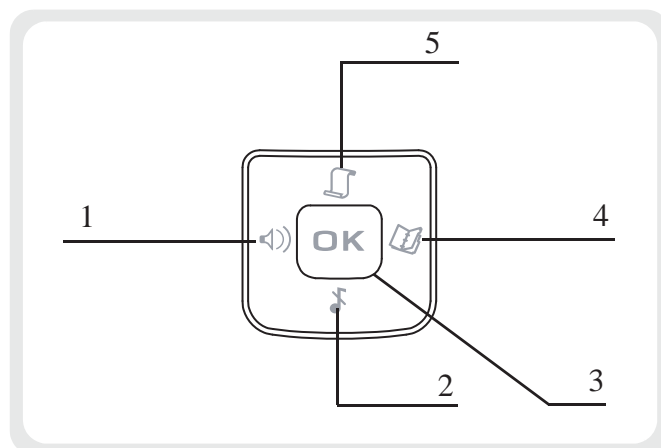


Legend	Item	Description
1		Loudspeaker enable (switch to hands-free mode)/disable (switch to handset mode).
2		Enable/disable the silent mode.
3		Validation key / Main menu access key.
4		Phonebook access key.
5		All call log access key.

Browsing principle


To browse through menus, use the browser keys and the Keys , and :



Key	Corresponds to... (throughout the manual)
	▲ Up
	▼ Down
	► Go right
	◄ Go to the left

1 Press **Menu** .

1 Press the top ▲ or the bottom ▼ of the navigation key .


The main menu is displayed on the screen.

2 Press the top ▲ or the bottom ▼ or (on the ◀ or ▶) of the browser  key to access the desired function.

3 Validate your choice / Enter the menu by pressing the  (OK) or via the key **Validate** .

4 Cancel your choice / Exit the displayed menu:





- either by pressing the  key: return to previous menu.

- or by pressing the  key: the home screen is displayed.














Discover...

DETAILED BROWSER EXAMPLE: ACCESS TO THE CONTEXT MENU

During a call:

- 1 Press the **Options**  key, **Second call** is displayed.
- 2 Scroll through the options using the top  or the bottom .
- 3 Validate your choice by pressing the  key.


DETAILED BROWSER EXAMPLE: CHANGING THE RING TONE OF EXTERNAL CALLS

- 1 Press **Menu**  (or  key).
The main menu is displayed on the screen.
- 1 Press the  () key once and then press once the  () key.
- 2 Enter the **Melodies** menu by pressing the  (**OK**) key.
- 3 Select **External ringtone** using the  or  key. Press .
- 4 Select the ring tone of your choice using the keys  or . Adjust the volume of the ring tone and press the  key.
The screen displays the message "OK".

The screen

THE ICONS DISPLAYED

 In standby mode or during use, your phone screen informs you of your phone's current state through icons, and in particular:

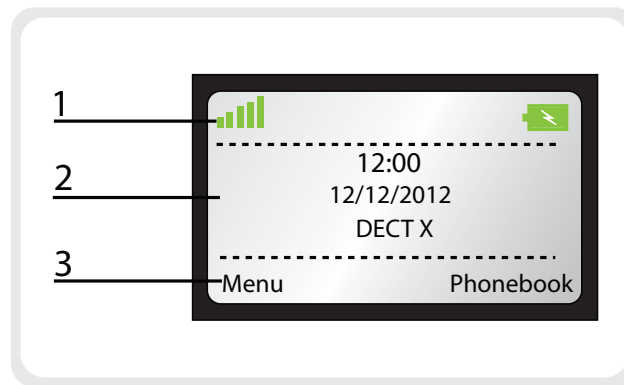


Legend	Description
1	Status icons: indicates your phone's current state.
2	Information field: the current date and time, the handset's name and number.
3	Action icons: menus associated with programmable keys.






Discover...

Charging

To charge your telephone, place the handset on its charger and make sure the charger is connected to the power supply.

The battery charging icon  moves to inform you that charging is in progress.

The icon display stops moving when the batteries are charged.



Statut	Description
	Batteries charged.
	Batteries moderately charged.
	Battery charge low.
	Battery charge very low.
	Batteries completely discharged.

Note


To ensure optimum charging, leave the handset on the base for at least **15 hours** when using the phone for the first time. During charging, the batteries may heat up. This is quite normal and perfectly safer.

When the batteries are low, the handset emits a beep.


Handset set-up


- 1 Turn the handset around to access the battery compartment hatch.
- 2 Install the new batteries one by one, making sure to respect the polarity of the batteries, and refit the battery compartment cover for a few seconds.
- 3 The message " **proximus** " is displayed on the screen for a few seconds.
- 4 The **Language** menu is displayed.
- 5 Select the language to be used using the ▲ or ▼ keys and validate using the  key.
- 6 The date and time setting menu is displayed.
- 7 Enter the right date. Press the key ▼, and enter the time.
- 8 Press the key . The action is confirmed by the indication "OK".

SWITCH THE HANDSET OFF AND THEN ON AGAIN

To turn off the handset, hold down the red key , the "Power off ?" message is displayed on the screen.

Press **Yes**  to confirm.

To turn on your handset, press the red key  briefly, the "**proximus**" message is displayed on the screen.

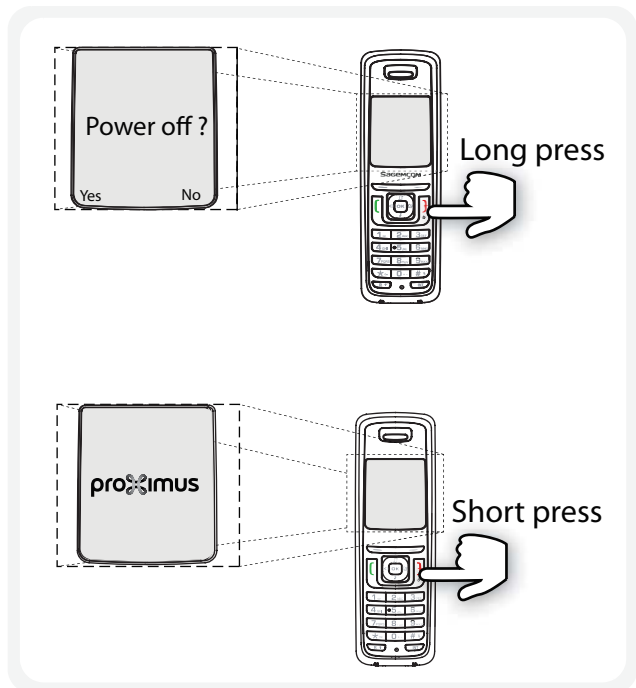

Discover...

Replacing the batteries

- 1 Turn off the handset. Turn it around so that the battery compartment is accessible.
- 2 Remove the battery compartment hatch.
- 3 Remove the old batteries, insert the new batteries one by one in compliance with the polarity of the batteries.
- 4 Refit the battery compartment hatch.



Note

Worn out batteries must be discarded, in accordance with the recycling instructions in chapter “**Recommendations and safety instructions**”, page 2.

ATTENTION

To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 750 mAh, never use non rechargeable batteries.

Menu tree structure

Phonebook

List
Search
Add
Delete all
Speed Dialing

PhoneMail

Vicemail *
Voice Service

Options

During a call
Second call
Intercom
Calls
Phonebook
Selec. call line
Secret

Calls

All calls
Incoming calls
Outgoings calls
Missed calls
Events

Melodies

External ringtone
Internal ringtone
Beeps
Silent

Accessories

Alarm
Timer

Tree structure continued on next page

Discover...

Settings

Settings		Date/time	
		Auto hang/pick up	
		Language	
		Display	
Advanced settings *		Set handset *	
		Registration	
		Handset Version	
		Reset handset	
		Set base	
		Change code	
		Reset base	
		Base Version	
		Set line	
Line name			
Attached HS			
Call forward			
Configuration			
Selec. call line			
Handset list *			


* Scrolling message

Call...



Managing calls


Making a call

METHOD 1 (PRE-DIALLING)



- 1 Dial your contact's number.
- 2 Press the key .


METHOD 2 (POST-DIALLING)

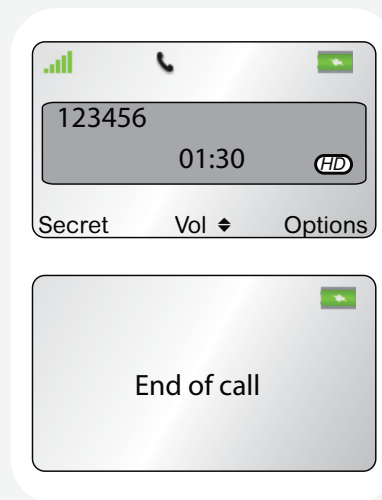- 1 Press on the green key  for a longer time (more than 2 seconds).
- 2 Dial your contact's number.
- 3 At the end of the call, press the handset  key and place the handset back on its charger.



Receiving a call


- 1 To take a call press the  key (you can select **Acceptor** or **Ignorer** or press **OK**). You can simply pick the handset up from its base if the automatic pick up option is activated.
- 2 At the end of the call, press the handset  key and put the handset back on its charger. A sound signal is emitted.

Note To stop the handset ringing when an incoming call is received, press **Ignorer** .

Call...

Choose your line

This menu allows you to select the line on which you want to make a second outgoing call (subject to service availability).

- 1 During a call, press **Options** .
- 2 Select **Selec. call line** and press **OK**.
- 3 Select your line using the keys **▲** or **▼**.
- 4 Press **OK**. The action is confirmed by the indication **"OK"**.

Managing several calls

Your phone allows you to take and manage several calls (subject to service availability) when you are already on the line. (*)

Receiving a second call

During a call, a beep indicates the arrival of a second call.
The contact details of the second caller are displayed on the screen.

Case 1: take the new call and put the current call on hold.

Press **OK**.

Select **Replace** and press **OK**.

- OR -

Press the  key.

The first caller is put on hold, you can speak with the new caller.

Cas 2 : take the new call and end the current call.

Press **OK**.



Select **Release** and press **OK**.

The call with your first caller is ended. You can speak with the new caller.

Note To reject a second call, press **Release**.

Switching from one call to the other

Options > Switch

During the call press **Switch**  or  key. he current call is put on hold and you take the call that was previously on hold.

(*) refer to section “Manage several calls”, page 40.

Ending one of the calls in progress

Options > Release

During the call press **Options**. Choose the option **Release** using the ▲ or ▼ keys. Press **OK**.

The current call is ended and you resume the previous call.

Note

During the call you can hang up both calls by pressing the key for a long time.



A short press on the red



key ends the current call.

Talking with two contacts at the same time (3-way conference)

Options > 3-part conference


- During a double call, press **Options**. Choose the option **3-part conference** using the ▲ or ▼ keys. Press **OK**.
- You can then talk with the 2 contacts at the same time and " **3-part conference** " is displayed on the screen
- To end the conference call, replace the handset.

Note

The 3-way conference is supported by the HD phone, subject to service availability.

Making a second call

Options > Second call

Select the number for the person you want to call in the address book by pressing , and then **OK**.

- OR -


Dial the number using the keypad and validate.

The second called number appears on the screen.


A: the order of the current call / double call.


B: the call time.

C: the number and/or name of the person called.

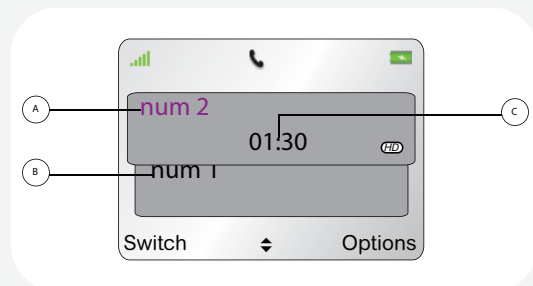

Note

You can also select the number of the person you are calling from your address book by pressing . For more details please refer to section “**Use the phonebook**”, page 27.

You can also make a second call by pressing on the  key.

Transferring calls


During a call, you can transfer it to another handset. This function can be used as soon as your installation has two handsets registered on the same base.

Note A transfer to an inside contact is also supported by the HD phone, subject to service availability.

Options > Intercom

UNANNOUNCED TRANSFER



This function allows you to transfer the current call directly to another device.

Steps	Calling handset	Called handset
1	Press OK .	
2	Select the handset (or all handsets) to call.	
3	Press OK .	
4		Rings: internal call.
5	Press Transfer  .	
6		Rings: external call. Take the call.
7	Hangs up automatically.	

Note At the 5th step you can cancel the transfer of the call. To do this, select **Cancel** and then validate.

ANNOUNCED TRANSFER

This function allows you to transfer the current call to another device once it has been picked up.


Steps	Calling handset	Called handset
1	Press OK .	
2	Select the handset (or all handsets) to call.	
3	Press OK .	
4		Rings: internal call.
5		Press the  key to accept the internal call.
6	The external call is put on hold.	
7	Press Transfer  .	
8	Hangs up automatically. The external call is transferred.	
9		Call with the external caller.


Options during a call

You can use the following options during a call:

Enable/Disable loudspeaker (handsfree mode)


HANDSET LOUDSPEAKER

During the call you can activate the handsfree mode by pressing the  key.

The icon  is displayed on the screen.

To disable the hands-free mode, press the  key again.

The icon  disappears.

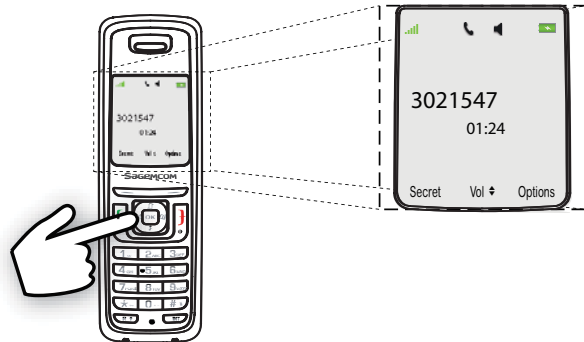



Note


When your battery charging icon displays the minimum, the handsfree mode is unavailable until the next charging cycle. The handsfree mode is optimised for speaking at 50 cm from the handset.

Adjusting volume

FROM THE HANDSET

During a call you can increase or lower the volume of the handset by pressing the  or  keys on the browser.

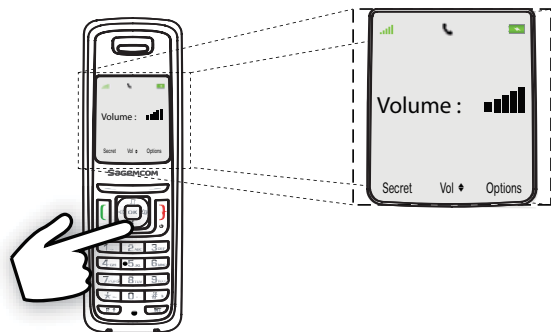


A bar graph makes it possible to adjust the volume according to 5 levels.




Enable the mute mode

During a call, you can switch to mute mode and your handset's microphone will be muted and your contact will no longer hear you.


TO ENABLE THE MUTE MODE:

- During a conversation, press **Options** .
- Select **Secret**, press **Validate** . The icon  is displayed at the top of the screen.

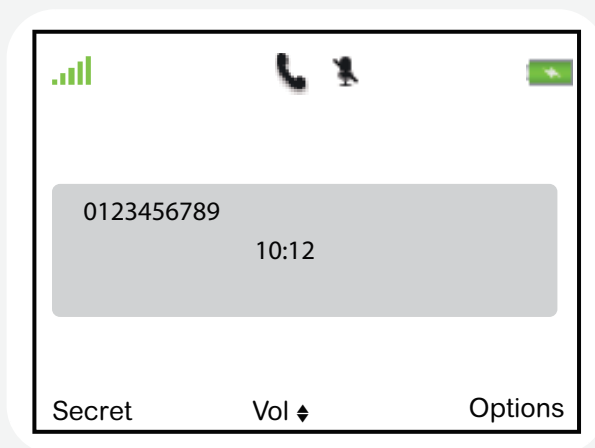


TO DISABLE THE MUTE MODE:

- Press **Options** .
- Select **Micro**, press **Validate** . Your contact will hear you again.


Note You can also enable/disable the mute mode by pressing **Secret / Micro**  during a call.

KEYBOARD SHORTCUT:

During a conversation, press and hold the  key to enable/disable the mute mode.

Manage your contacts...

Use the phonebook

The phonebook entries are managed by your b-box 3v+.
Your phonebook is common to all the DECT handsets recorded on the same b-box 3v+.
Your phonebook includes up to 170 contacts in your Business directory and 10 contacts in your personal directory.
You can also directly access the list of phonebook entries using the  key.
When browsing through the phonebook, the handset displays the number of

Add a contact

Menu > Phonebook > Add

Specify the required information by confirming at each step :

- **Family name:** enter your contact's name,
- **First name:** enter your contact's first name,
- **Number:** enter the phone number(s) in the corresponding box (Home, Mobile and Work).
- Select the ring tone of your choice from 7 different ring tones using the keys ◀ or ▶ to identify the person calling you more easily.
Press **OK**.

Note To enter a text, press and hold the required key until the letter is displayed on the screen.

Call a contact


Menu > Phonebook

- 1 Press **OK**.
- 2 Select an entry using **List** or **Search** and press **OK**.
- 3 Select **Call** and press **OK**.

Manage your contacts...

Edit a contact

Menu > Phonebook

- 1 Press **OK**.
- 2 Select an entry using **List** or **Search** and press **OK**.
- 3 Select **Edit** and press **OK**.
- 4 Change the name, first name and/or phone number by deleting characters using the  key and/or the ring tone and press **OK**.

Delete a contact

Menu > Phonebook

- Press **OK**.
- Select an entry using **List** or **Search** and press **OK**.
- Select **Delete** and press **OK**.
- On the question **Delete ?**, press **OK** to confirm the deletion of the entry.

Search for a contact

Menu > Phonebook

- Press **OK**.
- Select **Search** and press **OK**.
- On request **Family name**, enter the first letter of the name, the entire name, or part of the name and press **OK**.
- Once the list is displayed, you can also directly enter the first few letters of the name sought.

Manage your contacts...

Delete all contacts


Menu > Phonebook

- Press **OK**.
- Select **Delete all** and press **OK**.
- On the question **Delete all?**, press **OK** to confirm the deletion of all the entries.






Attention This operation will erase all the files in your b-box 3v+. Once this is done, you will have no more contact in each of your phones registered on your b-box 3v+.

Speed dialling

This function allows you to assign a keyboard shortcut to a contact in your phonebook.

Note Your voice mail number is assigned to the key . To call your contact, press and hold the key assigned to the number and the number is automatically dialled.

Menu > Phonebook

- Press **OK**.
- Select **Speed Dialing** and press **OK**.
- Select, using the key  or , the number of the keyboard key you want to assign to your contact (0~9).
- Press **Edit** .
- Press **Phonebook** , select the contact you want to assign a keypad shortcut. Press **OK**.
- You can also directly enter the number of your choice. Once the number is entered, press **OK**. To exit the menu, press **Back**  3 times in succession.

PhoneMail Service...

Modifying the PhoneMail number


Incoming calls in your absence are redirected to your telephone line's PhoneMail.

Menu > PhoneMail

- Press **OK**.
- Select **Edit** using the ▲ or ▼ key and press **OK**.
- The pre-stored number is displayed, and can be edited.
- Enter the PhoneMail number and press **OK**. The action is confirmed by the indication "OK".

Use PhoneMail services

Menu > PhoneMail

- Press **OK**.
- Select **Call** using the ▲ or ▼ key.
- Press the green  key. The service number in question is dialled automatically.

Note

You can press and hold the key  to access your PhoneMail.

Audio adjustment...

Changing the ringing tone

You can change the ringing tone of:

- outside calls,
- calls between handsets (intercom).



Menu > Melodies

- Press **OK**.
- Select **External ringtone** to change the ringing tone for external calls.
- OR -
- Select **Internal ringtone** to change the ringing tone for internal calls.
- Scroll through the pre-recorded ringing tones and press **OK**.
- Adjust the ring tone volume and press **OK**.



Enabling/Disabling the silent mode

When in silent mode, the telephone ringer and keypad beeps are inhibited.

Note

The browser  key can also be used to enable/disable the silent mode.
When you have activated silent mode, your handset is silent for all functions of the alarm clock, timer type.
If the silent mode is active the  icon is displayed.

Menu > Melodies

- Press **OK**.
- Select **Silent** to change the silent mode, then press **OK**.
- The message "**Activate silent mode ?**" is displayed on the screen.
 - Press **Yes**  to confirm the enabling of the silent mode.
 - Press **No**  to cancel the enabling of the silent mode.


Audio adjustment...

Enabling/Disabling audio alerts

Audio alerts apply to:

- pressing the keypad keys,
- putting the handset on the charger,
- low battery alert,
- others (error alerts).

Note

The enabled function is marked by the symbol .

Menu > Melodies


- Press **OK**.
- Select **Beeps** to change the audio alerts, then press **OK**.
- Select **Keypad** and press the keys ◀ or ▶ to enable or disable the keypad beeps.
- OR -
- Select **Charger** and press the keys ◀ or ▶ to enable or disable the beep when the handset is placed on the charger.
- OR -
- Select **Battery low** and press the keys ◀ or ▶ to enable or disable the low battery warning.
- OR -
- Select **Others** and press the keys ◀ or ▶ to enable or disable the action not allowed warning.

Setting up...

The phone

Setting the date and the time

Menu > Settings

- Press **OK**.
- Select **Date/time** using the ▲ or ▼ key and press **OK**.
- The date and time setting screen is displayed, press **Edit** .
- Set the clock mode (automatic or manual) with keys ◀ or ▶.
- Press the key ▼ and then enter the date in DD/MM/YY form.
- Press the key ▼ and then enter the time in hh:mm form.
- Confirm your entry by pressing **OK**. The message "**OK**" is displayed on the screen.

Note

If the automatic clock mode is enabled, it is not possible to change the date and time displayed on the handset.

Picking up and hanging up calls automatically

This function allows you to take and end a call by simply taking the handset off or placing it back on its charger.

Menu > Settings

- Press **OK**.
- Select **Auto hang/pick up** using the ▲ or ▼ key and press **OK**.
- Select **Auto hangup** or **Auto pickup** using the ▲ or ▼ key.
- Set the status (enabled or disabled) with the keys ◀ or ▶.
- Confirm by pressing **OK**. The action is validated by the "**OK**" indication.

Setting up...

Changing the display language

Menu > Settings

- Press **OK**.
- Select **Language** using the ▲ or ▼ key and press **Validate**.
- Select the language to be used with the keys ▲ or ▼ and press **Validate**.
- The action is validated by the "OK".

Adjust the brightness

Menu > Settings

- Press **OK**.
- Select **Display** using the ▲ or ▼ key and press **OK**.
- Select **Brightness** using the ▲ or ▼ key and press **OK**.
- A bar graph is used to adjust the brightness according to 8 levels.
- Select the level you want using the keys ▲ or ▼.
The brightness is directly visible on the screen.

Change the screen background

This menu allows you to change your handset screen background image.

Menu > Settings

- Press **Validate**.
- Select **Display** using the ▲ or ▼ key and press **OK**.
- Select **Wallpaper** using the ▲ or ▼ key and press **OK**.
- Select one of the images proposed using the keys ▲ or ▼.
The image is displayed on the screen.
- Press **OK** to keep this image as a screen background.
The action is validated by the "OK" indication.

The handset

Handset version

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set handset** using the ▲ or ▼ key and press **OK**.
- Select **Handset Version** using the ▲ or ▼ key and press **OK**.
The software and EEPROM version of the handset is displayed on the screen.

Resetting the handset

When you reset your handset, all the settings are returned to their initial values (factory settings), except for the phonebook.

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set handset** using the ▲ or ▼ key and press **OK**.
- Select **Reset handset** using the ▲ or ▼ key and press **OK**.
- On a confirmation request "**Reset handset ?**", press **OK**.

Setting up...

The base

Changing the base code

The base code (PIN number) is 0000 as default and can be changed to 4 other numbers.

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set base** using the ▲ or ▼ key and press **OK**.
- Select **Change code** using the ▲ or ▼ key and press **OK**.
- At the "Old code" prompt, enter the old 4-digit code and then confirm by pressing **OK**.
- At the "New code" prompt, enter the new 4-digit code and then confirm by pressing **OK**.
- At the "Confirm le code" prompt, enter the new code again and then confirm by pressing **OK**.
- The action is validated by the "OK" indication.

Resetting the base

When you reset your base, all the settings are returned to their initial values (factory settings), except for the phonebook.

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set base** using the ▲ or ▼ key and press **OK**.
- Select **Reset base** using the ▲ or ▼ key and press **OK**.
- On a confirmation request "**Base reset?**", press **OK**.
- The action is validated by the "OK" indication.

Base version

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set base** using the ▲ or ▼ key and press **OK**.
- Select **Base Version** using the ▲ or ▼ key and press **OK**.
- The following information is displayed:
 - base software version,
 - EEPROM version,
 - base hardware version.

Setting up...


The line

This menu allows you to change the settings of the lines on the base.

Important The name of the line and the association of a handset to a line is managed by your b-box + 3v. You can not make these settings from your handset.


Change the line name

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set line** using the ▲ or ▼ key and press **OK**.
- Select **Line name** using the ▲ or ▼ key and press **OK**.
- Press **Edit**  to change the line name using the alphanumeric keys.
- Enter your line name by successively pressing the corresponding keys, press **OK**.

Pair the handset with a line

This menu allows you to display the list of handsets paired with the line used.

Note The enabled function is marked by the symbol .

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set line** using the ▲ or ▼ key and press **OK**.
- Select **Attached HS** using the ▲ or ▼ key and press **OK**.
- Enter the base code and press **OK**.
- The list of paired handsets is displayed on the screen.
- Select the desired handset using the keys ▲ or ▼.
- Press the keys ◀ or ▶ to pair/unpair the handset with/from the line used (the paired handset is then unpaired and vice versa).
- Press **OK**. The action is validated by the "OK" indication.


Call forwarding

This function allows you to transfer all incoming calls if your phone is busy, if you do not answer the call or if you want to forward calls automatically to another number.


Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set line** using the ▲ or ▼ key and press **OK**.
- Select **Call forward** using the ▲ or ▼ key and press **OK**.
- Select one of the three available options and confirm by pressing **OK**.


On busy: the call will be forwarded if the line is busy

- Press **Edit** , change the forwarding status.
- Press the key ▼, enter the number you want the call to be forwarded to and press **OK**. The action is validated by the "OK" indication.

No answer: the call will be forwarded if no answered within a time to be defined (in seconds)

- Press **Edit** , change the forwarding status.
- Press the key ▼, enter the time in seconds before the call is transferred.
- Press the key ▼, enter the number you want the call to be forwarded to and press **OK**. The action is validated by the "OK" indication.

Always: the call is forwarded in all cases

- Press **Edit** , change the forwarding status.
- Press the key ▼, enter the number you want the call to be forwarded to and press **OK**. The action is validated by the "OK" indication.


Setting up...

Mask the line number

It is the setting saved in your 3v + b-box that overrides the setting of the phone. Refer to "Your Telephony Solution Guide".

This function, when enabled, hides your line number.

Note

The enabled function is marked by the symbol .

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set line** using the ▲ or ▼ key and press **OK**.
- Select **Configuration** using the ▲ or ▼ key and press **OK**.
- Select **Hide number** using the ▲ or ▼ key and press.
- Change the status using the keys ◀ or ▶ key and press **OK**.
The action is confirmed by the indication "OK".

Manage several calls

This function allows you, when enabled, to manage several calls simultaneously, provided that the service is available on the line.

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set line** using the ▲ or ▼ key and press **OK**.
- Select **Configuration** using the ▲ or ▼ key and press **OK**.
- Select **Multi call** using the ▲ or ▼ key and press.
- Change the status using the keys ◀ or ▶ key and press **OK**.
The action is confirmed by the indication "OK".

Allow three-way communication (Intrusion)

This intrusion function allows or prohibits a second handset registered on the same base to share an ongoing conversation. If the intrusion mode is enabled, you will then be able to share a call in process with another handset.

Menu > Settings

- Select your line using the keys ▲ ou ▼, press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Set line** using the ▲ or ▼ key and press **OK**.
- Select **Configuration** using the ▲ or ▼ key and press **OK**.
- Select **Intrusion** using the ▲ or ▼ key and press **OK**.
- Change the status using the keys ◀ or ▶ and press **OK**.
The action is confirmed by the indication "OK".

Note	The intrusion is not operative if the simultaneous function is enabled.
-------------	---

Setting up...

Call management

This menu allows you to select the line on which you want to make your first outgoing call.

Managing your calls

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Selec. call line** using the ▲ or ▼ key and press **OK**.
- The list the lines available is displayed on the screen.
- Select your line using the keys ▲ or ▼ and press **OK**.
The action is confirmed by the indication "**OK**".

The list of handsets


This menu displays the list of handsets registered on the same base.

Manage handsets

Menu > Settings

- Press **OK**.
- Select **Advanced settings** using the ▲ or ▼ key and press **OK**.
- Select **Handset list** using the ▲ or ▼ key and press **OK**.
- The list of handsets registered on the base is displayed on the screen.
- Select the desired handset using the keys ▲ or ▼ and press **OK**.
- You have access to the actions you can perform:

Change the handset name: " Edit "

Change the handset name using the alphanumeric keys, Press **Clear**  to delete unwanted characters. Press **OK**.

Call the handset: " Call "

Call the selected handset.

Remove the handset: " Delete "

Remove the handset's registration.

At the confirmation prompt "**Delete handset?**" press **OK**. The action is confirmed by the indication "**OK**".

Intercept the handset: "Interception"

Allow the handset to intercept a call.

The message "**Enter code** " is displayed. Enter the base PIN code (0000 as default), press **OK**.

Then select **On** or **Off** and press **OK**.

The action is confirmed by the indication "**OK**".

Enjoy...

Enjoy...

The alarm

Note


The alarm clock function arranges for your handset to ring each day at a time you programmed.

When the alarm clock is set of, the selected ring tone rings for 60 seconds through the handset loudspeaker and a warning screen is displayed. To stop the warning, press any key on the handset.

Programming the alarm

In silent mode, phone the ring tone and the beeps are deactivated.

Menu > Accessories


- Press **OK**.
- Select **Alarm** then press **OK**.
- The alarm clock setting screen is displayed, press **Edit** .
- Set the alarm clock status using the keys ◀ or ▶.
- Press the key ▼ and set the alarm clock:
 - wake-up time,
 - ring tone,
 - ringer volume.
- Press **OK** key. The action is validated by the "OK" indication.

The timer

Note The timer function enables the handset ringer after a programmed time. You can view the time countdown in minutes on the screen.

Program the timer

Menu > Accessories

- Press **OK**.
- Select **Timer** and press **OK**.
- The timer setting screen is displayed, press **Edit** .
- Set the timer status using the key ◀ or ▶.
- Press the key ▼ to enable or disable the timer display.
- Press the key ▼ and adjust the timer settings:
 - wake-up time,
 - ring tone,
 - ringer volume.
- Press **OK** key. The action is validated by the "OK" indication.

Tracing your calls...

Tracing your calls...

Call logs

Logs are lists of numbers or events received or sent by your telephone. Depending on your operator and the options of your contract, the following information can be accessed in the call logs:

- the date and time of the call.
- the contact's name and/or number.

Displaying the list of all calls

Note The numbers memorised in the call log are prefixed by a symbol:



: List of incoming calls,




: List of outgoing calls,



: List of missed calls.

Menu > Calls

- Press **OK**.
- Select **All calls**, then press **OK**.
- The last call is displayed with its date and time, its status (incoming, outgoing, missed), name and/or number.
- Scroll through the numbers memorised in the list using the ▲ or ▼ keys.
- Select the call you wish to view and press on **OK**.
- The following information is displayed:
 - the call status (received/sent/missed),
 - the contact's name,
 - the contact's number,
 - the call date,
 - the call time.
- Press **Back**  to return to the previous menu.

Viewing the received or dialled call log

Note Unknown calls are not included in the received call log.


Menu > Calls

- Press **OK**.
- Select **Incoming calls**, (or **Outgoings calls**) then press **OK**.
- The last received call (or dialled number) is then displayed.
- The other calls are displayed using the keys ▲ or ▼.
- Scroll through the numbers memorised in the list using the ▲ or ▼ keys.
- Select the call you wish to view and press on **OK**.
- The following information is displayed:
 - the call status (received/sent/missed),
 - the contact's name,
 - the contact's number,
 - the call date,
 - the call time.

Note The last call is only displayed at the top of the list on the first viewing of the list after the call.


Tracing your calls...

Consulting the missed call log

The  icon is displayed if there are one or more new missed and non viewed call

Note Once the missed call log has been consulted, the icon disappears from all handsets.

Menu > Calls

- Press **OK**.
- Select **Missed calls**, then press **OK**.
- The latest missed call is displayed.
- The other calls are displayed using the arrows.
- Scroll through the numbers memorised in the list using the ▲ or ▼ keys.
- Select the call you wish to view and press on **OK**.
- The following information is displayed:
 - the call status (received/sent/missed),
 - the contact's name,
 - the contact's number,
 - the call date,
 - the call time.
 - the number of missed calls.
- Press **Back**  to return to the previous menu.


Managing incoming or outgoing calls

Menu > Calls

- Press **OK**.
- Select **All calls** or **Outgoings calls** or **Incoming calls** or **Missed calls** then press **OK**.
- The list of calls (received/sent/missed) is displayed.
- Select the desired call and press **OK**, you then have access to the actions you can perform:
- **Call**: call the displayed number,
- **Delete**: delete the stored number,
- **Store**: save the number in your phonebook,
- **Delete all**: delete all the numbers in the list.

The events log

 
Note

The  icon is displayed if there are one or more voice mail messages.

Checking new events

A summary screen for the number of events that occurred in your absence is displayed:

- Number of missed calls,
- operator messages.

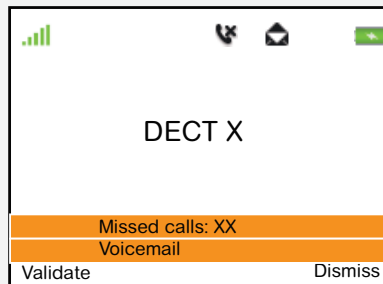

Menu > Calls

- Press **OK**.
- Select **Events** then press **OK**.
- Select using the keys **▲** or **▼** **Missed** or **Voicemail** and press **OK**. The event appears on the screen.

Environmental information

Environmental information

- The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances for the health and the environment.
- In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.
- The crossed-bin symbol invites you to use those systems.
- If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.
- You can also contact us for more information on the environmental performances of our products.
- Part replacement and the supply of cleaning products.

R.P. Ariane Marchant, Proximus PLC under Belgian Public Law,
Bd du Roi Albert II 27, B-1030 Brussels