 
Belgacom Twist[™] 318

User manual







Tab	ole of contents		4	Using your Twist 318	17
			4.1	Calls	17
1	Important	4	4.1.1	Make a call	17
1.1	Power requirements	4	4.1.2	Pre-dial	17
1.2	Using GAP standard		4.1.3	Dial one-touch	
	compliance	5		numbers 1 and 2	17
1.3	Recycling and disposal	5	4.1.4	Call from the	
1.4	Environmental			phonebook	17
	information	7	4.1.5	Call from the call log	17
			4.1.6	Answer a call	18
2	Your Twist 318		4.1.7	Adjust volume	18
	Digital Cordless		4.1.8	Mute	18
	Telephone	8	4.1.9	End a call	19
2.1	What's in the box?	8	4.2	Switch handset	
2.2	What you will also			on / off	19
	need	8	4.3	Intercom	19
2.3	Overview of the		4.3.1	Call another handset	19
	handset	9	4.3.2	Transfer an external	
2.4	Handset display	11		call to another handset	19
2.5	Overview of the base	12	4.3.3	Three-party	
2.6	Menu navigation	13		conference call	20
			4.4	PhoneMail	20
3	Getting started	14	4.4.1	Dial your PhoneMail	
3.1	Position the base	14		service	20
3.2	Connect the base	14			
3.3	Install and charge the		5	Phonebook	21
	handset batteries	15	5.1	View and dial	
3.4	Using multipacks	16		phonebook entries	21
			5.2	Store an entry	21
			5.3	Entering names	22

•







5.4	Character map	22	7	Clock & Alarm	28
5.5	Enter a pause	22	7.1	Set date and time	28
5.6	View an entry	22	7.2	Set alarm	28
5.7	Edit an entry	23	7.3	Set alarm ringer	
5.8	Delete an entry	23		melody	29
5.9	Delete all entries	23			
5.10	One-touch keys	23	8	Personal settings	29
5.10.	l Dial a one-touch		8.1	Handset tones	29
	number	23	8.1.1	Ring volume	29
5.10.2	2 Store a phonebook ent	ry	8.1.2	Ringer melody	30
	as a one-touch number		8.1.3	Key tones on / off	30
	(direct memory)	24	8.1.4	First ring	30
5.10.3	Belete a one-touch		8.2	Handset name	31
	number	24	8.3	Auto pick-up	31
			8.4	Auto hang-up	31
6	Caller ID		8.5	Display language	32
	and Call log	25	8.6	Keypad lock	32
6.1	Call log	25			
6.1.1	View the call log	25	9	Advanced settings	32
6.1.2	Dial from the call log	26	9.1	Recall time	32
6.1.3	Save a number from		9.2	Call barring	33
	the call log to the		9.2.1	Switch call barring	
	phonebook	26		on / off	33
6.1.4				0117 011	22
0.1.4	Delete a call log entry	26	9.2.2		
6.1.5		26 26	9.2.2		33
	Delete a call log entry		9.2.2 9.3	Set a number to be	
6.1.5	Delete a call log entry Delete entire call log	26		Set a number to be barred	33
6.1.5 6.2	Delete a call log entry Delete entire call log Redial Redial the last number	26 27	9.3	Set a number to be barred Baby call	33
6.1.5 6.2 6.2.1	Delete a call log entry Delete entire call log Redial Redial the last number	26 27	9.3	Set a number to be barred Baby call Switch baby call	33 34
6.1.5 6.2 6.2.1	Delete a call log entry Delete entire call log Redial Redial the last number Copy a redial number	26 27 27	9.3 9.3.1	Set a number to be barred Baby call Switch baby call on or off	33 34
6.1.5 6.2 6.2.1 6.2.2	Delete a call log entry Delete entire call log Redial Redial the last number Copy a redial number to the phonebook	26 27 27	9.3 9.3.1	Set a number to be barred Baby call Switch baby call on or off Set the baby call	33 34 34
6.1.5 6.2 6.2.1 6.2.2 6.2.3	Delete a call log entry Delete entire call log Redial Redial the last number Copy a redial number to the phonebook Delete a redial list	26 27 27 27 27	9.3 9.3.1 9.3.2	Set a number to be barred Baby call Switch baby call on or off Set the baby call number	33 34 34

•

•

2

Table of contents





9.4	Registration	35	10.9.1	Switch handset call	
9.4.1	Register a handset	35		screening on / off	43
9.4.2	Select a base	36	10.9.2	Switch base station call	
9.4.3	Unregister a handset	36		screening on / off	44
9.5	PIN	37	10.10	Memory full	44
9.6	Reset	37			
9.6.1	Default settings	37	11	Maintenance and	
				replacement	45
10	Using your		11.1	Cleaning	45
	answering machine	38	11.2	How to replace the	
10.1	Twist 318 base			battery	45
	answering machine				
	control keys	38	12	Technical data	46
10.2	Switch on / off	39			
10.3	Play messages	39	13	Frequently asked	
10.4	Delete all messages	40		questions	47
10.5	Record a memo	40			
10.6	Outgoing messages	40	14	Declaration of	
10.6.1	Answer & Record	40		conformity	50
10.6.2	Answer Only	40			
10.6.3	Set answer mode	40	15	Guarantee terms	51
10.6.4	Record, play or delete				
	your own outgoing		16	Index	53
	message	41			
10.7	Answer machine				
	settings	42			
10.7.1	Ring delay	42			
10.8	Remote access	42			
10.8.1	Remote Access				
	on / off	43			
10.9	Call screening	43			

•

•

Table of contents 3





1 Important

Take time to read this user manual before you use your telephone. It contains important information and notes regarding operating your telephone.

1.1 Power requirements

- This product requires an electrical supply of 220– 240 volts, alternating monophased power, excluding IT installations defined in standard EN 60-950. In case of power failure, the communication can be lost.
- The electrical network is classified as hazardous according to criteria in the standard EN 60-950. The only way to power down this product is to unplug the power supply unit from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

 The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60-950.

Warning

- This equipment is not designed to make emergency calls in the event of a power failure. An alternative has to be made available to allow emergency calls.
- High voltage. Never open the product or attempt any repair.
- Keep the product away from liquid.
- Never use any battery type other than the one supplied.
 There is a risk of explosion if the batteries are replaced by an incorrect type.
- When the phone is ringing avoid holding the earpiece too close to your ear as it may damage your hearing.
- Do not use the product in places where there are explosive hazards.







- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- Refer also to the Cautions in chapters and subchapter sections.

The advanced features may not be available if you use another handset than a Twist 308/318 with your base station. To register and use your Twist 308/318 handset with a GAP standard base station of a different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described on page 35.

To register a handset of another make to the Twist 308/318 base station, place the base station into registration mode, then follow the procedure in the manufacturer's instructions.



1.2 Using GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. Your handset and base station are GAP compliant, which means the minimum guaranteed functions are: register a handset, take the line, receive a call and dial.

1.3 Recycling and disposal

Disposal instructions for old products

The WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) has been put in place to ensure that products are recycled using best available treatment, recovery and recycling







techniques to ensure human health and high environmental protection.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Do not dispose of your old product in your general household waste bin.

Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol:



Use one of the following disposal options :

1 Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities. 2 If you purchase a replacement product, hand your complete old product back to the retailer. He should accept it as required by the WEEE directive.

Disposal instructions for batteries



Batteries should not be disposed of with general household waste.

Packaging information

Belgacom has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



A financial contribution has been paid to the associated national recovery and recycling system.



The labelled packaging material is recyclable.







1.4 Environmental information

The equipment that you bought has required the extraction and use of natural resources for its production. It may content hazardous substances for the health and the environment. In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.

The crossed-bin symbol invites you to use those systems.



If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration. You can also contact us for more information on the environmental performances of our products.











Your Twist 318 Digital Cordless Telephone

2.1 What's in the box?













Twist 318 handset

Power adaptor

Battery door Line cord* Four-pole plug







2x AAA rechargeablebatteries



Twist 318 base



User manual

2.2 What you will also

- For the call log to function, subscribe to Belgacom Caller Line Identification service.
- For PhoneMail to function, subscribe to Belgacom PhoneMail service.

Note

*The line adaptor may not be attached to the line cord. If this is the case, please connect the line cord to the line adaptor before plugging it into the line socket.

Warning

Always use the cables and batteries supplied.


8

Your Twist 318 Digital Cordless Telephone





2.3 Overview of the handset

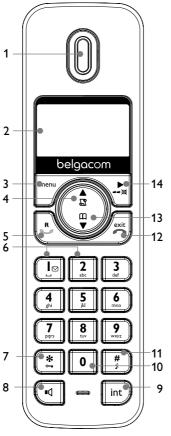

1 Earpiece

2 Display

See page 11 for an overview of the display icons.

3 Menu key

Enter the main menu. Select the option displayed on

Confirm a menu option - OK is displayed on screen.

4 Call log / Scroll up / Volume up

14 Open the calls log. Scroll up through lists and settings. Increase the earpiece volume.

5 Talk / Recall

Make or answer a call. Use recall (R) functions.

6 One-touch dialling keys

Press and hold for one-touch dialling of pre-set numbers.

7 */ Keypad lock

Press and hold to lock / unlock the keypad.

Dial a star.

(





(



8 Loudspeaker key

Activate and deactivate the loudspeaker during a call.

Warning

Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

9 Intercom (at least

2 handsets needed) In standby mode, use to make an internal call.

During a call, use to transfer an external call to another handset.

10 0 key

In standby, press and hold to switch between handset name and date / time display.

11 #/Ringer off/Pause

Press and hold to switch handset ringer on or off. When dialling or storing a number, press and hold to enter a pause (**P**).

Dial a #, displayed as o.

12 End / Exit / Handset onoff

End a call.

When in a menu, go back to standby mode.

Press and hold to switch handset off (when in standby) or on.

13 Phonebook / Scroll down / Volume down

Open the phonebook.
Scroll down through lists and

Decrease the earpiece volume.

14 Redial / Scroll right / Clear / Mute

Open the redial list. Scroll to the right. Delete characters on screen when entering names and numbers.

Mute / unmute the microphone during a call.


Go back to previous menu level – **BACK** displayed on screen.







2.4 Handset display

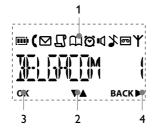

1 Status icons

- **■** Battery status
- On when the line is in use. Flashes when there is an incoming call.
- Flashes when you have missed calls and new number(s) in the call log.
- \square Phonebook is open.
- The alarm clock has been set.
- Handsfree mode is on.
- Handset ringer is off.
- Answering machine on.
 Off when answering machine is off.
 Flashes when you have new messages.

Flashes fast when the memory is full.

Y Steady when the handset is registered and within range of the base.
Flashes when the handset is out of range or searching for base.

❸ Tip

In standby, press and hold to switch between the handset name and date and time display.

2 **▼**▲ displayed

Press or to scroll through the options in a menu, to open the phonebook or call list when in standby.

3 OK displayed

Press the key to select and validate a setting.

4 BACK displayed


Press the to go back to the previous menu option, to cancel an action or to delete a character.







2.5 Overview of the base

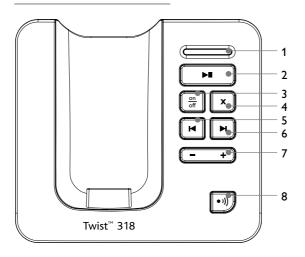



1 LED Status

- On
- Off Long then short flashes
- Flashes evenly
- Flashes quickly
- 2 Play / Stop
- 3 Answering machine On / Off
- 4 Delete
- 5 Skip back
- 6 Skip forward
- 7 Speaker volume up / down
- 8 Paging key (see next page)

12

Your Twist 318 Digital Cordless Telephone

Answering machine on Answering machine off

New message(s)

Recording

Memory Full

Action





8 Paging key

Paging is a useful way of finding lost handsets.

- 1 Press on the base.

 All handsets ring.
- 2 Press again to cancel the paging call or press any key on the handset to stop the paging call.

Standby mode

If you do not press any button on the handset for 15 seconds the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.

2.6 Menu navigation

The basic steps of navigating through the menu and on-screen options.

From the standby screen, press menu.

- The main menu is opened.
- 2 Use the and keys to scroll through the menu.
- Soft key options OK and BACK are displayed.
 Press to select OK and option.
 Press to select BACK and go back to previous menu level, correct a character or cancel an action.
- 4 Press to return to standby.







3 Getting started

3.1 Position the base

Place the base within reach of the telephone line and electricity sockets.


❸ Tip

The position in which you place the base can have an effect on the range and performance of your product. Avoid placing the base too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.


3.2 Connect the base Marning

 Make sure you connect the power adaptor and telephone line cord correctly as incorrect connection could damage the product.

- Always use the telephone line cord supplied with the unit. Otherwise you may not get a dial tone.
- 1 Plug the line cord and the power cable into the sockets at the back of the base.

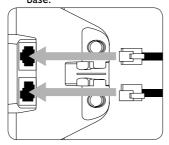

2 Plug the other ends of the line cord and power cable into the telephone socket and mains power socket.

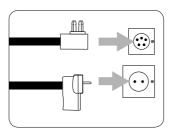

14 Getting started








3.3 Install and charge the handset batteries

Warning

- The handset must be charged for at least 24 hours before using it for the first time.
- Never use any battery type other than the one supplied.
 There is a risk of explosion if the batteries are replaced by an incorrect type.

Your Twist 318 is supplied with two rechargeable batteries.

- Slide off the battery door (if fitted).
- 2 Insert the batteries as indicated and slide the door back on.

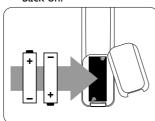

- Place the handset face up on the base to charge. A beep confirms the handset is placed correctly and charging will begin.
- 4 When there is enough power in the batteries, the handset will automatically register with the base. The standby screen is displayed. Or if the display shows #ELEOME: you must select your language.
- Press The language is shown on the display.
- Press or to select your language then press represent.
- Press to go back to the previous screen.

Note

 If you receive a call before the language is set, you can take the call. When the call is ended the display returns to the original screen ready for you to set the language.







- If you make a mistake when choosing your language, please refer to 'Display language', on page 32.
- batteries are fully charged (at least 24 hours).

 The handset batteries are fully charged when the charging animation stops and the [11] (battery charged) icon is displayed.

Warning

If you insert alkaline batteries instead of the NiMH batteries WARNING BATT will appear on the display. Replace immediately with the batteries supplied.

3.4 Using multipacks

If you have purchased a multipack you will have additional handsets, chargers, power adaptors and AAA rechargeable batteries.

- Plug the chargers into a power socket.
- Install the batteries supplied into the other handsets.
- Place the handsets on the chargers to fully charge the batteries for at least 24 hours.





16 Getting started





Using your Twist 318

4.1 Calls

4.1.1 Make a call

- 1 Press .
- 2 Dial the telephone number.

4.1.2 Pre-dial

- 1 Enter the phone number (maximum 24 digits). If you make a mistake
- number entered.

4.1.3 Dial one-touch numbers 1 and 2

1 Press and hold or until the number is displayed and dialled. If no number is stored, you hear a beep.

4.1.4 Call from the phonebook

- 1 Press " The first entry in the phonebook is displayed.
- 2 Scroll or to the
- entry you want.

 3 Press to dial the number.

❸ Tip

Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example,

pressing 2 will show the entries starting with ${\bf A}.$ Pressing 2 again will show the entries starting with \boldsymbol{B} , etc...

4.1.5 Call from the call log

- 1 Press The first entry in the call log is displayed.
- 2 Scroll or to the entry you want.
- Press to dial the number.







⊜ Note

You need to subscribe to Belgacom Caller Line Identification service to be able to see the caller's number in the call log. See 'Call log' on page 25 for more details.

4.1.6 Answer a call

1 The phone rings and (flashes in the display. Press or press to answer the call via the loudspeaker.

♠ Warning

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing. Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

⊕ Tip

If Auto pick-up mode is on (see page 31), simply lift up the handset from its base to answer the call. The default setting is off, in which case you will need to press to answer a call.

⊜ Note

An incoming call has priority over other events. Whenever there is an incoming call, other status in progress such as phone setting, menu navigation, etc. will be aborted.

4.1.7 Adjust volume

1 During a call, press or to adjust the earpiece or loudspeaker volume.

The volume level is shown in the handset display.

4.1.8 Mute

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

During a call, press The microphone is muted.





2 Press again to turn the microphone back on.

4.1.9 End a call

1 Press exit

The call duration is displayed on the handset screen for about 5 seconds.

❸ Tip

If Auto hang-up mode is on (see page 31), simply replace the handset on the base to end the call. The default setting is **on**.

4.2 Switch handset on / off

- 1 Press and hold until the handset switches off.
- 2 Press and hold again to switch the handset back on.

4.3 Intercom

This feature is only available when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.

4.3.1 Call another handset

- 1 Press int
 - If you have two handsets, the other handset is called automatically.
 - If more than two handsets are registered to the base, their numbers are displayed, e.g. INT 2345*. Enter the number of the handset you want to call, or press to ring all handsets.
- 2 Press exit to hang up.

⊜ Note

If the handset does not belong to the Twist 308/318 range, this function may not be available.

4.3.2 Transfer an external call to another handset

- 1 During an external call, press int.
 - Your caller is put on hold.
- Enter the number of the handset you want to call. If there are only two handsets, the other handset is called automatically.





When the other handset answers, announce the caller then press to transfer the call.

If the other handset does not answer, press int to talk to your caller again.

⊜ Note

Before transferring the call, the user is able to switch between both internal and external calls by the int key.

4.3.3 Three-party conference call

- 1 During an external call, press int.
 - Your caller is put on hold.
- Enter the number of the handset you want to call. If there are only two handsets, the other handset is called automatically.
- 3 When the other handset answers announce the call then press and hold into connect both calls.

 If the other handset does not answer, press into to talk to your caller again.

4 Press exit to hang up.

4.4 PhoneMail

Your Twist 318 displays ✓ when you have new messages.

Note

If the PhoneMail number is not pre-stored you can add a number, or overwrite the existing stored number. See 'Store a phonebook entry as a one touch number', on page 24.

4.4.1 Dial your PhoneMail service

The number is displayed and dialled. Follow the voice prompts to play, save and delete your messages.

Or

If the ☑ icon is displayed, press В to dial the PhoneMail number.

⊜ Note

You can turn off the ☑ icon. When viewing the calls log, press and hold .

lacksquare

Phonebook

The Twist 318 handset phonebook can store up to 100 names and numbers.

Note

Numbers can be up to 24 digits long and names up to 12 characters long. Entries are stored in alphabetical order.

View and dial phonebook entries **⊜** Note

The first time \Box is pressed, the display shows the name of any pre-stored one-touch network service numbers, e.g. PHONEMAIL.

- 1 Press . Display shows the first entry.
- 2 Scroll or to the entry you want.

Or

To search alphabetically, press then press the key with the first letter of the name, e.g. if the name begins with **N**, press 6 twice.

The display shows the first entry beginning with N. If required, scroll to the exact entry.

Press to dial the entry displayed.

5.2 Store an entry

- 1 Press menu. PHONEBOOK is displayed.
- 2 Press menu. NEW ENTRY is displayed.
- Press menu. ENTER NAME is displayed.
- Enter a name and press 5 Enter a number. Press menu
- to save. Press to return to
- standby.

⊜ Note

Cancel storing an entry by pressing at any time during the process.

21 Phonebook







5.3 Entering names

Use the alphanumeric keypad to enter names in the phonebook. See '5.4 Character map'.

For instance to enter the name 'Paul'.

- Press 7 once
- Press 2 once
- Press 8 twice
- L Press 5 three times

To enter a space, press Press to delete a character or press and hold to delete all characters.

5.4 Character map

Use the keypad to enter names and characters.

	Space		1	-	<	>	*
2 abc	Α	В	С	2			
3 def	D	Ε	F	3			
4 ghi	G	Н	I	4			
5	J	K	L	5			
6	М	Ν	0	6			



5.5 Enter a pause

If your Twist 318 is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to get an outside line. A pause is normally stored after the switchboard access code (e.g. 9).

1 When storing a number, press and hold # until the display shows P. Then continue storing the number.

5.6 View an entry

- 1 Press menu twice.
 2 Scroll to LIST ENTRY and press menu.
- Enter the first letter of the name to search alphabetically then scroll 😭 or 😷 to the exact entry.

Phonebook



- 4 Press to display the number.
- 5 Press to return to standby.

5.7 Edit an entry

- 1 Press .
- want to edit and press EDIT ENTRY is displayed.

 Press key again.
- Edit the name and press to confirm. Use to delete characters.
- Edit the number and press to confirm.
- 5 Press to return to standby.

5.8 Delete an entry

- 1 Press 😷
- 2 Scroll or to the entry you want to delete and press
- and press manu.

 3 Scroll to DELETE
 ENTRY and press manu.
- 4 Display shows CONFIRM?.
- 5 Press exit to return to standby.

5.9 Delete all entries

- 1 Press menu twice.
- 2 Scroll to DELETE ALL and press menu.
- Display shows CONFIRM?.

 Press to confirm or to return to standby.

5.10 One-touch keys

The or keys have pre-stored phone numbers for one-touch dialling.

⊜ Note

The pre-stored numbers usually give you access to services offered by Belgacom. You can set the one touch keys to dial numbers stored in your handset phonebook.

5.10.1 Dial a one-touch number

- 1 Press and hold or 2.
 The number is displayed and dialled
- 2 Press to cancel the dialling and return to standby.



5.10.2 Store a phonebook entry as a one-touch number (direct memory)

- 1 Press twice.
 2 Scroll to DIRECT MEM
- and press or to select KEY for KEY 2 and press menu . The current entry, if any, is displayed.
- 4 Press menu again to open the options menu.
- Press to ADD an entry from the phonebook.
- 6 Scroll or to the entry you want. Press to confirm or to return to standby.

- 4 Press again to open the options menu.
 5 Press to select DELETE
- and press menu.
- 6 Display shows CONFIRM?.
 Press to confirm.
 NO ENTRY is displayed.



5.10.3 Delete a one-touch number

- 1 Press twice.
 2 Scroll to DIRECT MEM
- and press or to select

 KEY I or KEY 2 and

 press or The The current entry is displayed.

24 Phonebook





6 Caller ID and Call log

If you have subscribed to Caller Line Identification (CLI), and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date & time of the call.

⊜ Note

 If the caller's number is stored in your phonebook along with a name, the name will also be displayed.

6.1 Call log

The call log contains details of missed and received call. Details may include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

⊜ Note

 The call log holds details of up to 20 calls.

- When the call log is full, a new call replaces the oldest in the list.
- If you receive more than one call from the same number, only the most recent call is kept in the call log.

When you have missed calls (incoming calls that you haven't answered) the \square icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the icon on the other handsets continue to flash (multipack users only).



6.1.1 View the call log

1 Press 🔒

The most recent number – or name if stored in the phonebook – is displayed. New calls are marked with the \square icon flashing.

2 Scroll or through the calls log.

At the end of the log, you will hear a beep.





If the number has more than 12 digits, press 🛂 to see the rest of the number. Press again to see the date and time of the call.

3 Press to return to standby.

Note

The \prod icon switches off once all new calls have been viewed.

6.1.2 Dial from the call log

- 1 Press to open the calls
- 2 Scroll or to the entry <u>yo</u>u want.
- 3 Press **b** to dial.

6.1.3 Save a number from the call log to the phonebook

- 1 Press The most recent call is displayed.
- 2 Scroll or to the number you want to save and press menu.
- 3 SAVE NUMBER is displayed. Press menu.

4 Enter a name and press menu. 5 The number is displayed. If required, edit the number and press to save. 58VED is displayed.

6 Press exit to return to standby.

6.1.4 Delete a call log entry

- 1 Press 🔓. The most recent call is displayed.
- 2 Scroll or to the numbe<u>r y</u>ou want.
- Press then scroll then
- Press to confirm or to cancel and return to standby.

6.1.5 Delete entire call log

- 1 Press 🔒 The most recent call is displayed.
- 2 Press menu then scroll to DELETE RLL and press menu.







3 Display shows CONFIRM?. Press to confirm or to cancel and return to standby.

6.2 Redial

The Twist 318 lets you redial the last five numbers called. Numbers can be up to 24 digits long.

6.2.1 Redial the last number

- The last number dialled is displayed.
- 2 Use and to scroll
- through the list.

 3 Press to dial the number or exit to return to standby.

6.2.2 Copy a redial number to the phonebook

- 1 Press , scroll or to the entry you want to copy and press menu.
- 2 Display shows 5AVE NUMBER. Press menu.

Caller ID and Call log

- 3 Enter a name and press menu.
- 4 Edit the number if required and press menu. SRVED is displayed.
- 5 Press exit to return to standby.

6.2.3 Delete a redial list entry

- 1 Press ♣, scroll 😭 or 뿌 to the entry you want to delete and press menu.
- 2 Scroll to DELETE and press menu.
- 3 Display shows CONFIRM?. Press to confirm, then press to return to standby.

6.2.4 Delete entire redial

- 1 Press then press and scroll to DELETE RLL then press menu
- 2 Display shows ONFIRM?. Press to confirm.
- Press to return to standby.







Clock & Alarm

If you subscribe to Belgacom Caller Identification service, the time on your Twist 318 may be set automatically each time you receive a call.

You can also set or adjust the time using the Clock & Alarm menu.

7.1 Set date and time

1 Press menu, scroll to CLOCK/RLARM and press menu .

- Display shows DATE & TIME.
- 2 Press enter the date in the format DD-MM e.g. 04 08 for 4 August and press menu
- 3 Enter the time using the 24 hour format HH - MM, e.g. 14 45 for 2.45pm and press to confirm.

 4 Press to return to
- standby.

❸ Tip Press exit to cancel at any time.

7.2 Set alarm

- 1 Press menu, scroll to CLOCK/ALARM and press
- 2 Scroll to SET ALARA and press menu
- 3 Scroll or to OFF, ON ONCE or ON DAILY and press menu.
- 4 If you select ON ONCE or ON DAILY, enter the time using the 24 hour format HH - MM, e.g. 14 45 for 2.45pm and press menu.
- 5 Press to return to standby.

When the alarm goes off, press any key to stop the ring.

⊜ Note

- · Once the alarm is set to on, the o icon is displayed.
- · The alarm will ring at the medium level. ALARA ON and the owill flash on the display.





7.3 Set alarm ringer melody

There are three alarm ringer melodies.

- 1 Press menu, scroll to [LO[K/ALARM and press menu .
- 2 Scroll to ALARM TONE and press menu. Melodies are played.
- 3 Scroll or to MELODY 1, 2 or 3 and press menu.

Personal settings

8.1 Handset tones

Warning

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing.

8.1.1 Ring volume

Choose from : Ringer Off, Low, Medium, High and Boost.

Note

The default setting is **Medium**.

- 1 Press menu, scroll to PERSONAL SET and press menu.

 HANDSET TONE is displayed.

 Press menu.

 RING VOLUME is displayed.
- 3 Press menu.

The current volume is played.

4 Press or to adjust the ringer volume level and press to save the setting.



Personal settings





5 Press to return to standby.

8.1.2 Ringer melody

Choose from 10 ringer melodies.

- 1 Press menu, scroll to PERSONAL SET and press menu. HANDSET TONE is displayed.
- 2 Press menu , scroll to RING MELODY and press menu. Currently melody is played.
- 3 Press or to select the ringer melody. A sample of the ringer melody is played.
- 4 Press menu to save the setting.
- Press to return to standby.

8.1.3 Key tones on / off

When you press a key on the handset you hear a beep. You can switch these beeps on or

1 Press menu, scroll to PERSONAL SET and press menu.

HANDSET TONE is displayed.

- 2 Press menu, scroll to
- 3 Scroll or to select ON or OFF and press menu to confirm.
- 4 Press to return to standby.

8.1.4 First ring

Your Twist 318 will automatically detect the Caller Identification (subscription dependent). Your phone will not ring until this information is displayed. If you wish to hear the ring before the Caller Identification is displayed you can manually set FIRST RING to ON.

- 1 Press menu, scroll to PERSONAL SET and press menu.

 HRND5ET TONE is displayed.

 Press menu, scroll to

 FIRST RING and press menu.
- Scroll or to select ON or OFF and press menu to confirm.

 \bigcirc

30



4 Press to return to standby.

8.2 Handset name

Personalise your handset, for example, with a name or location – Lisa or Bedroom.

- Press menu, scroll to PERSONAL SET and press menu.
- 2 Scroll to HANDSET
 NAME and press .
 The current name is displayed.
- Press to delete the current name.
- Enter the name you want
 maximum 10 characters
 and press to save.
- 5 Press to return to standby.

8.3 Auto pick-up

When auto pick-up is switched on, you can answer a call just by lifting the handset off the base or charger.

If switched off, you have to press to answer a call. The default setting is **Off**.

- Press menu, scroll to PERSONAL SET and press menu.
- 2 Scroll to AUTO PICK UP and press
- 3 Scroll or to select
 On or OFF and press to confirm.
- Press to return to standby.

8.4 Auto hang-up

When auto hang-up is switched on, you can end a call just by replacing the handset on the base or charger. If switched off, you have to press to hang up. The default setting is **On**.

- 1 Press menu, scroll to PERSONAL SET and
- press rew.

 2 Scroll to AUTO HANG-UP and press rew.
- 4 Press to return to standby.

(



8.5 Display language

- 1 Press menu, scroll to PERSONAL SET and
- press to LANGUAGE and press menu
- 3 Scroll or to select the language you want and press to confirm.
- 4 Press ot return to standby.

8.6 Keypad lock

Prevent accidental dialling while carrying the handset by locking the keypad.

- 1 Press and hold 🌋 . The display shows KEY5 LOCKED.
- 2 To unlock the handset, press and hold 🌉 again.

Note

While the keypad is locked, you can answer incoming calls as normal.

9 Advanced settings

9.1 Recall time

This setting is useful to access certain network and PABX/ switchboard services. The default Twist 318 recall time is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

⊜ Note

The use of your Twist 318 cannot be guaranteed on all PABX.

- Press , scroll to ADVANCED SET and
- press menu.

 2 RECALL TIME is displayed.
 Press menu.
- 3 Scroll or to select the setting you want, SHORT, MEDIUM or LONG and press to confirm.
- 4 Press to return to
- standby.





9.2 Call barring

Prevent certain numbers from being dialled from your Twist 318. Store up to four specific numbers, each up to 4 digits - for example, international or local prefixes.

Bypass call barring by switching the setting Off or On.

Note

If you switch Call barring on, BARR MODE ON will be displayed on your screen in standby mode.

9.2.1 Switch call barring on / off

- Press menu, scroll to ADVANCED SET and press
- 2 Scroll to [ALL BARRING and press
- 3 Enter the master PIN (default setting 0000) and press menu.
- 4 NODE is displayed. Press menu.

5 Scroll g or to select ON or OFF and press to confirm. You can now set the number (see below).

9.2.2 Set a number to be barred

- 1 Press menu, scroll to ADVANCED SET and press menu
- 2 Scroll to [ALL BARRING and press menu.
- 3 Enter the master PIN (default setting 0000) and press menu .
- 4 Scroll to NUMBER and press menu .
 - NUMBER 1 is displayed.
- 5 You can scroll to the next number, if needed.
- Press and enter the digits you want to bar.
 Press to confirm.
 Press to return to
- standby.







9.3 Baby call

When activated, this feature allows you to dial a number by pressing any key on your handset (except .This feature is very useful for access to emergency services.

Note

First set the baby call number, then activate the function.

9.3.1 Switch baby call on or off

- Press menu, scroll to ADVANCED SET and press
- 2 Scroll to BABY [ALL and press menu.
- 3 Enter the master PIN (default setting 0000) and press menu.
- 4 NODE is displayed. Press menu
- 5 Scroll or to select ON or OFF and press menu to confirm.
- 6 Press to return to standby.

Note

If you switch Baby Call on, BABY [RLL ON will be displayed on your screen in standby mode.

To switch Baby call off again :

- 1 Press exit.
- 2 OFF? is displayed. Press menu to confirm.

9.3.2 Set the baby call number

- 1 Press menu, scroll to ADVANCED SET and press menu .
- 2 Scroll down to BABY [ALL and press menu.
- 3 Enter the master PIN (default setting 0000) and press menu.
- 4 Scroll # to NUMBER and press menu .
- 5 Enter the number.
 Press to confirm.
 6 Press to return to

standby.





9.3.3 Dial a baby call number

1 When a baby call number has been stored and the baby call setting switched on, press any key (except on the keypad to dial the number.

⊜ Note

When baby call is switched on, you can still answer any incoming call as normal.

9.4 Registration

Up to 5 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

⊜ Notes

 The instructions described below apply specifically to your Twist 318 handset.
 If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset. The Master PIN is required before you can register or unregister handsets. The default PIN is 0000.

9.4.1 Register a handset

1 At the base, press and hold
1) for about 3 seconds.

The base station emits a beep when it is ready to accept registration.

Note

The base is able to accept registration from a handset within 90 seconds. If is pressed, registration is cancelled.

- 2 At the handset, press and scroll to RDVRNCED SET and
- press menu.

 3 Scroll to
 REGISTRATION and press
- If necessary, scroll REGIST. BRSE and press

35



Advanced settings





The available bases are displayed with number of the current base flashing.

4 Scroll or to the base you want – 1, 2, 3 or 4 – and press when the base is found you hear a beep. If not found, the display shows UNREGISTERED.

9.4.2 Select a base

You can register your Twist 318 handset with up to 4 bases. Once registered, you can switch between bases, for example, bases at home and at work.

- At the handset, press and scroll to ADVANCED SET and press memory.
- 2 Scroll to
 REGISTRATION and press
- SELECT BASE is displayed. Press menu.

9.4.3 Unregister a handset

- 1 At the handset, press and scroll to ADVANCED SET and press mean.
- 2 Scroll to UNREGISTER and press menu.
- 3 Enter the 4-digit master PIN and press renu.
- 4 Scroll or to the handset you want to unregister and press "".

 UNREGISTERED is displayed on the handset screen.

(

36

Advanced settings





9.5 PIN

The 4-digit master PIN is used when registering or unregistering a handset and when changing some settings on your Twist 318. The default setting is 0000. You can change this PIN for more security.

- 1 Press menu, scroll to ADVANCED SET and
- press menu.

 2 Scroll to PIN and press menu.
- PIN (default setting 0000) and press PIN (default setting 0000)
- 4 Enter the new PIN and press menu.
- 5 Press to return to standby.

Note

Make a note of your PIN. If you forget your PIN you will need to reset your handset.

9.6 Reset

This will reset your Twist 318 to its default settings.

⊜ Note

Entries stored in the phonebook and new answering machine messages are retained.

- 1 Press menu, scroll to RDVANCED SET and
- press to RESET and press many.
- 3 CONFIRM? is displayed. Press menu.
- 4 Press to return to standby.

9.6.1 Default settings

Handset name	BELGACOM
Key tone	On
Auto pick up	Off
Auto hang up	On
Ringer melody	Ring 1
Ringer volume	Medium
Earpiece volume	3
Phonebook	Unchanged
Call log	Empty
Redial list	Empty
Master PIN	0000










Keypad lock Off Clock 00:00 Alarm Off Answer Machine On Answer Mode Answer & Record Outgoing message Pre-defined Ring delay 6 Remote Access On Handset screening Off Base screening

10 Using your

answering

machine

Your Twist 318 answering machine records unanswered calls when it is activated. It can store up to 59 messages within the maximum recording time of 12 minutes. Each message can be up to 3 minutes long. Your personal outgoing messages can be up to 1 minute long.

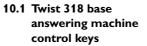

- Press to turn the answering machine on/off.
- Play new messages.

 Press and hold to play all stored messages.

 Press to stop playback.
- Skip to the next message during message playback.







- Replay current message. Press twice to skip back to previous message.
- Delete current message during message playback. Long press to delete all messages when TAM is in standby mode.
- Increase speaker volume during message playback.
- Decrease speaker volume during message playback.

The display shows the number of new messages. If there are no new messages, all stored messages are played. Press to display the

callers identification. Press again to see the

date and time of the call.

⊜ Note

If you have not subscribed to the Caller Line Identification this option is not available. This also applies for memo recordings.

- 3 During playback press menu to display a list of options. Use the and wkeys to change the options:
 - REPERT press menu to repeat current message.
 - NEXT MESSAGE press menu to play next message.
- PREV MESSAGE press to play previous message.
- DELETE press menu to delete the current message.
- SAVE NUMBER press to store the number, if available, in the phonebook.

10.2 Switch on / off

- 1 Press menu scroll to RNSW MRCHINE and press menu.
- 2 Scroll 😲 to RNSW ON/OFF and press menu.
- Press 😭 or 😲 to display ON or Off and press menu.

10.3 Play messages

- 1 Press represented scroll to ANSW MACHINE and press menu .
- 2 PLRY is displayed. Press to play new messages.



 \bigoplus



⊜ Note

If you have not subscribed to the Caller Line Identification this option is not available.

4 Press to stop playback and return to standby.

10.4 Delete all messages

- 1 Press scroll to ANSW MACHINE and press
- 2 Scroll to DELETE ALL and press
- 2 CONFIRM? is displayed.
 Press renu to confirm.

Speak your message.
Press to end recording.

10.6 Outgoing messages

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

10.6.1 Answer & Record

The caller can leave a message. The pre-recorded message is "This is an answering machine, please leave your message after the tone."

10.5 Record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

- Press menu scroll to ANSW MACHINE and press menu.
- 2 Scroll to RECORD MEMO and press or .

 Display shows RECORDING.

10.6.2 Answer Only

The caller can listen to your announcement but cannot leave a message. The pre-recorded message is "This is an answering machine, please call back later".

10.6.3 Set answer mode Set your machine to Answer &

Set your machine to Answer & Record or Answer Only.





- Press scroll to press menu .
- 2 Scroll to ANSWER MODE and press menu. The current answer mode is displayed.
- 3 Scroll or to select ANSWER & RECORD or ANSWER ONLY and press menu
- 4 Scroll or to display the message type you want: PERSONALISED to set your own recorded message or PREDEFINED for the prerecorded message.
- Press to confirm. If you select PERSONALIZED, see following paragraph.

10.6.4 Record, play or delete your own outgoing message

Answer & Record invites your callers to leave a message. Answer Only lets callers hear your announcement but they cannot leave a message.

- 1 Press scroll to ANSW MACHINE and press menu .
- 2 Scroll to ANSWER MODE and press menu.
- 3 Scroll or to select ANSWER & RECORD or ANSWER ONLY and press menu Use the 🖨 or 📮 key to
 - select PERSONALISED then press menu.
- 4 PLRY is displayed. Press menu. Current message is played back.
 - Scroll to select RECORD MESS - press menu. Display shows RECORDING and a beep is emitted. Speak your message.
 - Press menu to end recording.

 DELETE press menu. The pre-recorded message will be automatically reinstated.
- 5 Press to confirm.







10.7 Answer machine settings

10.7.1 Ring delay

Select the number of rings before your answering machine picks up the call. Choose from 2-9 rings or Toll Saver.

⊜ Note

If Toll Saver is selected, then:

- If you have new messages your phone answers after 2 rings.
- If there are no new messages it will answer after 6 rings.
 So you have the option to hang up, saving the time and cost of a call.
- If the memory is full, it will answer after 10 rings in Answer Only mode.
- Press record to ANSU MACHINE and press record.
- Scroll to ANSW SETTINGS and press menu.
- 3 RING DELRY is displayed.
- 4 Scroll or to select the number or rings - 2-9 or TOLL SAVER.

5 Press menu to confirm.

10.8 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your Twist 318 from another phone. The default setting is **on**.

- Call your Twist 318. When you hear your outgoing message, press #.
- 2 Enter your 4 digit PIN. The default code is 0000. You hear a confirmation beep.

⊜ Note

Change this code for increased security, see 'PIN', on page 37.

3 After entering your PIN, as stated above, use the keypad to operate your Twist 318 answering machine:

Play all messages	2
Play previous message	1
Play next message	3
Delete message plaving	6



Switch answer machine on Stop playback Switch answer machine off

At the handset:

I If you want to interrupt and take the call press 🕒 or

10.8.1 Remote Access on / off

- 1 Press eroll to ANSW MACHINE and press menu.
- 2 Scroll to RNSW SETTINGS and press menu.
- 3 Scroll Tto REMOTE ACC and press menu.
- 4 Scroll or to select ACTIVATED or DERCTIVATED.

Press to confirm.

At the base:

- 1 When a caller is leaving a message, press 🛨 or 🗖 to adjust the volume to listen to your caller.
- 2 To interrupt and take the call on the handset, press

10.9.1 Switch handset call

screening on / off



10.9 Call screening

Use your handset or base

speaker to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call.

- 1 Press eroll to RNSW MRCHINE and
- press menu.

 2 Scroll to RNSW SETTINGS and press menu.
- Scroll # to #5 SCREENING and press menu.
- Scroll or to select ON or OFF.
- 5 Press to confirm.

The default settings are :

- · Handset call screening: Off
- · Base call screening: On





10.9.2 Switch base station call screening on / off

- 1 Press scroll to ANSU MACHINE and press menu.

 2 Scroll to RNSW
- SETTINGS and press menu.
- 3 Scroll to 85
- 5[REENING and press or to select ON or OFF.
- 5 Press to confirm.

If the memory becomes full while a caller is leaving a message, they will hear a beep and the call is ended.

10.10 Memory full

The memory is full if there is less than 15 seconds of recording time left or if the maximum total of 59 messages has been reached.

When the memory becomes full:

- The LED indicator on the base flashes quickly.
- 🗖 flashes quickly on the handset display.
- The machine will automatically switch to Answer Only mode.






11 Maintenance and replacement


11.1 Cleaning

- Simply clean the handset and base with a damp(not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product.
- Never use a dry cloth as this may cause a static shock.

2 Remove the old batteries.

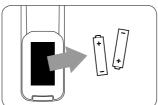

3 Place the new batteries in the handset.

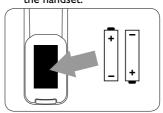





11.2 How to replace the battery


Warning

Always use AAA rechargeable batteries.

Slide off the battery cover.

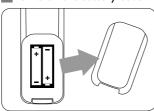

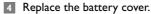

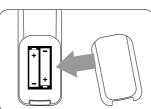

(



12 Technical data

Battery life and range
Talk time and stand-by time
When the battery is fully
charged, the talk time of your
Twist 318 is approximately
10 hours and the stand-by time
is approximately 250 hours.

Low battery warning
The battery level is shown
in the top left of the handset

display.

When the battery level

becomes low, you hear a beep once every minute (during a call) and the icon flashes. If the battery level becomes exceedingly low, the phone automatically switches off shortly after the alert.

The approximate power levels of your battery are :

- Fully charged.
- Partially charged.
- Running low.

Battery type

warning beep.

is switched on.

The batteries that are used on your Twist 318 are AAA NiMh 550mAh.

Out of range warning In ideal conditions the range of the phone is up to 50 metres indoors and 300 metres outdoors. When you are getting close to being out of range

during a call, the handset gives a

If the handset moves outside this range, the handset gives and error beep, the call is lost and some other functions will not be available. You will hear an error beep if you try to use them, provided the error beep

When you come back in range of the base, the handset gives another beep.



46 Technical data





13 Frequently asked questions

Charging

The icon is not blinking when the handset is placed on the base

- Bad battery contact move the handset slightly
- Dirty contact Clean the battery contact with a cloth moistened with alcohol
- Battery is full no need to charge

Calls

No dialling tone

- No power check the connections. Reset the phone: unplug and plug back in the mains.
- Batteries are empty charge the batteries for at least 24 hours
- You are too far from the base
 move closer to the base

- Wrong line cable use the line cable provided
- Line adaptor (when needed) is not connected to the line cord – connect the line adaptor (when needed) to the line cord

Poor audio quality

The base is too close to electrical appliances, reinforced concrete walls or metal doorframes – move the base at least one metre away from any electrical appliances

The Y icon is blinking

- Handset is not registered to the base – register the handset to the base
- You are too far from the base
 move closer to the base

No ring tone

The ring tone is deactivated. Increase the volume.

Caller Line Identification (CLI) service does not work

Check your subscription with Belgacom







Phonebook

A phonebook entry cannot be stored

The phonebook is full. Delete an entry to free memory.

Display

No display

- Try recharging or replacing the batteries.
- Try disconnecting and connecting the base power supply and follow the procedure to register a handset (see page 35).
- Base may be busy with another handset. Wait until it is available.

Registration

Unable to register another handset

Maximum number of 5 handsets has been reached. The display shows a scrolling dash. You must unregister a handset in order to register a new one.

Interference

Noise interference on your radio or television

Your base or charger may be too close. Move it as far away as possible.

Answering machine

Answering machine does not record messages

• Switch the answering machine on.

 The memory may be full. Is the base LED flashing quickly? If so, you will need to delete some messages.







 Answer mode may be set to Answer Only. Change the mode to Answer & Record.

Cannot access messages remotely

- Remote access may be switched off.
- If wrong PIN is entered a beep is played. You can enter the PIN once again.

Cannot record outgoing message

 The memory may be full. Is the base LED flashing quickly? If so, you will need to delete some messages.

Answering machine stops automatically

- The memory may be full. If so, you will need to delete some messages.
- The maximum message length is 3 minutes.







14 Declaration of conformity

We,

PCE 9, rue Maurice Trintignant 72081 Le Mans Cedex 9 France

Declare that the products $Twist^{TM}$ 318 are in compliance with ANNEX IV of the R&TTE-Directive 1999/5/EC and then with the following essential requirements :

Article 3.1 a: (protection of the health & the safety of the user)
 Safety: EN 60950-1 (2001) / A11 (2004)

 Article 3.1 b: (protection requirements with respect to electromagnetic compatibility)
 EMC: ETSI EN 301 489-6 V1.2.1 (2002) & ETSI EN 301 489-1 V1.6.1 (2005)

Article 3.2 : (effective use of the radio spectrum)
 Radio : EN 301 406 V1.5.1 (2003)

The presumption of conformity with the essential requirements regarding Council Directive 1999/5/EC is ensured.

Date: 05/04/2007 Le Mans

CE0168

Product Quality Manager Home Communication

50

Declaration of conformity



15 Guarantee terms

The Equipment you have bought has been carefully selected by Belgacom and is covered by a two-year warranty on spare parts and labor in the event of any material or manufacturing defect, unless otherwise specified. The warranty shall be valid from the date on which the equipment is collected or delivered. If you have any problems with the equipment, you should take it to a Teleboutique or to one of our authorized agents, in its entirety and in its original packaging, or in packaging providing the same degree of protection, together with the original receipt. The addresses for our Teleboutiques and authorized agents are given in the Information Section of the

White Pages.

Your equipment will be repaired or replaced free of charge, on presentation of the receipt, in the event of any material or manufacturing defect.

Belgacom alone shall determine what repairs and/or replacements are necessary.

The warranty on the repaired or replaced equipment shall end on the date on which the original warranty on the purchased equipment expires, but shall not be less than 3 months.

The warranty shall not cover:

- damage of any kind that does not predate the sale;
- any damage, faults or defects attributable to the Customer or to causes unrelated to the Equipment: lightning, power surges, humidity, accidental damage, improper use or poor maintenance, failure to comply with the instructions in the user manual, and force majeure;

 \bigoplus





 the repair or replacement of movable parts (cords, wires, plugs, aerials, etc.), consumables (cells, batteries, paper, ink, etc.) needing regular replacement and the supply of cleaning products.

The warranty shall not apply:

- to any changes or repairs to the terminal Equipment undertaken by the Customer himself / herself or through the services of persons not designated by Belgacom;
- if the Customer removes or tampers with the manufacturer's serial numbers and / or brand names on the terminal Equipment.
- Belgacom shall not be liable for any indirect or immaterial loss sustained by the Customer as a result of the malfunctioning of the terminal Equipment, such as any loss of production, revenue or contracts.

The General Terms and
Conditions for the Sale of
Terminal Equipment can be
obtained on request from any
Belgacom service available to
the public or at
www.belgacom.be.
Belgacom SA under public law,
Bd. du Roi Albert II 27,
B-1030 Brussels
VAT BE 0202.239.951,

belgacom

Brussels Register of Legal

Entities







16 Index

Access the redial list 10, 27 Add entry to phonebook 21 Adjust earpiece volume 9,18 Answer a call 9, 18

Base overview 12 Box contents 8

С

Caller identification 25 Call another handset 19 Call a number from the call log 17 Call from the phonebook 17 Call network voicemail 20 Change handset ringer melody 30 Change one-touch phone numbers 9, 24 Change ringer volume 29 Change system PIN 37 Charge batteries 15 Conference call 20 Conformity 50 Connect the base 14

Declaration of conformity 50 Delete all messages 40 Delete all phonebook entries 23 Delete an entry in the call log 26 Delete a message 39 Delete a phonebook entry 23 Delete a redial list number 27 Display icons and symbols 11

Earpiece volume 9, 18 Edit a one-touch button number 24 Edit a phonebook entry 23 End a call 19, 31

F

Frequently asked questions 47

Guarantee terms 51

Handset keys 9 Handset overview 9

I

Identify your caller 25 Install batteries 15, 45

Index 53







Listen to your message 39 Lock the keypad 9, 32 Loudspeaker volume 12, 18, 43

Make a call 17 Memory full 44 Menu navigation 13

Navigate the menu 13 New message 12, 39

One-touch keys 9, 17, 23 Outgoing message 40, 41

Page a handset 13
PhoneMail 20
Pre-dial a number 17
Put a caller on hold to answer a second caller 19, 20

Record outgoing message 40, 41 Recycle your phone 5 Redial the last number 27 Register a handset to a base 35

54

Reinstate pre-recorded outgoing message 40 Remote access 42 Reset handset 37 Ring delay 42

Safety information 4 Save a call log number to the phonebook 26 Save a redial number to the phonbook 27 Set date and time 28 Set recall (flash) mode 9, 32 Set ringer melody 29, 30 Set ringer volume 29 Switch answering machine on remotely 43 Switch answering machine on / off 39 Switch between internal and external calls 20 Switch handset on / off 19

Transfer an external call to another handset 19

Switch key beeps on / off 30 Switch secrecy on / off 18

Unregister a handset 36

Index





View a call log 25
View phonebook entries 21, 22

W Warranty 51





55 Index



