

User manual

Maestro 60



proximus

Dear customer,

You have just acquired a new generation telephone and thank you for placing your confidence in us.

This device has been manufactured with the utmost care. If you should have difficulties in operating it, we recommend that you consult this user manual.

To operate the device safely and easily, please read carefully the paragraph "Recommendations and safety instructions", page 4.



The CE label confirms that the product complies with the 1999/5/EC regulations of the European Union Parliament regarding wireless systems and telecommunications.



CONTENTS

Recommendations and safety instructions 4

Unpacking..... 5

Phone description	5
database	5
Your handset.....	6
Control panel.....	7
Using the touch buttons	7
Display screen.....	8

Installation 9

Connecting the base	9
Setting up the handset	9
Charging batteries	9
Navigating in the menu	10
Browsing through the menus	10
Menu structure	11
Settings required before use	11

Phone use..... 12

Handset location	12
Calling	12
Receiving a call.....	12
Making a call	13
Ending a call.....	13
During a call.....	13
"Calls" function button.....	14
Secret mode.....	14
Hands-free mode/Speakerphone mode.....	14
Calling the last number dialled.....	15
Call time display.....	15

Phonebook 15

Creating an entry	15
Editing an entry	16
Associating a ring tone with a phonebook entry	16
Deleting an entry	16
Calling using the phonebook	16
Searching for a contact	16

Call log..... 17

Viewing the received and dialled call log	17
The events log	17
Viewing the events log.....	17
Activating/deactivating the new event information screen.....	18
Clearing notifications	18
Information	18

Accessories..... 18

Alarm clock	18
Activating / deactivating the alarm clock.....	18
Changing the alarm clock ring tone.....	18
Modifying the alarm clock time	19
Timer	19
Activate the timer.....	19
Changing the programmed time of the timer.....	19
Displaying or hiding the programmed time of the timer.....	19
Changing the timer ring tone	19

Ring tones 20

Changing the ring tones	20
Activating or deactivating the beeps	20
Activating/deactivating the silent mode	20

Settings..... 21

Modifying the date and time	21
Adjusting the contrast	21
Modifying the language	21
The voicemail number (according to operator)	21
Demo	22
Advanced settings	22
Modifying the base code.....	22
Base settings.....	23
Line settings	24

Answering machine..... 25


Enabling / disabling the answering machine	25
Modifying the outgoing message	26
Recording a personal outgoing message.....	26
Deleting your personal outgoing message.....	26




<i>Listen to a personal message</i>	26
<i>Playing messages</i>	26
<i>Remote access to answering machine</i>	27
<i>Deleting all the old messages</i>	27
TAM settings	28
<i>Activating and deactivating call screening</i>	28
<i>Modifying the remote access code</i>	28
<i>Number of rings</i>	28
Replacing the batteries	29
Pairing of Maestro 60 handsets on the Maestro 60 base	29
Appendix	30
<i>Care and Maintenance</i>	30
<i>Problems</i>	30
Technical characteristics	31
<i>Initial condition</i>	31
Environmental information	32
Guarantee terms	33





RECOMMENDATIONS AND SAFETY INSTRUCTIONS


 Do not install your DECT telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.50 metres of a source of water or outside. This device is designed for use in temperatures of between 5 °C and 45 °C.

 Do not attempt to remove screws or open the appliance. It does not contain any user-replaceable parts.


 Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this user manual and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 230 volt power supply. Therefore the sockets should be near the device and easily accessible.


 This device is designed to be used for connecting to the public telephone network. If problems should arise, contact your nearest specialist dealer. Only use the telephone cable supplied.


 For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock.


 To avoid damaging your handset/base, only use certified rechargeable batteries NiMH 1.2 V 450 mAh, never use non rechargeable batteries. Insert the batteries in the handset/base battery compartment respecting polarity.

 The used battery must be disposed of in line with the recycling regulations in this user manual.

 Your DECT telephone has a range of approx. 50 metres indoors and up to 300 metres outdoors. The range can be affected by the proximity of metal objects, such as a television and electrical devices. Zones without reception may appear owing to elements in the building. This can cause brief interruptions in the conversation, caused by faulty transmission.

 Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information.

 In regions greatly affected by electrical storms we recommend that you protect your telephone circuit with a special fixture for excess voltage.

 Your Maestro 60 has anti-skid pads that should leave no traces on your furniture and ensure stability. However, given the wide variety of finishes used by furniture manufacturers, traces may appear on surfaces in contact with the parts of your Maestro 60. Proximus decline all responsibility in any such cases of damage.

UNPACKING

Place the box in front of you, open it and make sure it contains the following items: one base Maestro 60, one handset with its batteries, one telephone line cord, one equipped power adapter and the user guide.

PHONE DESCRIPTION

database

Maestro 60 has the latest technology, such as browser touch buttons, HiFi ringtones, dialling light and sound effects.



- Kurzer Druck:
Anruf der Hörer (Paging)
- Langes Drücken :
Anmeldemodus

* Anzeige: gibt die Position des Lautsprechers im Mobilteil an.


** Taste drücken und halten (1) :

- Wenn der Anrufbeantworter ausgeschaltet ist: Zugriff auf Voice-Messaging.

- Wenn der Anrufbeantworter eingeschaltet ist: Zugriff auf Ihre Nachrichten auf dem Anrufbeantworter.




Indicator light operation:

- *Fast flashing: the base is in pairing mode (handset registration),*
- *Slow flashing: new events (voice mail messages, missed calls, answering machine messages...).*
- *Make sure that when the handset is on the charger, the  icon is animated.*

Your handset

Maestro 60's particularity is that it has a wireless handset.

The single button on the handset allows the user to hang up or answer an incoming call. It should be noted that the handset is provided with a buzzer that sounds on receiving an incoming call with the handset not on its base.

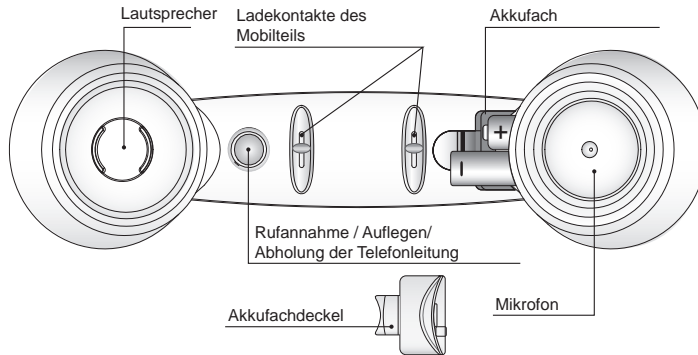

The handset batteries are charged when the handset is placed on its base. When off the base, the handset's battery power provides 120 hours of standby time and 10 hours of talk time.

Control panel

Your Maestro 60 has touch keys for access to configuration and settings functions. This screen tells you about the state (date and time, unread message, etc..).



Using the touch buttons


The screen includes six touch keys around its periphery. Simply touch the tactile area for the function to be taken into account:

Key	Function(s)	Key	Function(s)
▲	Scroll up /Go to the menu list.	▼	Browse down / Go to the menu list.
••	Context key 2: Delete an entry / Return to the previous menu.	•	Context key 1: Access a menu / Validate the selection.
#	# key.	*	Asterisk key.



Display screen

During use or on standby, the screen of your Maestro 60 tells you about the state of your telephone by showing icons, and in particular:

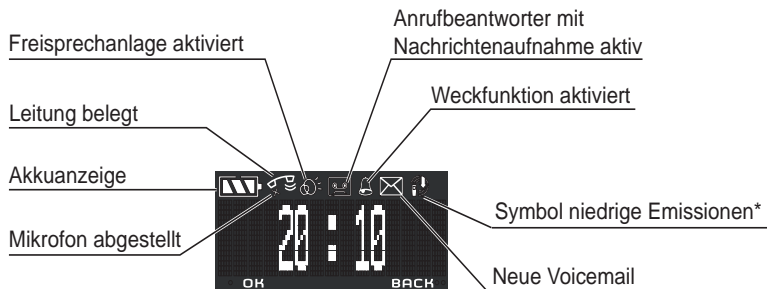

- * The low emission icon (ECO mode): Your telephone is provided with an automatic power management system. As soon as the handset is near its base, the power required is reduced to the minimum. Radio transmissions are also cut off when the handset is placed on the base, and the low emission icon is then displayed.



If a second handset is paired with the base, the "low emission" icon is no longer displayed.


INSTALLATION

CONNECTING THE BASE



Before making any connections, please refer to the safety instructions presented at the beginning of this user guide.

Never force the plugs: they are in different shapes to avoid connection mistakes.

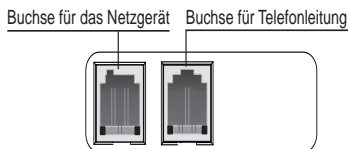

1. On the underside of the base, click the phone jack into its socket and connect the other end of the cord to the telephone wall outlet.
2. Connect the end of the power supply cord on the underside of the base and connect the power adapter to the mains socket. The phone display is turned on.

SETTING UP THE HANDSET

The batteries are already inserted in the handset. To put the handset into use, simply remove the tab by pulling on it firmly in the direction of the arrow.

The handset emits a double beep to indicate that it has started and then a second beep to indicate that the handset is synchronized with the base. From then on, your handset becomes operative and you can use it to make calls.



On leaving the factory, the handset is already registered in the base.


If your handset is not recognized by the base, then launch a manual registration (see paragraph "Pairing of Maestro 60 handsets on the Maestro 60 base", page 29).

You can now use your telephone to make and receive calls.


CHARGING BATTERIES

Place the handset on its base and fully charge the batteries.

An audio signal is emitted when the handset is placed correctly on the base.

The battery charge icon  is animated to indicate that the battery is being charged and stops to indicate that the batteries are fully charged.



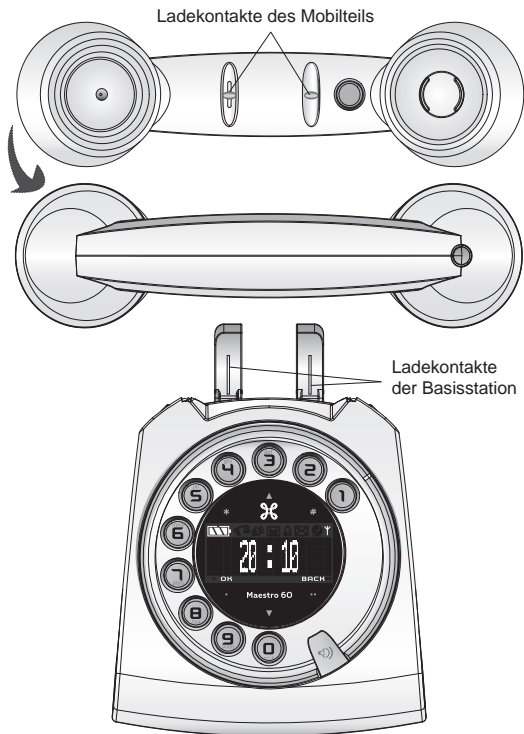

The handset batteries charging time is 10 hours. During charging, the batteries may heat up. This is quite normal and perfectly safe.

NAVIGATING IN THE MENU

With your Maestro 60 you can create your own telephone directory, display the list of calls etc. To do this, use the touch keys.

With the touch keys ▲ and ▼ you can choose a menu, a sub-menu or a precise setting.

The key ● allows you to enter the sub-menus of the chosen function and select the setting to modify. With the key ●● you can return to the previous function or cancel the current choice.

The keys * and # are used when you use the answering machine.

Browsing through the menus

Use the browsing keys ▲ or ▼ to select the desired menu. Press **Valid**. To confirm your selection.

Select the desired function by pressing the browsing keys ▲ or ▼ and then press the **Valid**. key.

- To return to the previous menu, press **Return**.
- To save the settings, press **Valid..**

Example:


To modify the menu language, go to the menu **SETTINGS / LANGUAGE**:

1. Use ▲ or ▼ to access the menu list.
2. Select **SETTINGS** using ▲ or ▼. Press **Valid..**
3. Select **LANGUAGE** using ▲ or ▼. Press **Valid**.
4. An information screen presents the current language used (ENGLISH).
5. Select **FRANCAIS** using ▲ or ▼ key.
6. Press **Valid..** OK is displayed on the screen.



Menu structure

To access one of your phone's menus, use key ▲ or ▼.

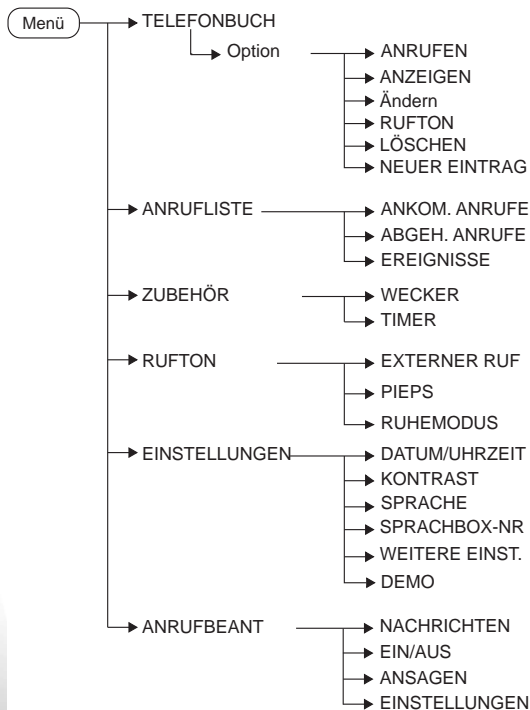

SETTINGS REQUIRED BEFORE USE

Setting the date and time accurately will enable you to follow your calls and messages chronologically.

According to where your base is situated in the room, you may have to adjust the contrast.

The default language of your telephone is English; to modify the language, refer to paragraph "Modifying the language", page 21.


To set the date and time, refer to paragraph "Modifying the date and time", page 21.

To set the contrast or the brightness of the screen, refer to paragraph "Adjusting the contrast", page 21.



PHONE USE

HANDSET LOCATION

Lost your handset? Press the button  on the back of the base, behind the keypad. The handset will then ring.

CALLING

Receiving a call

- When a call is received, the phone rings.
- The caller's phone number is displayed on the screen if you have subscribed to the "Caller ID" service. The caller's name may also be displayed if it is included in your phone book or if you have subscribed to the "Display name" service.

Accepting a call in handset mode




- Pick up the phone handset. You do not need to press the handset's button.
- Make sure to identify the handset direction by the dot which identifies the earpiece end. The call time counter is displayed on the screen.
- To end the call, hang up the handset or press the handset button.
- If the handset is not on the base, you have to press the handset button to take the call.






After you have finished your call, when you replace the handset on the base, the message "END OF CALL" is displayed on the screen and a visual and audio signal is emitted from the base to confirm that the handset has been correctly replaced and that the call has finished.

If you ended the call by pressing the handset button, only the "END OF CALL" message is displayed on the screen.


Accepting a call in hands-free mode

- Press  to speak in hands-free mode (without holding the handset). The  symbol and the call time counter are displayed on the screen.
- To end the call, press  again.

Toggle between handset mode and hands-free mode

- If you are in handset mode, press and hold the  key and then hang up the handset to toggle to hands-free mode. Press the  key again to end the call.
- If you are in hands-free mode:
 - If the handset is hung up on the base, lift the phone handset to toggle to handset mode.
 - If the handset is not hung up on the base, press the dial tone button  to toggle to handset mode.



- To end the call, hang up the handset on the base or press .




Use the ▲ and ▼ keys to vary the earphone volume or speakerphone volume. The handset earphone volume or speakerphone volume can vary from 1 to 5.


Making a call

The call can be made in two ways:


Making a call in handset mode

- Pick up the handset.
- The icon  is displayed on the screen. Dial your number on the keypad.
The call time counter is displayed on the screen.

Making a call in hands-free mode


- Press  to obtain a dial tone prompt on the screen. Dial your number on the keypad.
The call time counter is displayed on the screen.



You can also dial a number in pre-dialling mode, whether in handset or hands-free mode: dial the number on the keypad and then lift the handset or press .

If necessary, you can correct the number entered by pressing **BACK**.

Ending a call

When you have finished your call, press  or hang up the handset on the base.

During a call

Receiving a second call (according to operator)

- During the call, a beep is transmitted to your telephone by your service provider to let you know that you have a second call waiting.
- Press **ACCEPT** to take this new call if you have subscribed to the number display service or -R- then **2** otherwise.
- Your other caller is then put on hold and you can talk with your second caller.

Making a second call

- During a call, you can put your contact on hold and call a second one by pressing -R- and dial the number using the keypad.
- The second call is then launched, with the first call still on hold.



The caller on hold hears a beep emitted by the network or music on hold.

To alternate from one call to the other

- To toggle from one call to the other, press **Menu** then **SWITCH**.
- The call in progress is put on hold, and you can then take the second call.



To end one of the calls and continue the other one

- To toggle from one call and take the other, press **Menu** and then **HANGING UP**.
- The call in progress is definitely terminated, and you can then take the second call.

To set up a 3 way-call (the two parties and yourself)

- During a call, press **Menu** and then **3-PARTY CONF.**
- You can then talk to both parties simultaneously, and "**3-PARTY CONF**" is displayed on the screen.
- To end the 3 way-call, hang up the handset.

"Calls" function button

This key is a shortcut to your phone's call log.

- From the idle screen, press the key ● ●.
- Press keys ▲ or ▼ to select the calls list:
 - INCOMING CALLS,
 - OUTGOING CALLS,
 - EVENTS.
- Press **Valid.** and then select the number using keys ▲ or ▼.

Secret mode

During a call, you can switch to mute mode and your phone's microphone will be muted. The person you are on line with can no longer hear you.



To activate secret mode :

- During a call, press **Menu / SECRET** and then **Activ..**
- The "**SECRET MODE**" message will appear on the screen.


To deactivate secret mode :



- Press **Exit**, "**SECRET MODE**" disappears from the screen. Your correspondent will be able to hear you again.

Hands-free mode/Speakerphone mode

If you want to phone in hands-free mode, do not lift the handset, but press the base  key; the  icon is displayed on your phone's screen.

The caller can then be heard through the loudspeaker and you speak into the base microphone.


To end the call, press the key again .


If you want to toggle to speakerphone mode during a call in handset mode, press the  key; the  icon is displayed on your phone's screen.

The caller can then be heard through the base loudspeaker and the handset earphone and you speak into the handset microphone.



In this mode the base microphone is inactive.

You can return to hands-free mode by holding down the  key and then replacing the handset.

To end the call, replace the handset or press the key .



When you call in hand-free/speakerphone mode, you can increase or decrease the audio volume from 1 to 5, using ▲ or ▼.

Calling the last number dialled

Your Maestro 60 stores the last 20 dialled numbers:

- Go to **CALLS / OUTGOING CALLS**.
- Select the number you want to call.
- Go to **Option / CALL**.

The number is automatically dialed in speakerphone mode.

Call time display

Once connected, the call time is displayed on the screen (minutes and seconds).

PHONEBOOK

You can save up to 150 entries in your phone book, with each entry able to contain a 24-digit number and a name up to 12 letters long.

CREATING AN ENTRY

To enter a text, repeatedly press the required key to display the desired letter.

- Go to **PHONEBOOK / New**.
- Enter the name of your contact using the alphanumeric keys. Press **Valid..**
- Enter the contact's telephone number using the alphanumeric keys.
- Press **Valid..**
- Select an icon for this number to specify the type of number. Press **Valid..**

The name and number are then stored in your phone book.



EDITING AN ENTRY

- Go to the menu **PHONEBOOK**.
- Press keys ▲ or ▼ to select the contact you want to change.
- Select **Option / Edit**. Press **Valid..**
- You enter the name input screen.
To correct the name, press **Return** to delete characters. Enter your changes on the keypad.
After making the changes, press **Valid..**
- You enter the number input screen.
To correct the number, press **Return** to delete the numbers. Enter your changes on the keypad.
After making the changes, press **Valid..**
- Select an icon for this number.
- Press **Valid..**

ASSOCIATING A RING TONE WITH A PHONEBOOK ENTRY

*You can associate a unique ring tone to each entry and thus create your own call groups
As you need the active «number presentation» service on your handset.*

- Go to the menu **PHONEBOOK**.
- Select the entry with which you want to associate a ring tone.
- Go to **Option / RING TONE**.
- Select the ring tone of your choice.
- Press **Valid..**

DELETING AN ENTRY

- Go to the menu **PHONEBOOK**.
- Press keys ▲ or ▼ to select the contact you want to delete.
- Select **Option / DELETE**.
- Press **Valid..**
- A confirmation screen asks you if you wish to delete the entry.
 - To delete the entry, press **Yes**, the contact is deleted from your phone book.
 - If you do not wish to delete the entry, press **No**.

CALLING USING THE PHONEBOOK

- Go to the menu **PHONEBOOK**.
- From the list of names, select the contact you want to call using keys ▲ or ▼.
- Go to **Option / CALL**.

The number is automatically dialed in speakerphone mode.

SEARCHING FOR A CONTACT

- Access your phonebook list, press successively on the keypad key which corresponds to the first letter of the name you are searching for so as to make it appear at the top of the screen.
- Once the first letter of the name is displayed, wait a moment.
- The phonebook selects the first name in the list that starts with the selected letter.



CALL LOG

Caller identification is a service that requires prior registration with your operator.



To check your call log directly, press the Log key ●● from the idle screen.

VIEWING THE RECEIVED AND DIALLED CALL LOG

- Go to the menu **CALLS / INCOMING CALLS** or **OUTGOING CALLS**.
- Select the event to be viewed.
- Press **Valid..**
- The screen presents the following information. (depending on the operator and the subscription):
 - the full name of your contact and the telephone number,
 - the number of consecutive calls,
 - time (for calls during the day) or the date (for previous calls) of the call.

To see the previous calls, use the keys ▲ or ▼.

By pressing **Option**, a list of various executable actions appears:

- **CALL** : To call the number.
- **VIEW** : To view the selected call again.
- **STORE NUMBER** : To store the name and number in the phonebook.
- **DELETE** : To delete the call currently viewed.
- **DELETE ALL** : To delete all calls.

To return to the call viewing screen, press **Return**.

THE EVENTS LOG

Viewing the events log

If one or more new events occurred during your absence, the information screen "**NEW EVENTS !**" appears and the light starts flashing.

- If you do not wish to view the event log at this time, press **Back** (You can, however, consult the event log again through the menu **CALLS / EVENTS / VIEW**).
- To view the event log, press **Valid..**
 - Choose the event using ▲ or ▼.
 - Press **Valid..**



The light only stops flashing when all the events have been viewed.



Activating/deactivating the new event information screen

The new event information screen can be inhibited.

*The events which have occurred can then be viewed in the menu **CALLS / EVENTS / VIEW**. The default setting is active.*

- Go to the menu **CALLS / EVENTS**.
- Select **ACTIVATE** or **DEACTIVATE** to enable or disable the displaying of the new events screen.
- Press **Valid..**

Clearing notifications

The notifications received are saved in the event log and can be deleted once they have been viewed.

- Go to the menu **CALLS / EVENTS**.
- Select **DELETE NOTIF.** and press **Valid.** to remove the notifications received on your base.

INFORMATION

During an incoming call, **PRIVATE** is displayed on the screen, it means that your contact does not want their number to be displayed.

ACCESSORIES

ALARM CLOCK

This function enable you to use your Maestro 60 as an alarm clock.

When the alarm is triggered the selected ring tone sounds for 60 seconds through the handset speaker and an alert screen is displayed.

Activating / deactivating the alarm clock

- Go to **ACCESSORIES / ALARM**.
- An information screen shows the alarm clock status.
- Use **▲** or **▼** to select **ACTIVATE** or **DEACTIVATE**.
- Press **Valid..**

The alarm settings information screen appears showing the new status.

Changing the alarm clock ring tone

- Go to **ACCESSORIES / ALARM**.
- Use **▲** or **▼** to select **RING TONE** in the list, press **Valid..**
- Select the ring tone of your choice, press **Volume**.
- Select the desired ring tone using **▲** or **▼** to increase or decrease the volume, press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Modifying the alarm clock time

- Go to **ACCESSORIES / ALARM**.
- Use **▲** or **▼** to select **SET TIME**.
- Enter the time at which you would like the alarm clock to sound.
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

TIMER

With this menu you can use your telephone as a timer.



The timer function must be inactive so that it can be set.

Once the specified time has elapsed, the base rings for 60 seconds and the alarm screen is activated. Turn off the alarm by pressing **Stop**, the base stops ringing.

Activate the timer

- Go to **ACCESSORIES / TIMER**.
- Press **Start**. If a timer duration is already specified, the timer is directly activated. If not please follow instructions in the next paragraph.

Changing the programmed time of the timer

- Go to **ACCESSORIES / TIMER**.
- Select **SET DURATION** in the list.
- Press **Valid..**
- Enter the desired time.
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Displaying or hiding the programmed time of the timer

- Go to **ACCESSORIES / TIMER**.
- Select **VIEW** in the list. Press **Valid..**
- If you want to show the timer, press **Yes**, else press **No**.
- Press **Return**.

Changing the timer ring tone

- Go to **ACCESSORIES / TIMER**.
- Select **RING TONE** in the list of options.
- Press **Valid..**
- The list of ring tones appears, the handset plays the ring tone.
- Select the ring tone. Press **Volume**.
- Press **▲** or **▼** to increase or decrease the volume.
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.



RING TONES

CHANGING THE RING TONES

This menu enables you to associate a unique ring tone to incoming calls.

- Go to **RING TONE / EXTERNAL CALL**.
- Press **Valid..**
- Select the ring tone of your choice.
- Press **Volume**.
- Adjust the ringer volume using **▲** or **▼**.
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ACTIVATING OR DEACTIVATING THE BEEPS

- Go to **RING TONE / BEEPS**.
- Press **Valid..**
- To change the beep status, press **▲** or **▼**.
The status is changed on the screen.
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ACTIVATING/DEACTIVATING THE SILENT MODE

When in silent mode, the telephone ringer and keypad beeps are inhibited.

- Go to **RING TONE / SILENT MODE**.
- **SILENT MODE?** is displayed on the screen.
- Press **Yes** to activate the silent mode.
- Press **No** to deactivate the silent mode



When you activate the silent mode, your handset is muted for all timer and alarm type functions.



SETTINGS

MODIFYING THE DATE AND TIME

- Go to **SETTINGS / DATE/TIME**.
- Enter the date in DD/MM/YY format.
- Press **Valid..**
- Enter the time in HH/ MM format.
- Press **Valid.. OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ADJUSTING THE CONTRAST

- Go to **SETTINGS / CONTRAST**.
- A list with five levels of contrast is displayed.
- Select the level you want using the keys **▲** or **▼**. The contrast is directly visible on the screen.
- When you have obtained a satisfactory level.
- Press **Valid.. OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

MODIFYING THE LANGUAGE

- Go to **SETTINGS / LANGUAGE**.
- An information screen presents the current language used.
 - To keep the setting, press **Valid..**
 - To change the setting, press **▲** or **▼**.
- Select the language.

- Press **Valid.. OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.



The answering machine message language depends on the phone language.

THE VOICEMAIL NUMBER (ACCORDING TO OPERATOR)

With this function you can set your PhoneMail voice mail number.

*To indicate that a new message has been received the reception, «**NEW EVENTS**» is displayed intermittently on the screen, the envelope icon showing that there is a message lights up and the indicator above key 1 winks.*



*To check your voicemail service, hold down key **1**.*

Your PhoneMail voice mail number is set in the factory (1969), to change it proceed as follows:

- Go to **SETTINGS / VOICE BOX No.**
- Press **Valid.**
- The programmed number is displayed on the screen.
 - Press **Edit.** to modify the number.
 - Press **Return** to erase digit by digit.



- **VOICE BOX No** appears on the screen, enter the new number and press **Valid..**
- **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.




The reception indicator on the top of the

1 key keeps blinking until you consult the received voice message or delete the notification through the Menu:

CALLS/EVENTS /DELETE NOTIF..

DEMO

This menu allows you to see an animation for each of your phone's key and ring tones.

- Go to **SETTINGS / DEMO**. Press **Valid..**
- Display of "**DEMO Chenillard**" with the animation of each key.
- Press the  key during this animation, "**DEMO Melody**" is displayed, and the melody for external calls is initiated.
- Press **Exit** to stop the demonstration.

ADVANCED SETTINGS

Modifying the base code

This code secures and limits the use of your telephone.

- Go to **SETTINGS / ADVANCED SET. / CHANGE CODE**.
- Press **Valid..**
- Enter the old base code using the keypad (default is 0000).
- Press **Valid..**
- Enter the new base code using the keypad.
- Press **Valid..**
- Confirm by entering the new base code again.
- Press **Valid.. OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.



Base settings

Set the base to registration mode


Using this function you can add GAP compatible handsets to your base. The handset that you want to pair with your base must itself be in pair mode. Consult the user booklet of your handset to find out what to do.



You can save up to 5 GAP-compatible handsets on your Maestro 60 base.

- Go to **SETTINGS / ADVANCED SET. / SET BASE / REGISTR. MODE.**
- Press **Valid..**
- **REGISTR. MODE?** is displayed on the screen, press **Yes.**
- Indicator on the top of the '1' key starts to flash rapidly. Your base will remain in registration mode for about 1 minute.



You can also set the base to pairing mode by holding down your base's  key.

Pairing Maestro 60 handsets with the Maestro 60 base:

- Indicator on the top of the '1' key starts to flash rapidly. Your base will remain in registration mode for about 1 minute.
- To set your base to pairing mode, proceed as described above or press the key, until the indicator above the '1' key winks.
- Hold down the call control button, situated under the handset, until the handset is registered.

Resetting the base

When you reset your base, all the base parameters are reset to their initial values (factory settings).

- Go to **SETTINGS / ADVANCED SET. / SET BASE / RESET BASE.**
- Press **Valid..**
- **RESET BASE?** is displayed on the screen.
- Press **Yes.**
- Enter the base code (0000 by default).
- Press **Valid..**
The "RE-INIT. IN PROCESS" and the **OK** messages are displayed successively.

Your base is now reset.



After telephone reinitialisation, you have to electrically unplug then plug the base in order to finalize the factory reset process.

De-registering a handset

- Go to **SETTINGS / ADVANCED SET. / SET BASE / DELETE HANDSET**.
- Press **Valid..**
- Select the handset you wish to unregister using **▲** or **▼**. Press **Valid..**
- A screen prompts you to confirm the unregistration. Press **Yes** to unregister the handset.

The handset is no longer registered to the base.

Line settings

Modifying the dialling mode

The type of dialling generally used is voice frequency (Tone).

- Go to **SETTINGS / ADVANCED SET. / SET LINE / DIAL**.
- Press **Valid..**
- A screen displays the current status.
 - To keep the status, press **Valid..**
 - To modify the status, press **▲** or **▼**. The status is modified on the screen.
- Press **Valid.. OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.



The default dialling mode is tone.

Modifying the flash duration

If you connect your telephone to a private automatic branch exchange (PABX), you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, 3 way calling.

Contact your administrator to get the appropriate duration and proceed to the new setting.

The default value's duration is 120ms.

- Go to **SETTINGS / ADVANCED SET. / SET LINE / FLASHING**.
- Press **Valid..**
- An information screen presents the current flash duration.
 - To keep the duration, press **Valid..**
 - To modify the duration, press **▲** or **▼**.
- Select the new duration.
- Press **Valid.. OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Setting a PABX prefix

If a private automatic branch exchange is used, you can programme the external call prefix.

With this function you can set the:

- PABX prefix number,
- the minimum length of the number to be dialled for the defined PABX prefix to be taken into account.
- prefix status (on or off).

- Go to **SETTINGS / ADVANCED SET. / SET LINE / PABX PREFIX**.
- Press **Valid..**
- Press **▲** or **▼** to modify this setting.
- Select the desired option:
 - **ACTIVATE / DEACTIVATE** : to select a status.
 - **PREFIX** : to enter the number giving you access to the outside line.
 - **EDIT LENGTH** : to specify the minimum number of digits to dial for the defined PABX prefix to be automatically taken into account.
- To modify the prefix, select **PREFIX** press **Valid..**
- Enter the prefix using the keypad, press **Valid..** **OK** is displayed on the screen.
- To modify the digits before prefix, select **EDIT LENGTH**, press **Valid..**
- Enter the digits before prefix using the keypad.
- Press **Valid..** **OK** is displayed on the screen.
- Now you can activate the automatic PABX prefix functionality, press **▲** or **▼**, select **ACTIVATE** and press **Valid..** Press **Yes**.

ANSWERING MACHINE

Your phone's answering machine provides the following features:

- *Active answering machine mode with pre-recorded messages,*
- *Call filtering,*
- *Remote querying.*

ENABLING / DISABLING THE ANSWERING MACHINE

- Go to **ANS. MACH / ON/OFF**.
- Press **Valid..**
- A screen displays the current status of the answering machine (On or Off).
 - To keep the displayed status, press **Valid..**
 - To change the status, press **▲** or **▼** :
 To activate the answering machine, select **ACTIVATE**.
 To turn off the answering machine, select **OFF**.
- Press **Valid..**
- **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.



If you have not recorded a personal message, the answering machine will automatically use one of the pre-recorded messages in the selected language.



MODIFYING THE OUTGOING MESSAGE



In order to modify an outgoing message, you must first turn on the answering machine.

Recording a personal outgoing message

- Go to **ANS. MACH / OUTGOING MESS. / CHANGE.**
- Press **Valid..**
- **RECORD OGM** is displayed on the screen.
- Press **Begin** to start recording your outgoing message. Start talking in the base microphone.
- To stop recording press **End**. Your outgoing message is automatically played back.
- Press **Return** to go back to the previous menu or make a new recording.

Deleting your personal outgoing message



If you delete your personal outgoing message, the answering machine will automatically use the anonymous message.

- Go to **ANS. MACH / OUTGOING MESS. / DELETE.**
- Press **Valid..**
- **DELETE ANOUNCE?** is displayed on the screen.

- Press **Yes** to confirm the deletion of your personal outgoing message.
- **OGM DELETED** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Listen to a personal message




If you have not recorded a personal message, you will hear the anonymous, pre-recorded message.

- Go to **ANS. MACH / OUTGOING MESS. / PLAY.**
- Press **Valid..**
- **PLAY OGM** is displayed on the screen and the outgoing message is played back. At the end of the playback you will return to the menu **RECORD OGM**.
- Press **Return** to go back to the previous menu.

PLAYING MESSAGES

If you have new messages (unread), these messages are read first. Afterwards, the messages that have already been taken are played back in chronological order (from the oldest messages to the most recent messages).

- Go to **ANS. MACH / MESSAGES / PLAY.**
- Press **Valid..**
- The messages are played through the loudspeaker.

- Depending on your service provider and your subscription, the name and number of your contact will be displayed on the screen (except for a confidential call).
- During playback, you can use the touch-sensitive keys to perform the following actions:
 - * : go back to the beginning of the message.
 - * twice : return to the previous message.
 - # : go to the next message.
 - Pause / PLAY (●): pause/resume playback.
 - DELETE (●●): delete the message being played.
 -  : exit playback of messages.
- A beep will indicate access to the answer machine, Any unread messages will be automatically played back.
- At the end of playback, a new beep will sound to let you know that the answer machine is ready.
- You can carry out the following operations :
 - 0 : delete the message being played.
 - 1 : go back to the beginning of the message.
 - 1 (x2): previous message.
 - 2 : pause / play.
 - 3 : next message.
 - 5 : messages read.
 - 9 : enable/disable the answering machine.

REMOTE ACCESS TO ANSWERING MACHINE

Your answering machine can be queried remotely. This feature allows you to read your messages and query your answering from any phone when you are not at home.

To remotely access your answering machine:

- Dial your telephone number.
- Wait for the answering machine to come on.
- When your outgoing message is played, press «#».
- Enter your remote access code.



The remote access code is 0000 by default. However, it can only be used once it is customised, refer to paragraph "Modifying the remote access code", page 28.

DELETING ALL THE OLD MESSAGES



To delete old messages one by one, refer to the previous paragraph and delete unwanted messages during playback see paragraph "Playing messages", page 26.

- Go to **ANS. MACH / MESSAGES / DELETE OLD.**
- Press **Valid.**
- To confirm the deletion of all the old messages, press **Yes.**
- Press **Return** to go back to the previous menu.



TAM SETTINGS

This menu allows you to change the advanced settings of your answering machine. You can access the answering machine **SETTINGS** menu from the **ANS. MACH** menu.

ACTIVATING AND DEACTIVATING CALL SCREENING

The filtering function, when activated, allows you to listen to the message left by the caller as it is being recorded. You can unhook to answer at any time.

- Go to **ANS. MACH/SETTINGS/CALL SCREENING**.
- Press **Valid..**
- A screen indicating the function status appears.
 - To keep the current status, press **Valid..**
 - To change the status, press **▲** or **▼**.
- Press **Valid..**

MODIFYING THE REMOTE ACCESS CODE

The remote access code enables you to listen to the messages left on your answering machine via another telephone.

- Go to **ANS. MACH / SETTINGS / REMOTE CODE**.
- Press **Valid..**

- **CODE BASE** is displayed, enter your Base code (default setting is 0000).
- Press **Valid..**
- **REMOTE CODE** is displayed, enter the new remote access code (4 digits mandatory).
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

NUMBER OF RINGS

This parameter determines the number of times your phone rings before your answering machine is started.

The number of rings is between 3 and 7.

- Go to **ANS. MACH / SETTINGS / NO OF RINGS**.
- Press **Valid..**
- The programmed number of rings is displayed on the screen. Press keys **▲** or **▼** to change this number (from 3 to 7).
- Press **Valid..** **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.



REPLACING THE BATTERIES

- Remove the battery compartment hatch.
- Remove the old batteries, insert the new batteries one by one in compliance with the polarity of the batteries, as indicated in paragraph "Your handset", page 6.
- Refit the battery compartment hatch.
- Leave your handset on its base in order to fully charge the batteries.

PAIRING OF MAESTRO 60 HANDSETS ON THE MAESTRO 60 BASE

Additional GAP-compatible DECT handsets can be registered on the Maestro 60 base.

To register an additional handset on the Maestro 60 base:

- Set your base to pairing mode by holding down the  key. The light indicator on the top of the '1' key starts flashing. The base remains in pairing mode for one minute.
- Set the additional handset to registration mode, see your handset user guide booklet.
- If your handset is a Maestro 60, hold down the call control button , situated under the handset, until the handset is registered.



Up to five GAP-compatible DECT handsets can be registered on the Maestro 60 base.

APPENDIX

CARE AND MAINTENANCE

Turn off your phone. Use a soft damp cloth to wipe it. Do not use a dry cloth, strong liquid detergents, thinners, alcohol or any other type of solvent to clean your phone. These products may damage your phone.

PROBLEMS

Refer to the table presented below in case of an operational malfunction:

Problems	Possible causes	Remedies
You are having trouble reading or cannot read the display when not in standby mode.	Contrast too low.	Increase the contrast level (refer to paragraph "Adjusting the contrast", page 21).
No display on the base screen.	Power connection unplugged.	Check the power connection to the phone.
No tone.	The phone jack is not connected or is incorrectly connected.	Check the phone cable connection (refer to paragraph "Connecting the base", page 9). Make sure you have a dialling tone.
	The speaker volume is too low.	Increase the speaker volume (refer to paragraph "Receiving a call", page 12).
The phone does not ring when a call is received.	The silent mode is turned on.	Turn off the silent mode (refer to paragraph "Activating/deactivating the silent mode", page 20).
Your party cannot hear you.	You have turned on the mute mode (microphone off).	Turn off the silent mode (microphone off) in Menu then SECRET. Make sure that the "SECRET MODE" message is not displayed.
You obtain a "busy" dial tone for each dialled number.	Incorrect flashing time.	Set the flashing time (refer to paragraph "Modifying the flash duration", page 24). Contact your operator to provide you with the right time.

TECHNICAL CHARACTERISTICS

Standard:	DECT, GAP	Batteries:	Type Ni-MH, AAA, 2 x 1.2 V 450 mAh
Radio frequency band:	1.88-1.90 GHz	Handset operating time:	Talk time up to 10 hours, standby time up to 120 hours
Number of channels:	120	Max answering machine capacity:	20 minutes
Duplex mode:	TDMA	Ambient temperature:	+5°C to +45°C
Spacing between channels:	1.728MHz	Dimensions:	Base (WxHxL) 138 x 190 x 106 mm Handset (WxHxL) 58 x 220 x 63 mm
Bit rate:	1152 kbit/s	Weight:	Base 478g Handset including batteries 157g
Modulation:	GFSK		
Vocoding:	ADPCM		
Transmitting power:	250 mW		
Charging time:	Handset Batteries: 10 hours		
Range up to:	300 m outside and up to 50 m inside buildings		

INITIAL CONDITION

Accessories

Alarm clock:	off
Timer:	off

Ring Tone

Ringer:	Traditional
Keyboard beeps:	On
Silent mode:	Off

Settings

Date/Time:	01/01/11 // 00:00
Contrast:	Level 2
PhoneMail voice mail number	1969

Base code:	0000
------------	------

Advanced Settings

Dial mode:	Tone
Flashing:	120 ms
PABX prefix:	Off

Answering Machine

Status:	On
Call screening:	Off
Remote access code:	0000
Number of rings:	7



ENVIRONMENTAL INFORMATION

- The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances for the health and the environment.
- In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.
- The crossed-bin symbol invites you to use those systems.
- If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.
- You can also contact us for more information on the environmental performances of our products.

proximus

R.P. Ariane Marchant, Proximus PLC under Belgian Public Law,
Bd du Roi Albert II 27, B-1030 Brussels



Please keep in a safe place

Device:

Serial number:

Date of purchase, replacement or repair*

Name and address of the buyer:

Telephone number of the relevant technical
department:

Stamp:

*Please delete as appropriate

proximus

Guarantee certificate

Guarantee terms

The equipment you have bought has been carefully selected by Proximus and is covered by a two-year warranty on spare parts and labor in the event of any material or manufacturing defect, unless otherwise specified. The warranty shall be valid from the date on which the equipment is collected or delivered.

If you have any problems with the equipment, you should take it to a Proximus Center or to one of our authorized agents, in its entirety and in its original packaging, or in packaging providing the same degree of protection, together with the original receipt.

Your equipment will be repaired or replaced free of charge, on presentation of the receipt, in the event of any material or manufacturing defect.

Proximus alone shall determine what repairs and/or replacements are necessary. The warranty on the repaired or replaced equipment shall end on the date on which the original warranty on the purchased equipment expires, but shall not be less than 3 months.

The warranty shall not cover:

- damage of any kind that does not predate the sale;
- any damage, faults or defects attributable to the customer or to causes unrelated to the equipment: lightning, power surges, humidity, accidental damage, improper use or poor maintenance, failure to comply with the instructions in the user manual, and force majeure;
- the repair or replacement of movable parts (cords, wires, plugs, aerials, etc.), consumables (cells, batteries, paper, ink, etc.) needing regular replacement and the supply of cleaning products.

The warranty shall not apply:

- to any changes or repairs to the equipment undertaken by the customer himself/herself or through the services of persons not designated by Proximus;
- if the customer removes or tampers with the manufacturer's serial numbers and/or brand names on the equipment.

Proximus shall not be liable for any indirect or immaterial loss sustained by the customer as a result of the malfunctioning of the equipment, such as any loss of production, revenue or contracts.

The General Terms and Conditions for the sale of equipment can be obtained on request from any Proximus service available to the public or at www.proximus.be



**DECLARATION CE DE CONFORMITE
EC DECLARATION OF CONFORMITY
EG-VERKLARING VAN CONFORMITEIT
EG-KONFORMITÄTserklärung**

FABRICANT / MANUFACTURER / FABRIKANT / HERSTELLER : SAGEMCOM BROADBAND SAS
 ADRESSE / ADDRESS / ADRES / ADRESSE : 250 Route de l'Empireur - 92848 RUEIL MALMAISON CEDEX - FRANCE
 FAMILLE DE PRODUIT / PRODUCT RANGE / PRODUCTEN GAMMA / PRODUKTFAMILIE : DECT telephone
 MARQUE COMMERCIALE / TRADEMARK / HANDELSMERK / WARENZEICHEN : BELGACOM
 TYPE DE PRODUIT / PRODUCT TYPE / SOORT PRODUCT / PRODUCTTYP : Sixty telephone
 NOM DU PRODUIT / PRODUCT NAME / PRODUCTNAAM / PRODUKTNAME : Maestro 60

Nous déclarons sous notre seule responsabilité que ce produit est conforme aux exigences essentielles des directives européennes suivantes:
 We declare under our sole responsibility that this product conforms to the essential requirements of the following EEC directives:
 Wij verklaren, geheel onder enige verantwoordelijkheid, dat dit product in overeenstemming is met de essentiële eisen van de volgende Europese richtlijnen.

Dieses Produkt erfüllt die Anforderungen der folgenden europäischen Richtlinien :

- | | |
|---|--|
| <p>1999/5/CE
(09/03/1999)
RATTE</p> | <p>: Directive du Parlement Européen et du Conseil, concernant les équipements hertziens et les équipements terminaux de télécommunications incluant la reconnaissance mutuelle de leur conformité.
 Directive of the European Parliament and of the Council on the Radio equipment and Telecommunication Terminal equipment including the mutual recognition of their conformity.
 Richtlijn 1999/5/EG van het Europees Parlement en de Raad van 9 maart 1999 betreffende radioapparatuur en telecommunicatie-eindapparatuur en de wederzijdse erkenning van hun conformiteit
 Richtlinie 1999/5/EG des Europäischen Parlaments und des Rates vom 9. März 1999 über Funkanlagen und Telekommunikationsendeinrichtungen und die gegenseitige Anerkennung ihrer Konformität</p> |
| <p>2004/108/CE
(15-12-2004)
EMC</p> | <p>: Directive du Conseil concernant le rapprochement des législations des États membres relatives à la compatibilité électromagnétique et abrogeant la directive 89/336/CEE.
 Council directive concerning the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC.
 Richtlijn van de Raad van 15 december 2004 betreffende de onderlinge aanpassing van de wetgevingen van de Lid-Staten inzake elektromagnetische compatibiliteit
 Richtlinie des Rates vom 15. Dezember 2004 zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit</p> |
| <p>2006/95/CE
(12-12-2006)
LVD</p> | <p>: Directive du Parlement Européen et du Conseil concernant le rapprochement des législations des États membres relatives au matériel électrique destiné à être employé dans certaines limites de tension (version codifiée) (et abrogeant la directive 73/23/CEE)
 Directive of the European Parliament and of the Council on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits (codified version) (and repealing Directive 73/23/EEC).
 Richtlijn van het Europees Parlement en de Raad van 12 december 2006 betreffende de onderlinge aanpassing van de wettelijke voorschriften der lidstaten inzake elektrisch materiaal bestemd voor gebruik binnen bepaalde spanningsgrenzen
 Richtlinie des Europäischen Parlaments und des Rates vom 12. Dezember 2006 zur Angleichung der Rechtsvorschriften der Mitgliedstaaten betreffend elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen.</p> |
| <p>2009/125/CE
(21/10/2009)
Ecoconception
= Energy
related
products (ErP)</p> | <p>: Directive 2009/125/CE du Parlement européen et du Conseil du 21 octobre 2009 établissant un cadre pour la fixation d'exigences en matière d'écoconception applicables aux produits liés à l'énergie (règlement) (abroge les directives 2005/32/EC et 2008/28/EC)
 Directive 2009/125/EC of the European Parliament and of the Council of 21 October 2009 establishing a framework for the setting of ecodesign requirements for energy-related products (recast) (repealing directives 2005/32/EC and 2008/28/EC-article 1)
 Richtlijn 2009/125/EG van het Europees Parlement en de Raad van 21 oktober 2009 betreffende de totstandbrenging van een kader voor het vaststellen van eisen inzake ecologisch ontwerp voor energiegerelateerde producten (herschikking)
 Richtlinie 2009/125/EG des Europäischen Parlaments und des Rates vom 21. Oktober 2009 zur Schaffung eines Rahmens für die Festlegung von Anforderungen an die umweltgerechte Gestaltung energieverbrauchrelevanter Produkte (Neufassung)</p> |

En conformité avec les normes harmonisées ou les réglementations européennes suivantes :

In conformance with the following harmonised European standards or Regulations :

In overeenstemming met de volgende Europese normen en regels:

Die Konformität wird aufgrund der vollständigen Einhaltung der harmonisierten europäischen Normen vorausgesetzt :

<p>Article n° 3(1)(b) of R&TTE directive EN 301 489-1 V1.8.1 (2008) EN 301 489-6 V1.3.1 (2008) EN 61000-3-2 (2006-A2:2009) EN 61000-3-3 (2008)</p>	<p>Article n° 3(1)(a) of R&TTE directive EN 60950-1 (2006+A11:2009) EN 50366 (2001)</p>	<p>Article n° 3(2) of R&TTE directive EN 301 406 V2.1.1 (2009)</p>
--	---	--

A / Place of issue : Le / Date : Au nom de / On behalf of Sagem Communications

PARIS : October 27th, 2011 Signature / Signed :

Nom / Name : **Ahmed SELMANI**
 Directeur de l'activité Terminaux Résidentiels
 Senior VP, Managing Director of Residential Terminals Business Unit