


Remote-control keys

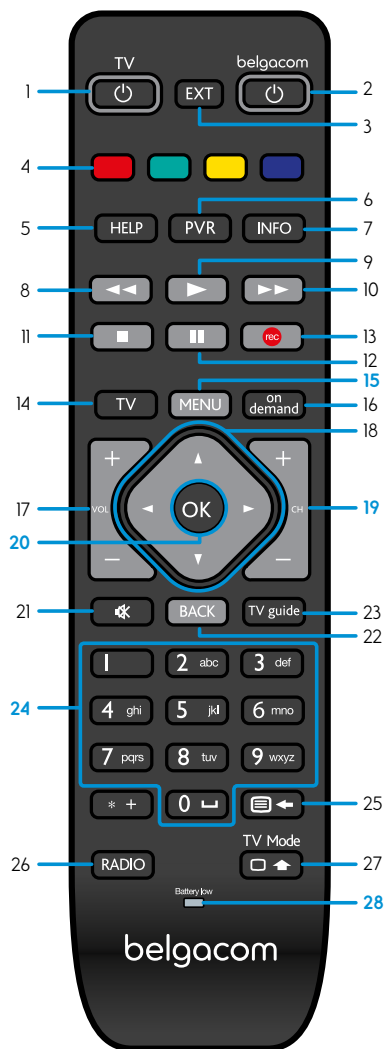

1. Switch your TV set on/off.
2. Switch your Belgacom TV decoder on/off.
3. Select an external source for your TV set.
4. Access the on-demand content of the channel you are watching (if available).
5. Access the help section.
6. Access your recordings.
7. Access the information bar of the TV program underway.
8. Rewind the TV program underway.
9. Play.
10. Fast-forward the TV program underway.
11. Stop.
12. Pause a TV program.
13. Record the program underway.
14. Access the channels.
15. **Access the main menu.**
16. Access the on-demand catalog.
17. Increase/lower the volume.
18. Navigate in the menus (left, right, top, bottom).
19. **Change the channel / navigate in the menus (page by page).**
20. **Validate your selection.**
21. Switch off the TV sound.
22. Return to the previous action.
23. Access the program grid.
24. **Select a channel / enter text.**
25. Display teletext / remove text
26. Access the radio stations.
27. Gives access to the functions of your TV set. Press another key on the remote control at the same time.
28. **Battery status indicator.**

If the Belgacom TV screen doesn't appear, use the **EXT** key to select an external source for your TV, which connects to your Belgacom TV decoder. You can do this using the AV, Aux, EXT, or HDMI button on your remote control.