

# Remote-control keys



1. Switch your TV set on/off.
2. Switch your Belgacom TV decoder on/off.
3. Select an external source for your TV set.
4. Access your recordings.
5. Access the program grid.
6. Access the on-demand catalog.
- 7. Access the main menu.**
8. Access the channels.
9. Access the information bar of the TV program underway.
10. Increase/lower the volume.
11. Navigate in the menus (left, right, top, bottom).
- 12. Change the channel / navigate in the menus (page by page).**
- 13. Validate your selection.**
14. Switch off the TV sound.
15. Access the help section.
16. Return to the previous action.
17. Access the on-demand content of the channel you are watching (if available).
18. Rewind the TV program underway.
19. Play.
20. Fast-forward the TV program underway.
21. Stop.
22. Record the program underway.
23. Pause a TV program.
- 24. Select a channel / enter text.**
25. Display teletext / remove text.
26. Access the radio stations.
- 27. Battery status indicator.**
28. Gives access to the functions of your TV set. Press another key on the remote control at the same time.

If the Belgacom TV screen doesn't appear, use the **EXT** key to select an external source for your TV, which connects to your Belgacom TV decoder. You can do this using the AV, Aux, EXT, or HDMI button on your remote control.