


BOLERO **530**



Owner's manual

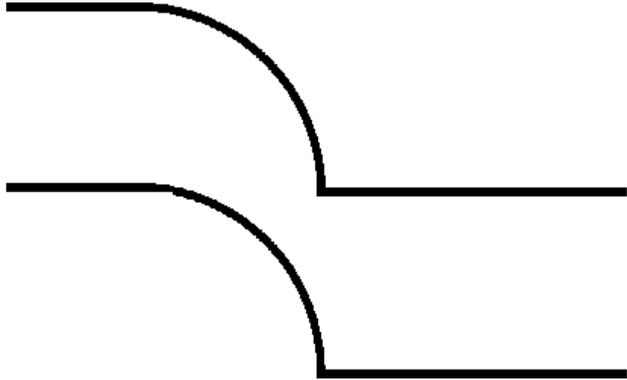

BELGACOM

CE

FEATURES

The Bolero 530 is a digital high-quality answering device that you can also control remotely from any touch-tone phone.

The Bolero 530 stores messages on a memory chip. This gives you better performance than tape-based answering machines. For example, you can delete an individual message while saving the rest. Because your Bolero 530 is fully digital, there are no tapes to bother with and no tape mechanisms to wear out.

The Bolero 530 18-minute capacity lets you store a lot of messages. And its unique, space-saving design makes it ideal for home and office use.

The Bolero 530 will be used on Belgacom's PSTN network and has these features :

High Capacity -- lets you record up to 18 minutes of messages and memos.

Call Breakthrough (CBT) -- alerts you to an important call when the caller enters a code you set.

Two-Way Recording -- lets you record both sides of a phone conversation.

Memo Recording -- lets you leave messages for yourself or others.

Dual Announcements -- let you choose between playing an outgoing message then recording the caller's message, or just playing an announcement without recording a message. And, when the Bolero 530's memory is full, it switches automatically to just playing an announcement. Each announcement can be up to 60 seconds long.

Adjustable Ring Number -- lets you set the Bolero 530 to answer the phone after four or six rings.

Toll-Saver -- lets you avoid unnecessary charges when you call by distance to check your messages.

Voice Time/Day Stamp -- announces the time and day that each message was recorded.

Remote Operation-- lets you use a touch-tone phone to consult or configure the Bolero 530.

Phone Pick-Up Detection -- stops recording when you pick up any phone on the same line as the Bolero 530.

Call Screening -- lets you listen when a caller leaves a message so you can decide whether or not to answer the call.

Remote On/Off -- lets you turn the Bolero 530 on or off even when you are away from your home or office.

LED Message Counter -- clearly shows the number of messages the Bolero 530 has recorded.

Programmable Remote Operation Security Code -- lets you set your own security code for remote operation.

Remote Answer-On -- lets you call the Bolero 530 from a remote location and set it to answer calls.

Room Monitor -- lets you listen from a remote phone to the room where the Bolero 530 is installed.

Memory Backup -- preserves in memory stored messages in case of a power failure.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

READ THIS BEFORE INSTALLATION


Your Bolero 530 may be connected it to most telephone lines. If you are using more than one phone or other device on the line, your phone(s) might not ring and your Bolero 530 might not answer. In this case, remove a device from the line.

CONTENTS


Preparation	4
Connecting the Bolero 530	5
Installing a Backup Battery	6
Changing the Language	6
Setting the Day and Time	7
Setting the Number of Rings	7
Basic Operation	
Recording the Outgoing Messages	8
Listening to the Outgoing Messages	8
Setting the Bolero 530 to Answer Calls	8
Using the Announce-Only Feature	8
Recording Incoming Messages	9
Playing Messages	9
Recording a Memo	10
Recording a Conversation	10
Deleting Messages	10
Screening Calls	10
Using Call Breakthrough	11
Changing the CBT Code	11
Changing the Remote Operation Security Code	11
Remote Operation	12
Toll-Saver	12
Using Remote Commands	12
Remote Command List	13
Troubleshooting	14
Guarantee	15
Guarantee certificate	16

PREPARATION

Select a location for the Bolero 530 that is near both a telephone jack and an AC outlet

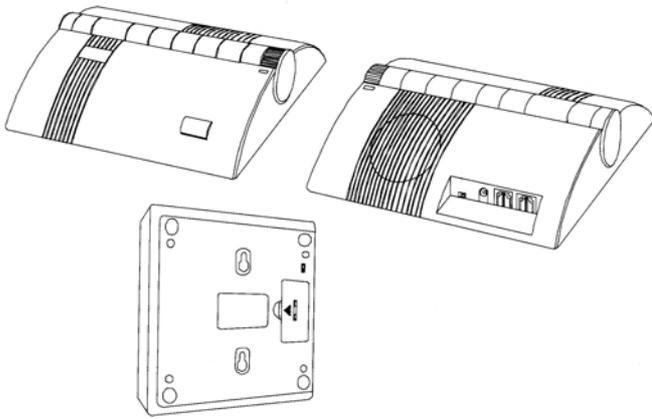

CONNECTING THE BOLERO 530

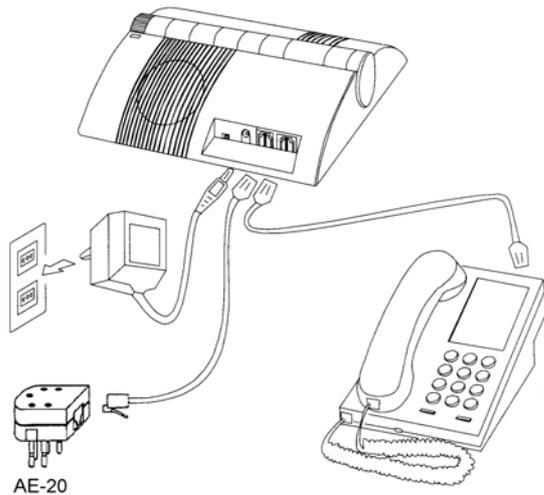

Note: Your Bolero 530 connects directly to a modular phone line jack (RJ-11).

1. Plug your telephone into the **TO TEL** jack on the back of the Bolero 530.
2. Plug one end of the supplied cord into the **TO LINE** jack on the back of the Bolero 530, and the other end of the cord into a wall socket or in the included telephone plug (AE-20)
3. Insert the supplied DC adapter's barrel plug into the DC 9V jack on the back of the Bolero 530.

Caution: The supplied DC adapter was designed specifically for your Bolero 530. Use only the supplied adapter.

4. Plug the other end of the adapter into a standard 230V~ AC outlet.

When you first connect power, the message counter counts from 0 to 20. The Bolero 530 beeps, and "0" appears in the message counter window.

Note: The Bolero 530's message counter usually shows the number of recorded messages. That number alternates with other displays to tell you the status of the Bolero 530.

* "A1" appears if you have not recorded an outgoing message 1 (OGM 1).

* "A2" appears if you have not recorded an outgoing message 2 (OGM 2).

* "Lo" appears if the backup battery is weak or missing.

INSTALLING A BACKUP BATTERY

If the AC power fails or you unplug the Bolero 530, a 9V backup battery (not supplied) allows to save the messages, time and day settings, and the CBT and remote operation security codes. We recommend you use an alkaline battery.

Caution: Always use a fresh battery of the recommended type.

1. Use a screwdriver to remove the cover of the battery compartment.
2. Snap the battery's contacts firmly to the battery connector and place the battery in the compartment.
3. Replace the cover.

Replace the battery when "Lo" appears

Cautions:

- * Always remove an old or weak battery. Old batteries can leak chemicals that can destroy electronic parts.
- * Dispose of the old battery promptly. Do not bury or burn it.
- * To avoid losing stored information, be sure the AC adapter is plugged in and connected to the Bolero 530 before you replace the battery.

CHANGING THE LANGUAGE

The Bolero 530 has two languages for your option. One is Netherlands and another is French. The Bolero 530 is preset to Netherlands; users can change the language by following these steps.

Note: If you do not complete each step within 8 seconds, the Bolero 530 sounds four beeps and exits setup. Start again from Step1.

1. Hold down **CODE** ("Co" appears) until the Bolero 530 beeps once.
2. Press **ON/OFF**. "Fr" (French) appears and beeps once. It indicates the Bolero 530 will operate the voice prompt in French. If "nL" (Netherlands) appears, it indicates the Bolero 530 will operate the voice prompt in Netherlands.

SETTING THE DAY AND TIME

When you set the Bolero 530's clock, the Bolero 530 records the day and time each memo and each message is recorded.

Notes:

* To avoid losing the day and time settings if AC power is lost, we recommend you install a backup battery before you set the day and time.

* If you do not complete each step within 8 seconds, the Bolero 530 sounds four beeps and exits setup. Start again at Step 1.

* To adjust the Bolero 530's volume, roll **VOL.** knob to desired volume.

Follow these steps to set the day and time.

1. Hold down **STOP**. "**CL**" (clock) appears briefly, then a number from 1 to 7 (the day of week) appears, and the Bolero 530 announces the currently set day.
2. To change the day, hold down **MEMO** to move backward or **CODE** to move onward until the Bolero 530 announces the desired day.
3. Press **STOP**. The Bolero 530 announces the currently set hour.
4. To change the hour, hold down **MEMO** or **CODE** until the Bolero 530 announces the desired hour.
5. Press **STOP**. The Bolero 530 announces the currently set minute.
6. To change the minutes, hold down **MEMO** or **CODE** until the Bolero 530 announces the desired minute.
7. Press **STOP**. "**CL**" appears, and the Bolero 530 announces the day and time, then beeps. "**CL**" disappears.

To check the current day and time setting at any time, press **STOP**. "**CL**" (clock) appears, and the Bolero 530 announces the day and time, then beeps.

SETTING THE NUMBER OF RINGS

Set the ring select switch on the rear side of the machine to 1, 2, 3, to set how long the Bolero 530 waits before it answers a call (4 rings, 6 rings, or toll-saver).

If you plan to check your messages by distance, set the ring select switch to 3 (Toll-Saver, see page 12).

RECORDING THE OUTGOING MESSAGES

Before the Bolero 530 can answer calls and record messages, you must record an outgoing message (OGM). The Bolero 530 lets you record two separate messages, and it operates differently based on the message you select.

- OGM 1. After playing your outgoing message, the Bolero 530 lets callers record a message.
- OGM 2 (announcement-only). The Bolero 530 plays your outgoing message, but does not let the caller record a message.

Hint: Do not tell callers that you are out of town or not home. Instead, say that you cannot come to the phone right now.

Notes:

* The maximum length for each outgoing message is 60 seconds. As you record, the message counter shows the recording time.

* If you plan to use the Bolero 530's announcement-only feature, OGM 2 should clearly state that the caller cannot leave a message.

Follow these steps to record an outgoing message.

1. To record an outgoing message, hold down **OGM 1** or **OGM 2** until the Bolero 530 beeps and the timer starts counting.
2. Release **OGM 1** (or **OGM 2**) and speak your message from about 8 inches in front of the Bolero 530.
3. When you finish recording, press **STOP**. The Bolero 530 beeps and plays back the outgoing message.

Listening to the Outgoing Messages

To hear an outgoing message, press **OGM 1** or **OGM 2**. The Bolero 530 beeps, "A1" or "A2" appears, and the outgoing message plays.

If no outgoing message is recorded when you press **OGM 1** or **OGM 2**, the Bolero 530 announces "*VOUS N'AVEZ PAS D'ANNONCCE UN (DEUX)*" or "*MELDTEKST EEN(TWEE) NIET AANWEZIG*" and sounds four beeps.

SETTING THE BOLERO 530 TO ANSWER CALLS

To set the Bolero 530 to answer calls, press **ON/OFF**. The Bolero 530 announces "*REPONDEUR ALLUME*" or "*BEANTWOORDER IS AAN*" and plays the outgoing message. If the **ON/OFF** indicator is lit, the Bolero 530 is set to answer calls. To set the Bolero 530 to not answer calls, press **ON/OFF**. The Bolero 530 announces "*REPONDEUR ETEINT*" or "*BEANTWOORDER IS UIT*".

Notes:

* You must record an outgoing message before you can set the Bolero 530 to answer calls.

* If you have set the Bolero 530 to not answer calls, you can use a remote phone to set it to answer calls.

USING THE ANNOUNCE-ONLY FEATURE

When the announce-only feature is on, the Bolero 530 plays OGM 2 but does not let callers leave a message. (You must have recorded an OGM 2 message before you can use this feature.)

To set the Bolero 530 to announce-only, be sure the Bolero 530 is set to answer calls, then press **OGM 2**. The Bolero 530 says "*REPONDEUR UNIQUEMENT*" or "*ALLEEN UITGAAND BERICHT*" and plays the second outgoing message. The number of recorded messages and "A0" appear alternately.

To turn off the announce-only feature, press **OGM 1**. The Bolero 530 beeps, says "*REPONDEUR ALLUME*" or "*BEANTWOORDER IS AAN*" and plays OGM 1.

RECORDING INCOMING MESSAGES

Each incoming message can be up to 60 seconds long. At 55 seconds the Bolero 530 beeps to notify the caller that time will soon be up. At 60 seconds it sounds one long and four short beeps, says “*MERCI POUR VOTRE APPEL*” or “*DANK U VOOR UW OPROEP*” and hangs up.

Additionally, the Bolero 530 stops recording and resets to answer the next call when:

- * The caller hangs up.
- * There are more than 8 seconds of silence.
- * You pick up any phone on the same line as the Bolero 530.

If the Bolero 530's memory is full, “**FL**” and the number of recorded messages alternately appear. It answers calls after 4, 6, TS rings and plays the second outgoing message (OGM 2). If no OGM 2 is recorded, the Bolero 530 says “*MEMOIRE PLEINE, MERCI POUR VOTRE APPEL*” or “*GEHEUGEN IS VOL, DANK U VOOR UW OPROEP*”.

Note: The maximum recording capacity is 18 minutes or maximum 59 recorded messages.

PLAYING MESSAGES

The message counter shows the total number of messages, both old (ones you have listened to and saved) and new. If there are new messages, the **ON/OFF** indicator flashes.

To play all messages, press **PLAY**. The Bolero 530 announces the number of messages recorded, the message number and the day and time the message was recorded, and then plays the message.

To adjust the Bolero 530's volume, roll **VOL.** knob to desired volume.

To play only new messages, hold down **PLAY** for 2 seconds. If there are no new messages stored, the Bolero 530 says “*VOUS N’ AVEZ PAS DE NOUVEAUX MESSAGES*” or “*U HEEFT GEEN NIEUWE OPROEPEN*”.

After all messages play, the Bolero 530 says “*FIN DES MESSAGES*” or “*EINDE BEERICHTEN*”.

To replay a message while you are listening to it, press **MEMO**. The current message replays from the beginning.

To return to a previous message, hold down **MEMO** until the desired message number appears in the message counter window. Release **MEMO** to play the selected message.

To skip to the next message, press **CODE**. The next message plays.

To pause while listening to messages, press **PLAY**. “**PA**” (pause) appears on the display. To resume playback, press **PLAY** again within 60 seconds. Otherwise the Bolero 530 beeps, says “*FIN DES MESSAGES*” or “*EINDE BERICHTEN*” and resets to answer calls.

To play the message at a faster speed, hold down **CODE**. The playback speed increases, allowing you to quickly scan a message or move to any place within a message. To resume normal playback, release **CODE**.

To stop playback, press **STOP**. The Bolero 530 beeps, says “*FIN DES MESSAGES*” or “*EINDE BERICHTEN*” and resets to answer calls.

RECORDING A MEMO

A memo is a message you can record by speaking directly into the Bolero 530, without having to call in on the phone.

Follow these steps to record a memo up to 60 seconds long.

1. Press **MEMO**. "00" appears briefly, the Bolero 530 sounds a long beep, and the timer starts counting. Speak into the microphone in a normal voice.
2. Press **STOP** when you finish the memo (or let the Bolero 530 automatically stop recording after 60 seconds). The Bolero 530 beeps once and resets to answer calls.

The memo is stored with the incoming messages. To hear the memo, simply play back your messages.

RECORDING A CONVERSATION

You can record both sides of a conversation on any phone connected to the same phone line as the Bolero 530.

Note: It is illegal in some areas to record a conversation without the consent of all parties to the conversation, including the phone company. Check the laws in your area before you use the two-way recording feature.

To start recording a phone conversation, hold down **MEMO** until the display changes from "00" to "00". The Bolero 530 records until:

- * you press **STOP**
- * the Bolero 530 hears 8 seconds of a busy signal or 25 seconds of silence
- * the Bolero 530's memory is full

The recorded conversation is stored as a message.

DELETING MESSAGES

To delete a specific message, press **X**-button while the message is playing. The Bolero 530 beeps and deletes the message, then plays the next.

To delete all read messages, hold down **X**-button ("**dL**" appears) until the Bolero 530 says "*EFFACEZ LES MESSAGES*" or "*WIS BERICHTEN*" and sounds a long beep.

The Bolero 530 does not delete new messages. If you have only new messages, the Bolero 530 sounds four beeps when you press **X**-button.

SCREENING CALLS

To screen calls, let the Bolero 530 answer, and listen to the caller's message through the Bolero 530's speaker. To adjust the Bolero 530's volume, roll **VOL.** knob to desired volume.

If you do not want to take the call, simply let the Bolero 530 finish recording the caller's message.

If you decide to answer the call, pick up any phone connected on the phone line, the Bolero 530 stops recording and resets to answer the next call.

Note: If you pick up the phone just as the Bolero 530 answers, the Bolero 530 might not stop playing the outgoing message. If this happens, press **STOP**, (if you are standing next to the answering device) or the *****-button (in all cases)

USING CALL BREAKTHROUGH

If you screen your calls but want to know when calls come in from certain people, give them your call breakthrough (CBT) code (preset to 648).

When a caller enters the CBT code during the outgoing message, the Bolero 530 alerts you with a series of loud beeps for 35 seconds. To answer the call, pick up the handset. If you do not answer, the caller can leave a message after the outgoing message plays.

Note: The caller can stop the series of beeps by pressing the 6-button, then OGM 1 starts playing.

Changing the CBT Code

The CBT code is preset to 648, but you can change it by following these steps.

Note: There are only 5 attempts to enter the code and give this code within 8 seconds, otherwise the connection would be disconnected.

*The CBT-code must be different from the security code.

1. Hold down **CODE** ("Co" appears) until the Bolero 530 beeps once.
2. Press **MEMO**. "Cc" (CBT code) and the digits of the current code appear in sequence, then the first digit reappears. For example, if the CBT code is 648, the message counter shows "Cc, 6, 4, 8, then 6".
3. Repeatedly press **CODE** or **MEMO** to set the first digit, then press **STOP**. The second digit appears.
4. Repeatedly press **CODE** or **MEMO** to set the second digit, then press **STOP**. The third digit appears.
5. Repeatedly press **CODE** or **MEMO** to set the third digit, then press **STOP**. The Bolero 530 sounds a long beep then announces and displays the new CBT code.

CHANGING THE REMOTE OPERATION SECURITY CODE

The Bolero 530's remote operation security code is preset to 798, but you can change it by following these steps.

Note: If you do not complete each step within 8 seconds, the Bolero 530 sounds four beeps and exits setup. Start again from Step 1.

1. Hold down **CODE** ("Co" appears) until the Bolero 530 beeps once.
2. Press **CODE** again. "Sc" (security code) and the digits of the current code appear in sequence, then the first digit reappears.

For example: if the security code is 798, the message counter shows "Sc, 7, 9, 8, then 7.

3. Repeatedly press **CODE** or **MEMO** to set the first digit, then press **STOP**. The second digit appears.
4. Repeatedly press **CODE** or **MEMO** to set the second digit, then press **STOP**. The third digit appears.
5. Repeatedly press **CODE** or **MEMO** to set the third digit, then press **STOP**. The Bolero 530 sounds a long beep then announces and displays the new security code.

REMOTE OPERATION

You can operate the Bolero 530 from almost any touch-tone phone.

TOLL-SAVER (TS)

If the ring select switch is set to position 3 TS (toll-saver), the Bolero 530 answers after four rings if you have new messages. If there are no new messages, the Bolero 530 answers after six rings. This gives you time to hang up before the Bolero 530 answers so you can avoid unnecessary high long-distance charges.

USING REMOTE COMMANDS

Follow these steps to operate the Bolero 530 from a remote location.

1. Dial your phone number.

Note: Even if the Bolero 530 is not set to answer calls, it will announce “REPONDEUR ETEINT” or “*BEANTWOORDER IS UIT*” after about 15 rings.

2. When the Bolero 530 answers, enter your remote operation security code. The Bolero 530 beeps once to confirm that you entered the correct code.

Note: There are only 5 attempts to enter the code and give this code within 8 seconds, otherwise the connection would be disconnected.

3. Enter the remote command.

4. When you finish, hang up. The Bolero 530 resets to answer calls.

Remote Command List

Press:	To:
00	Set the Bolero 530 to not answer calls. It beeps and says “ <i>REPONDEUR ETEINT</i> ” or “ <i>BEANTWOORDER IS UIT</i> ”.
01	Set the Bolero 530 to answer calls. It beeps, says “ <i>REPONDEUR ALLUME</i> ” or “ <i>BEANTWOORDER IS AAN</i> ” and plays OGM 1. If no OGM 1 is recorded, it beeps and says “ <i>VOUS N’ AVEZ PAS D’ ANNONCCE UN</i> ” or “ <i>MELDTEKST EEN NIET AANWEZIG</i> ”.
02	Set the Bolero 530 to announce only. It beeps, says “ <i>RE PONDEUR UNIQUEMENT</i> ” or “ <i>ALLEEN UITGAAND BERICHT</i> ” and plays OGM 2. If no OGM 2 is recorded, it beeps and says “ <i>VOUS N’ AVEZ PAS D’ ANNONCCE DEUX</i> ” or “ <i>MELDTEKST TWEE NIET AANWEZIG</i> ”.
2	Play all messages. If there are no messages, the Bolero 530 says “ <i>VOUS N’ AVEZ PAS DE MESSAGES</i> ” or “ <i>U HEEFT GEEN BERICHTEN</i> ”.
3	Play new messages. The Bolero 530 announces the number of new messages before playback. If there are no new messages, the Bolero 530 says, “ <i>VOUS N’ AVEZ PAS DE NOUVEAUX MESSAGES</i> ” or “ <i>U HEEFT GEEN NIEUWE BERICHTEN</i> ”.
4	Monitor the room for 20 seconds. Press 4 to repeat.
5	Delete all messages (except new messages). Press 1 after the Bolero 530 announces “ <i>EFFACEZ LES MESSAGES</i> ” or “ <i>WIS BERICHTEN</i> ” then the Bolero 530 beeps.
6	Stop playback or recording.
7	Record a memo.
81	Change OGM 1. After the Bolero 530 beeps, begin speaking. When you finish, press 6. The Bolero 530 beeps and plays the new OGM 1.
82	Play OGM 1. If no OGM 1 has been recorded, the Bolero 530 announces “ <i>VOUS N’ AVEZ PAS D’ ANNONCCE UN</i> ” or “ <i>MELDTEKST EEN NIET AANWEZIG</i> ”.
91	Change OGM 2. After the Bolero 530 beeps, begin speaking. When you finish, press 6. The Bolero 530 beeps and plays the new OGM2.
92	Play OGM 2. If no OGM 2 has been recorded, the Bolero 530 announces “ <i>VOUS N’ AVEZ PAS D’ ANNONCCE DEUX</i> ” or “ <i>MELDTEKST TWEE NIET AANWEZIG</i> ”.

After pressing 2 or 3 to play messages, you can:

Press:	To:
1	Replay the previous message.
3	Skip to the next message.
4	Replay the current message.
5	Delete the current message.
6	Stop message playback.

TROUBLESHOOTING

We do not expect you to have any problems with your Bolero 530, but if you do, try these suggestions.

Problem	Remedy
The incoming message is incomplete.	Be sure the memory is not full.
The incoming message is unclear.	Be sure VOL. is set to the desired sound level.
The Bolero 530 does not answer after two, four, or seven rings.	Be sure the Bolero 530 is set to answer calls.
"L _o " appears on the display.	The backup battery is weak. Replace the battery.
The Bolero 530 does not respond to the remote operation security code.	Make sure the phone you used to dial the Bolero 530 is a touch-tone phone.
	Re-enter your remote operation security code, pressing each button for 2 seconds.
	Make sure the remote operation security code you entered is correct, or try entering the default code of 798. The remote operation security code might have reset to the default code due to a power failure and weak backup battery.

GUARANTEE

The terminal as described above was specially selected for you by Belgacom.

Unless otherwise stipulated in the contract, the terminal carries a one-year guarantee covering the costs of spare parts and labour due to a material or manufacturing defect. The guarantee will take effect as from the date on which the device is collected or delivered. Travel by Belgacom employees is not covered by the guarantee unless a technical assistance contract has been signed.

If you should have any difficulties with your terminal, you should either telephone the relevant technical department indicated above or you should go to one of our Téléboutiques, bringing with you this certificate and the complete device in its original packaging or a packaging ensuring a similar degree of protection. The addresses of our Téléboutiques are in the information pages of the telephone directory.

In the event of defective material or a manufacturing defect, your device will be repaired or replaced free of charge on presentation of this guarantee certificate duly completed at the time of purchase. Belgacom alone will determine what repairs and/or replacements will be necessary. The guarantee period applicable to a device which has been repaired or replaced will end on expiry of the guarantee period applicable to the device purchased but may not be less than three months.

The guarantee does not cover:

- damage of any kind, the origin of which is not prior to the sale;
- any damage, malfunction or defect due to a fault of the customer or the cause of which is external to the device: lightning, voltage surge, humidity, accidental deterioration, improper use or poor maintenance, failure to follow the instructions or any case of force majeure;
- repair or replacement of the movable elements (cord, wires, plugs, antennas etc.), replacement of accessory elements, the regular renewal of which is necessary (batteries, paper, ink etc.) or the supply of cleaning products.

The guarantee will not apply:

- if the customer personally modifies or repairs the device or does so with the assistance of any person who is not authorised by Belgacom; or
- if the customer removes or falsifies the manufacturing numbers and/or the markings on the terminal.

Belgacom will not be liable for any indirect or non-material loss suffered by the customer due to a malfunction of the terminal such as in particular a production loss, loss of earnings or loss of a contract.

The general terms and conditions applicable to our terminals may be obtained on application to any of the Belgacom departments accessible to the public.
--

GUARANTEE CERTIFICATE

PLEASE KEEP IN A SAFE PLACE

Device:

Serial number:

Date of purchase, replacement or repair (*)

Name and address of the buyer:

Telephone of the relevant technical department:

Stamp:

(*) Please delete as appropriate





BELGACOM