

Forum™ 500

Forum™ 5000

Forum iPhone 512

User Guide



Welcome to Proximus

Thank you for choosing a Proximus product that stands for the best in quality matched with high design standards.

Forum iPhone 512

The following operating instructions will assist you in using your Forum iPhone 512 and answer most of the questions that may arise. If you need any extra information or support, the first people to ask are your system administrator or retailer.

Internet:

www.proximus.be/pabx

Forum™ 5000 and Forum™ 500

This user guide applies to the Forum™ 5000 and Forum™ 500 product families.

- The Forum™ 500 product family comprises the Forum™ 523/524, Forum™ 525/526 and Forum™ 550/560 communications systems.
- The Forum™ 5000 product family comprises the Forum™ 5500, Forum™ 5004, Forum™ 5008 and Forum™ 5012 communications systems.

If individual features differ on the systems, a reference is made in this user guide.

We hope you enjoy using your Forum iPhone 512.

Contents

Forum iPhone 512	3
About this Manual	4
Authorisation Required	4
Additional Documentation	4
Using Your Telephone.	4
Safety Precautions	4
Installation Site	5
Cleaning	5
Key Description	6
VoIP / SIP Telephones	7
Connectors on the Forum iPhone 512	7
Notes for the System Administrator	8
Operating the Forum iPhone 512	9
Telephoning	9
Making Calls	9
Calling with Selective Line Seizure	9
Answering a Call	10
Accepting a Call While Telephoning	10
Holding a Call	10
Taking a Call from Another Terminal (Take)	11
Accepting a Call for Another Terminal (Pickup from group)	11
Automatic Call Recording	12
Ending a Call	12
Three-Party Calls	13
Enquiry	13
Toggling	13
Transferring / Forwarding Call to Another Caller (Transfer)	14
Conference	14
Other Device Functions	15
Handsfree / Open-Listening	15
Mute Function	15
Adjusting Volume	15
Call Protection	15
Call Waiting Protection	16
Using a Headset	16



Speed Dialling	17
Speed Dialling with Function Keys	17
Speed Dialling with Number Keys	17
Caller Lists	18
Messages	19
Phone Book	19
Call Forwarding	20
Voicebox	21
Busy Lamp Field	22
Phone Lock	22
Presence	23
Hot Desking	24
Main Menu on the Forum iPhone 512 SIP Telephone. . . .	25
1 Calls	26
2 Call Forwarding	27
3 Messages	28
5 Protection	28
6 Connections	29
9 Applications	31
0 Central settings	31
“Main menu” Menu Tree	32
Configuring the Forum iPhone 512	33
Settings	33
Function Keys Reference	33
Restarting the Forum iPhone 512	35
Deleting a Local Configuration	36
Restoring Factory Settings	36
Forum iPhone 512 Passwords	37
The “Options” Menu	38
Index	39
Support	41


Forum iPhone 512

The Forum iPhone 512 is a Voice over IP (VoIP) telephone in accordance with the internationally standardised SIP standard (Session Initiation Protocol). Connected to the communications system Forum 500 / Forum 5000 you have additional comfort functions available.



Forum iPhone 512

The Forum iPhone 512 has two dedicated trunk keys  /  and eight function keys with LED. The function keys are configured using the Forum 500 / Forum 5000 communications system and offer access to individually configurable system functions such as e.g. configuring call forwarding, switching call protection on/off or accessing the phone book of the Forum 500 / Forum 5000 communications system.

Use the  options key for quick access to the Devices menu (**Options** menu) which contains the configurable functions on the device, e.g. ringer signal and contrast.

The three-line display shows the respectively executable functions in the bottom line and supports you in operating the devices menu.

About this Manual

This manual describes how to use a Forum iPhone 512 SIP telephone which is connected to a Forum 500 / Forum 5000 communications system.

Authorisation Required

Most of the features in this manual can only be used if you have the appropriate user authorisation. Your system administrator sets up your authorisations when configuring the communications system.

Contact the system administrator if you have any questions on individual features or you are not able to use a feature satisfactorily.

Additional Documentation

Please also make use of the other documentation which was provided with the parts of your communications system. This documentation is located on the Forum 500 / Forum 5000 product CD.

Using Your Telephone

Safety Precautions

TIP: Do not open the device nor any connected accessories. You could come into contact with live parts.

Note: Repairs should only be carried out by certified expert personnel (from Proximus Service).

- Do not allow the telephone or accessories to come into contact with water or chemicals.
- Use (if necessary) the optionally supplied AC adapter (no. D0023-1051-00-75) only.
- Do not use any AC adapters that show visible damage (e.g. cracks in the housing).

- Connected headsets must comply with the standard DIN EN 60 950-1, Point 6.2 (“Safety of information technology equipment including electrical business equipment”).
Please contact the appropriate customer representative if you need further information on the headsets, adapters and adapter cables.
- To connect the Forum iPhone 512 to a local network (LAN, Local Area Network), use a shielded CAT-5 Ethernet line (STP line, shielded twisted pair line).
- Please ensure that no one can trip over the telephone cables.

Installation Site

Do not place devices or accessories

- near water, moisture or damp places,
- near heat sources or direct sunlight,
- in unventilated rooms,
- near devices that produce strong magnetic fields, near electronic devices, fluorescent lamps, computers, radio devices, television sets,
- in dusty places or in places subject to vibrations, shocks or extreme temperature fluctuations.

Place your telephone on a non-slip surface. Surface elements of your furniture can affect the feet of your telephone. Feet softened by foreign substances can leave undesirable impressions on your furniture.













Cleaning

Wipe your telephone with a slightly damp or an anti-static cloth. Never use a dry cloth. Never use cleaning fluids.

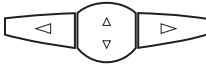
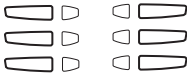
Key Description

The following table explains the Forum iPhone 512 keys.

Forum iPhone 512

Keys	Key Description and Function
	Hold key: puts the current call on hold. Press this key once again to retrieve the call on hold.
	Redial key: redials previously dialled numbers.
	Goodbye key: ends an active call or exits an open menu page without saving any changes made.
	Mute key: turns the microphone on or off.
	Volume control keys: adjusts the volume for the handset, ringer and speaker.
	Options key: accesses the Options menu (please refer to <i>The "Options" Menu</i> starting on page 38).
	Callers List key: this key is not used on the Forum 500 / Forum 5000 communications system (see <i>Caller Lists</i> starting on page 18).
	Conference key: establishes a conference
	Transfer key: transfers the current call to another subscriber
	Trunk keys: connect you to a specific line or accept a call which is signalled on the line.
	
	Loudspeaker key: activates the handsfree function for making and receiving calls without picking up the handset.

Forum iPhone 512

Keys	Key Description and Function
	<p>Navigation keys: press the arrow keys up or down to view different status and text pages on the display. Press the up and down arrow keys to navigate within a menu. Press the left arrow key to exit a menu. Press the right arrow key to select a menu selection or displayed option.</p>
	<p>Function keys: the function of these keys is configured with the Forum 500 / Forum 5000 communications system. The labelling is on a paper strip. Next to each function key there is an LED indicator to show what function is in use.</p>

VoIP / SIP Telephones

The following information is of interest when telephoning via the Forum iPhone 512.

- Brief silences or echoes may occur during some connections. This is due to the transmission quality of the line and not a functional defect of your telephone.
- When the telephone is connected to the line or is disconnected from the line (e.g. when the company network fails), when commissioning the device, the required terminal software is loaded first (the telephone is “booting”). This happens automatically and may take a few minutes. The telephone is ready for operation when the display shows the date/time and the internal call number. Then you can telephone as you are accustomed.
- When using a connected headset, after accepting a call, you should wait a second before you begin to speak. This time is necessary for establishing the connection between yourself and the caller.

Connectors on the Forum iPhone 512

Above the display there are two RJ45 connectors on the back of the device for connecting a data cable(s). They are labelled **LAN** and **PC**. There are two variants for connecting the Forum iPhone 512 depending on the technical

conditions at your work area. The system administrator will take care of connecting the telephone for you. In case the lines are disconnected at some point, you can re-connect it yourself using the following explanation.

Variant 1: The workstation has a network port available.

Insert the network cable into the **LAN** connector on the telephone, the other end into the available network port.

Variant 2: The workstation has an available network port; telephone and PC use this port jointly.

The telephone can be looped into the existing network connection via its **LAN** und **PC** connectors. It is connected as follows in this case: a network cable is required for connecting the PC and the telephone. This cable is inserted into the **PC** connector on the telephone. A second network cable goes from the telephone to the network port; this cable is inserted into the **LAN** connector on the telephone.

The power supply of the telephone can take place via the network line (“Power over Ethernet”). If the company network has no Power over Ethernet, the telephone requires a separate power supply via an additional AC adapter (no. D0023-1051-00-75).

Please note: Never operate the Forum IPhone 512 simultaneously with PoE and AC adapter!

If you have questions in this regard, desire more information or require help, contact your system administrator.

Notes for the System Administrator

The “Mounting and Commissioning” guide contains detailed information on VoIP and how to commission and configure VoIP and SIP telephones.





Please note: For feeds to the Forum IPhone 512, Power over Ethernet function in accordance with **IEEE 802.3af - class 3** standard is required!

Note: To connect the Forum IPhone 512 to a local network (LAN, Local Area Network), use a shielded CAT-5 Ethernet line (STP line, shielded twisted pair line).

Operating the Forum iPhone 512



Telephoning



Making Calls




1. In order to establish a connection,
 - pick up the handset or
 - press the loudspeaker key , to make the following call in the handsfree mode (see *Handsfree / Open-Listening* starting on page 15).
2. Dial a call number:
 - Enter the call number using the number keys.
 - Or: Press the redial key  to call back a previously dialled call number. Then select an entry with the navigation keys . Pick up the handset.
 - Or: Press the function key with the phone book function (please refer to *Phone Book* starting on page 19). This function is for selecting a call number from the phone book of the Forum 500 / Forum 5000 communications system.
3. Wait for the connection to be established. After about five seconds, the Forum iPhone 512 accepts the entire call number and dials. To speed up dialling, press the hash key  after entering the call number.

Calling with Selective Line Seizure

If multiple trunk keys are configured for your telephone, you can seize a line selectively.

1. Press a trunk key  /  to seize a specific line.




Optional: Use the left arrow key  or right arrow key  to select a line. In the display the line numbers (1, 2) are shown and indicate whether this line is free and can thus be seized.
2. Dial a call number (see page 9).

Note: If the administrator has linked a trunk key  /  with a SIP user account, you will be calling under the call number of the SIP user account. If the trunk key is not linked, the call number of trunk key 1  is used.



Answering a Call


An incoming call is signalled via ringer, a blinking trunk key and the blinking red LED indicator to the upper right.

To accept the call, you:

- pick up the handset or
- press the blinking trunk key  /  or
- press the loudspeaker key  to accept the following call in the handsfree mode (see page 15).

Accepting a Call While Telephoning



You are telephoning, e.g. on trunk key 1 , hear the call waiting tone and see the call on the display. The LED next to your available trunk key, e.g. , is blinking.

1. Press the trunk key where the caller is waiting. The other caller is put on hold. You talk with the caller.
2. You can also toggle back and forth between callers or initiate a conference with both callers (please refer to page 13 also).
3. Press the goodbye key  to terminate the current call. Then press the trunk key where the other caller is waiting. You are now connected with the caller on hold once again.

Note: If you have switched on call waiting protection (please refer to page 16 also) no other calls will be signalled (no call waiting tone, no LED of an available trunk key blinking). Callers now receive the busy signal.

Holding a Call

You can briefly interrupt an ongoing call:

1. Press the hold key . The person calling now hears music on hold.
2. Press the hold key  once again to continue the call.

Taking a Call from Another Terminal (Take)

You can accept an ongoing call from another terminal on your Forum IPhone 512 and continue it there. To be able to do so, your telephone and the other terminal have to have the same internal call number. To do so, the administrator of the Forum 500 / Forum 5000 communications system has to configure a **Take** function key (please refer to *Function Keys Reference* starting on page 33).

To accept the call on the Forum IPhone 512 you:

- pick up the handset and press the **Take** function key or
- – when the handset is not picked up – press the **Take** function key to accept the call in the handsfree mode (please refer to page 15).

Accepting a Call for Another Terminal (Pickup from group)

You can accept a call for another telephone in your Pickup group. To do so, the administrator of the Forum 500 / Forum 5000 communications system has to configure a **Pickup from group** function key (please refer to *Function Keys Reference* starting on page 33).

Another telephone in your Pickup group is ringing. To accept the call, you:

- pick up the handset and press the **Pickup from group** function key or
- – when the handset is not picked up – press the **Pickup from group** function key to accept the call in the handsfree mode (please refer to page 15).

If you are telephoning and would like to accept a call using Pickup ...

1. Press an available trunk key, e.g. trunk key 2 .

The person calling is put on hold and now hears music on hold.

2. Press the **Pickup from group** function key.
3. You can also toggle back and forth between callers or initiate a conference with both callers (please refer to page 13 also).

Note: “Pickup” is not possible if the person called belongs to a user group which has pickup protection activated.

Automatic Call Recording

Depending on the system configuration, the communications system can automatically record and save your calls with **external** subscribers.

Features of this function

- The “automatic call recording” function is only available with the Forum 5004/5008/5012 and Forum 5500 communications systems.
- Only calls with **external** parties are recorded. This applies to both incoming and outgoing calls that are made directly to you or made by you, as well as calls that are forwarded to you.
- In principle, only the parts of a connection in which **two** subscribers are talking to one another are recorded. In any situation where there is a connection but you are not talking to the external party (e.g. in the event of an enquiry call or if you have started a 3-party conference), recording is automatically stopped for this call segment. Recording restarts as soon as you speak with the external party again (e.g. once you have finished the enquiry call).
- The communications system saves each recorded call segment in an audio file. Access to these audio files is reserved for the system administrator.
- As soon as the connection to the external party is terminated, call recording is ended.

Note on data protection


You must inform the external party that the call is being automatically recorded.

Further information




For further information about automatic call recording, contact the system administrator.

Ending a Call

To end a call you do as follows:


- Put down the handset.
- or
- press the goodbye key .



Three-Party Calls

You are making a call, e.g. on the trunk key 1 , its LED indicator is lit. You can now forward the call, execute an enquiry, switch back and forth between two callers (“toggle”) or set up a conference. You can use any available trunk key  /  for three-party conference calls.

Enquiry

While telephoning, you can make an enquiry to another caller.


Note: The enquiry function cannot be used to transfer calls on SIP telephones. Alternatively, press the transfer key .


1. Press an available trunk key, e.g. trunk key 2 .
You hear the internal dialling tone. The person calling is put on hold and now hears music on hold.
2. Now dial the call number of the caller desired and make the enquiry call.
3. Press the goodbye key  to terminate the enquiry call.
4. Press the trunk key where the first caller is waiting. You are now connected with the caller on hold once again.


Note: If after ending the enquiry call you put down the handset, after a few seconds you will automatically be called back with the connection on hold.

Toggling

While you are conducting an enquiry call, the first caller is put on hold (see page 13). Now you can toggle between callers (switch back and forth).

1. Press the trunk key (e.g. ) of the caller waiting currently. The other caller is put on hold. The LED indicator of the trunk key of the respectively held caller blinks during this process. The held caller hears music on hold.
2. Press the trunk key of the caller waiting to switch to that caller. The other caller is now put on hold.

Tip: While you are talking with the first caller (the second caller is on hold), you can initiate a conference with both callers. To do so, press the conference key . To end the conference specifically, please read the description on page 14.

3. Ending toggling: Press the goodbye key  to terminate the current call.
4. Then press the trunk key where the other caller is waiting. You are now connected with the caller on hold once again.


Transferring / Forwarding Call to Another Caller (Transfer)

1. Press the transfer key .

You hear the internal dialling tone. The person calling is put on hold and now hears music on hold.



2. Dial the call number of the internal caller desired.

– **Transferring a call with notification:** When the caller answers, announce the call transfer. Then press the transfer key .


– **Transferring a call without notification:** When you wish to wish to transfer the call without notification, wait for the ringing tone. Then press the transfer key . The caller on hold now hears the ringing tone of the transfer destination and waits for the call to be accepted.

Conference

You can speak with two callers simultaneously in a so-called “three-party conference”.


1. Dial the call number of the first caller.
2. Press the conference key .
3. Press the available trunk key (e.g. ) and dial the call number of the second caller.


The other caller is put on hold.

4. When the second caller answers, announce the conference. Press the conference key  once again.

You are now connected with both callers in a three-party conference. The display shows the list of conference partners.


5. Do the following to end the conference:

– **Dropping an individual caller from the conference:** Use the navigation keys  to select one caller and press the DROP softkey. This ends the connection to the caller selected.



- **Ending a conference:** Put down the handset or press the goodbye key  to end the conference (connection to both callers).

Other Device Functions


Handsfree / Open-Listening

You can make a call in the handsfree mode, e.g. to let anyone present in the room listen in. To do so, press the loudspeaker key  before or during a call. The speaker is switched on. The red LED indicator next to the loudspeaker key lights up. Press the key once again to switch the speaker off.

Mute Function

If you do not want the caller to listen in to what, e.g. you are discussing with someone in the room, you can temporarily mute the telephone. During a call press the mute key . The microphone is switched off. The red LED indicator next to the key blinks and your caller can no longer hear you. Press the mute key  once again to switch the microphone back on.

Adjusting Volume

You can adjust the volume of the ringer, of the handset or of the speaker with the volume keys .

- During call signalling you can adjust the volume of the ringer.
- While making a call, you adjust the volume of the handset or – in the handsfree mode – the volume of the speaker.

Call Protection

Activating call protection also switches signalling of calls off for all call numbers of your device (exception: VIP calls and hunt group calls continue to be signalled). When call protection is activated, a caller hears either a ringing tone or a busy signal (the Forum 500 / Forum 5000 communications system administrator configures this).

The administrator of the Forum 500 / Forum 5000 communications system can configure a **Call protection** function key (please refer to *Function Keys Reference* starting on page 33).

1. Press the **Call protection** function key to activate call protection.

The LED next to the function key lights up. The person calling hears the ringing tone or the busy tone, but your telephone does not signal the call.

2. Press the function key once again to deactivate the call protection function.

Call Waiting Protection

While you are making a call, and are thus busy, other internal/external subscribers can use call waiting to notify you that they are calling you also.


The administrator of the Forum 500 / Forum 5000 communications system can configure a **Call waiting protection** function key (please refer to *Function Keys Reference* starting on page 33).

1. Press the **Call waiting protection** function key to activate call waiting protection.

The LED next to the function key lights up. While you are telephoning, other calls will not be signalled by a call waiting tone; the caller hears the busy tone.

2. Press the function key once again to deactivate the call protection function.

Using a Headset

Instead of using a handset, a headset can be connected to the Forum iPhone 512. You can press the loudspeaker key in this case in order to accept and end calls . Via the **Options** menu of the Forum iPhone 512 you can configure whether to use the headset or the speaker for handsfree operation (please refer to *Settings* starting on page 33).

Note: Establishing a call can be delayed with SIP telephony. When using a headset, e.g. you should wait a second before you begin to speak.

Speed Dialling

Call numbers can be saved as a speed dialling destination to function keys (please refer to *Function Keys Reference* starting on page 33) and number keys. Assigning speed dialling destinations to function keys is done by your administrator when configuring your telephone; you can assign speed dialling destinations to number keys yourself.

Speed Dialling with Function Keys

If the administrator of the Forum 500 / Forum 5000 communications system has programmed speed dialling destinations:





- Pick up the handset and press the function key where the speed dialling destination is programmed.
alternatively – when you wish to call in the handsfree mode:
- Press the function key – with the handset down – where the speed dialling destination is programmed.

Speed Dialling with Number Keys

Select speed dialling destination

- Pick up the handset. Press the number key where the desired call number is saved for a few seconds.
alternatively – when you wish to call in the handsfree mode:
- Press the number key – with the handset down – where the speed dialling destination is programmed.

Configuring a speed dialling destination

1. Press one of the number keys for a few seconds.
2. The display shows **Speeddial ->Enter Number**. Confirm with the down arrow key .
3. Enter the destination call number using the number keys. To correct a mistaken entry use the left arrow key .
4. Press the right arrow key  to save the destination call number.
5. Use the navigation keys  to select a trunk key which is to be linked with the speed dialling.









6. Press the right arrow key .


The speed dialling is now saved.

Note: You cannot remove speed dialling destinations saved to number keys (please refer to *Deleting a Local Configuration* starting on page 36).

Caller Lists

The administrator of the Forum 500 / Forum 5000 communications system can configure **Missed calls** and **Answered calls** function keys (please refer to *Function Keys Reference* starting on page 33). Use these function keys to access the caller lists managed on the Forum 500 / Forum 5000 communications system. The LED indicator next to the **Missed calls** function key also blinks when the caller list contains new entries.







1. Press the **Missed calls** or **Answered calls** function key to show the respective call list.
2. Use the navigation keys  to go to the desired entry.
3. To call the caller back, pick up the handset or press the loudspeaker key . The call number is called.
4. Press the right arrow key  to show the menu of the selected call. Use the navigation keys  to go to the desired menu entry.
 - **1** Displaying call number of caller: You call the caller back by picking up the handset or pressing the loudspeaker key .
 - **2 Delete:** Press the right arrow key  to delete the entry shown.
 - **3 Delete all:** Press the right arrow key  to delete all call list entries.
 - **4** shows detail information on this call entry (number of calls from this call number and date of the last call).
5. Press the goodbye key  to exit the menu.

Note: The list of dialled call numbers is displayed with the redial key .

Messages

Forum 500 / Forum 5000 communications system users with a terminal can send you short messages. The Forum 500 / Forum 5000 communications system also has a configuration determining whether or not you are informed of incoming e-mails.

The administrator of the Forum 500 / Forum 5000 communications system can configure a **Messages** function key for you (please refer to *Function Keys Reference* starting on page 33) regarding which messages you can read on the telephone display. The LED next to the **Messages** function key blinks when there are new messages.

1. Press the **Messages** function key.
2. Use the navigation keys  to go to the desired entry.
3. Press the right arrow key  to show the menu of the selected message. Use the navigation keys  to go to the desired menu entry.
 - **1 Show**: The text, date and time of the message is shown.
 - **2 Delete**: Press the right arrow key  to delete the entry shown.
 - **3 Delete all**: Press the right arrow key  to delete all message list entries.
4. Press the goodbye key  to exit the menu.

Notes

- You can send short messages yourself with the **Forum 500 CTI** web application. The online help of the Forum 500 / Forum 5000 communications system offers information in this regard.
- When you delete an e-mail message the e-mail itself is not deleted. You can query, process and delete the e-mail with your e-mail programme.

Phone Book

The administrator of the Forum 500 / Forum 5000 communications system can configure a **Phone Book** function key (please refer to *Function Keys Reference* starting on page 33). Use this function key to access the phone books managed on the Forum 500 / Forum 5000 communications system.

1. Press the **Phone Book** function key.

The display shows the text **Search**.


2. Enter one or multiple first letters for the phone book entry you are looking for. Use the number keys to do so.




– Use the up arrow key to correct an error in your entry and then enter the correct text for searching.

– Confirm your entry with the down arrow key.

A list of phone book entries of the Forum 500 / Forum 5000 communications system will appear.

3. Use the navigation keys  to go to the desired entry.

4. To call the selected phone book call number, pick up the handset or press the loudspeaker key .



If the entry has multiple call numbers saved in the phone book, you can select one of them specifically. Press the right arrow key . Use the navigation keys  to get to the desired call number (**Work, Mobile or Home**). Dial the call number by lifting the handset or pressing the loudspeaker key .

5. Press the goodbye key  to exit the menu.


Call Forwarding

The administrator of the Forum 500 / Forum 5000 communications system can configure a **Call forward** function key (please refer to *Function Keys Reference* starting on page 33).

1. Press the **Call forward** function key.

2. Use the navigation keys  to select the call forwarding type **1 immediately, 2 after Time or 3 busy**. Confirm your entry with the right arrow key .

3. A separate call forwarding can be configured for each type of call forwarding.

Use the navigation keys  to get to the desired input line or option.

Confirm and save your entry respectively with the right arrow key .

– Option **1 switch on / 1 switch off**: You switch the call forwarding on or off.

– **2 Phone No.:** Enter the call number to be forwarded to.

- **3 Call type:** Select the calls to be forwarded: **intern** (internal calls), **extern** (external calls) or **int.+ext.** (internal and external calls).

4. Press the goodbye key  to exit the menu.

The LED next to the function key lights up when **Immediately** type call forwarding is activated.

Note: The destination call number of call forwarding cannot be changed or deleted on the terminal. This is only possible in the **Devices: Functions** menu in the **Configurator** of the Forum 500 / Forum 5000 communications system.


Voicebox



The administrator of the Forum 500 / Forum 5000 communications system can configure a voicebox for you as an answering machine. This voicebox is operated via a “Voice message” function key (**Speech**) (please refer to *Function Keys Reference* starting on page 33). Activating or deactivating the voicebox is done via call forwarding to a voicebox call number (please refer to *Call Forwarding* starting on page 20).


Any time there are new messages on your voicebox, the Forum iPhone 512 display shows the number of voicebox messages received. Additionally, the LED indicator next to the “Voice message” (**Speech**) function key lights up.

1. Press the “Voice message” (**Speech**) function key.


The display shows the list of received messages.

2. To listen to the message, pick up the handset or press the loudspeaker key . Your voicebox is called and the message is played.

3. Press the right arrow key  to show the menu of the selected message. Use the navigation keys  to go to the desired menu entry.

- **1** Displaying call number of caller: You call the caller back by picking up the handset or pressing the loudspeaker key .

- **2 Delete:** Press the right arrow key  to delete the message.

- **3 Delete all:** Press the right arrow key  to delete all voicebox messages.

- **4** shows the date and time the message was received.

- **5** shows the length of the message.

4. Press the goodbye key  to exit the menu.

It is also possible to configure a **Voicebox** function key. Use this function key to call your voicebox.

1. Press the **Voicebox** function key.

The voicebox is called.

2. The next steps are voice controlled. Follow the voice menu instructions.

3. Press the goodbye key  to exit the voicebox system.

Busy Lamp Field

Use the “Busy Lamp Field” (**BLF**) to view another internal caller's state: free or busy. You have to configure a separate **BLF** function key for every desired call number of a caller (please refer to *Function Keys Reference* starting on page 33). The LED indicator next to the function key shows the state of the caller connected.

- **Unlit:** The caller is free. Press the BLF function key to call the caller.
- **Blinking:** The caller is being called. Press the BLF function key to accept the call (“Pickup”).
- **Lit:** The caller is busy.

Phone Lock


You can lock the Forum iPhone 512 to prevent unauthorised use. You must use your user PIN to unlock the phone. This function can be executed via a function key (please refer to *Function Keys Reference* starting on page 33) or via the **Options** menu.

Locking / unlocking phone via function key





1. Press the **Phone lock** function key.

The display shows **Phone is locked**, the LED next to the function key lights up. When in this state, no functions can be triggered and no calls made. It is possible, however, to accept incoming calls.



You can unlock the phone:

1. Press the **Phone lock** function key.
Password: appears on the display.
2. Enter the user PIN using the number keys. Confirm with the right arrow key .

Locking / unlocking phone via “Options” menu

1. Press the options key .
The **Options** menu appears.
2. Use the navigation keys  to select the **3 Phone Lock** menu entry.
Confirm with the right arrow key .
3. Confirm **Lock the phone?** on the display with the right arrow key .
Phone is locked appears on the display.



You can unlock the phone:

1. Press the options key .
Password: appears on the display.
2. Enter the user PIN using the number keys. Confirm with the right arrow key .

Note: When the Forum iPhone 512 is locked, emergency calls to predefined call numbers can still be made. The admitted call numbers depend on the special lists assigned to the user group (**Telephony: Lists: Special lists** menu).

Presence

The presence function is for communicating your presence status to an internal caller. When there is a call, the text is shown on the display of the caller, as long as the caller's telephone is a terminal. Change your status using a **Presence** function key (please refer to *Function Keys Reference* starting on page 33).


1. Press the **Presence** function key.
2. There are prepared status texts available. Use the navigation keys  to select the desired status. Confirm with the right arrow key .

The presence status is changed.

If a presence status is not to appear for the caller, select the **Available** text.

Hot Desking

The Forum IPhone 512 supports the “Hot Desking” feature. This feature enables you to apply the user configuration of your Forum IPhone 512 to any other Forum IPhone 512.

1. If the desired Forum IPhone 512 is currently in operation, press the **Logout** function key and confirm restarting with the right arrow key .

After restarting, the **Phone No.** field appears.

2. Enter your call number. Confirm with the down arrow key.

The **PIN** field appears.

3. Enter your user PIN. Confirm with the down arrow key.

The Forum IPhone 512 restarts – it is configured with your configuration. If your configuration is currently active on another Forum IPhone 512, the other Forum IPhone 512 will be logged out automatically.

Main Menu on the Forum iPhone 512 SIP Telephone

Most features which the system administrator can program to a separate function key of the Forum iPhone 512 SIP telephone can be set and used via the main menu of the Forum 500 / Forum 5000 communications system. To do so, the administrator has to configure a **Main menu** function key on the Forum iPhone 512 SIP telephone (see *Function Keys Reference* starting on page 33).

The main menu contains the system features of the Forum 500 / Forum 5000 communications system. These features are arranged in a menu tree. The main menu contains the following menu groups:

1 Calls

This is where the most important call-related features are grouped together.

Menu description: see page 26

2 Call forwarding

This menu group provides all types of call forwarding which you can programme on your telephone.

Menu description: see page 27

3 Messages

This menu group offers information on e-mails and short messages which you have sent or received. Furthermore you can activate prepared message texts.

Menu description: see page 28

5 Protection

Among other things, you can activate the call protection or the telephone lock in this menu group.

Menu description: see page 28

6 Connections

This menu group provides you with all the features that can affect a call.

Menu description: see page 29

9 Applications

This menu group contains all functions offered by your system telephone in conjunction with additional programme packages of your communications system.

Menu description: see page 31

0 Central settings

This is where you can configure central settings for the communications system. This is an optional menu item, it is only available if your system administrator has configured the appropriate authorisation for your user group.

Menu description: see page 31

1 Calls

1 Call lists: Displays the lists of missed and accepted calls.

1 Missed calls: You see the call numbers of the callers who most recently tried to reach you.

2 Accepted calls: You see the call numbers or the names of the callers with whom you last spoke.

3 Voicebox mess. (voicebox messages): You see the list of received voicebox messages and can listen to them and edit them.

4 Recordings: You see the list of received recordings (calls and audio conferences) and can listen to them and edit them.

4 Hunt group: If your telephone belongs to one or multiple standard hunt group(s), use this menu entry to switch hunt call signalling for your telephone on or off.

HG No.: [internal call number]: The pick-list of standard hunt groups. Activated hunt group calls have a “+” prefixing the hunt group call number; deactivated ones have a “-”.

On/Off: switching hunt group calls on or off

All: switching all hunt group calls **On/Off** for your telephone

Note: If you are the last reachable member of a standard hunt group and you log out then any further callers will hear a busy signal.

Depending on the system configuration, external callers can also be forwarded to the exchange.

5 Comfort hunt group: If your telephone belongs to one or more comfort hunt group(s), you can use this menu entry to switch comfort hunt group signalling for your telephone on or off. The operation is identical to the operation of the standard hunt groups

This menu item is only displayed when the feature

Forum Comfort Hunt Group is enabled in your communications system and if you are a member of one or more comfort hunt group(s). Refer to the “Mounting and Commissioning” guide (Forum 523/524, Forum 525/526, Forum 550/560, Forum 5004/5008/5012) or “Commissioning and Maintenance” (Forum 5500) for detailed information on the “Hunt groups” topic.

Note: The system administrator can set up a **comfort hunt group** such that the last accessible group member can log out. If you are the last accessible member of the comfort hunt group and log out, other callers are parked in the call queue of the comfort hunt group. They remain parked there for a maximum of one hour, providing they are not assigned beforehand to a member who has since logged back in. After waiting for an hour, the caller receives a busy signal.

2 Call Forwarding

1 Call diversion: Programming call diversions for your own telephone. The display shows a separate line with **Immediately**, **After delay** or **Busy** for each type of call forwarding along with the current status (“+” = on, “-” = off).

6 Follow Me: This type of call forwarding diverts calls from another terminal (source) to your telephone. The PIN of the source terminal is required for this function. If the “follow me” function is active, all call numbers of the other device are forwarded **immediately** to your telephone.

Source: Enter the internal call number from which calls are to be forwarded and press the **Enter** softkey.

PIN: Enter the user PIN of the source and press the **Enter** softkey.

On/Off: Switching call forwarding on or off. You can switch “Follow me” call forwarding off again on your own telephone or on the other terminal via the **Off** option. You can also switch off “Divert call immediately” on the other terminal. The menu entry displays the current status: “+” = on, “-” = off.

3 Messages

1 Short messages: You can exchange short messages with other communications system users with a system terminal.

1 Received mail: A list of senders of received messages is displayed. You can display, forward or delete these messages.

2 Outgoing mail: Short messages sent by you are displayed. These messages can also be displayed, forwarded or deleted.

3 New message: You can send a message to another user. Activate the **Message:** input field. First enter the text (max. 160 characters) and then press the **Enter** softkey. Then activate the **No.:** input field. Enter the call number of the message recipient and press the **Enter** softkey.

2 E-Mail: A list of senders who have sent you e-mails is displayed and you can query the relevant e-mail information (sender, subject line, date/time received).

4 Presence: You can inform other communications system users of your presence status.

5 Protection

1 Call protect: Switching signalling of calls on/off for all call numbers of your device (exception: VIP calls and hunt group calls continue to be signalled). The menu entry displays the current status: “+” = on, “-” = off.

int./ext. calls (internal & external calls): You can activate call protection for internal calls only, for external only or for all calls.

On/Off: switching call signalling on or off

3 Telephone lock: If you wish to temporarily allow another person to use your telephone, you can activate the telephone lock. Then your telephone is given the authorisations for the “Guests” user group. This user group is configured by the system administrator and prevents unauthorised persons from accessing, reading or making changes in the **Main menu** and its menu entries and lists on your telephone. Dialling rights may also be restricted.

Please contact your system administrator for information on the

altered range of functions when the telephone lock is on. Telephone lock access is user-PIN protected (default "0000"). After entering the PIN, activate / deactivate the function with the **On** or **Off** option. The menu entry displays the current status: "+" = on, "-" = off.

8 Call wait. prot. (call waiting protection): Switches call waiting protection on/off. The menu entry displays the current status: "+" = on, "-" = off.

On/Off: switching call waiting protection on or off

0 Logout: If the system administrator for the system telephone has configured the "Hot Desking" function and you are logged in to this system telephone as a user, you can use this menu entry to log out.

6 Connections

The following features are executed if the current connection state of your telephone permits.

1 Call pick-up

1 Pick-up: You pick up the call intended for another telephone in your pick-up group.

If the called subscriber belongs to a user group with pick-up protection activated, you cannot pick up calls for that person's call number.

2 Pick-up select. (pick-up selective): After entering the call number, you pick up the call for any other telephone.

If the called subscriber belongs to a user group with pick-up protection activated, you cannot pick up calls for that person's call number.

Note: If the other telephone is already in the call state (e. g. an answering machine is making an announcement), you can pick up the call with "Pick-up select.". The subscriber for whom you picked up the call must belong to a user group for which "Call removal" authorisation is activated, otherwise "Pick-up select" is not possible.

3 Take: You wish to take a current call from one terminal over to your telephone and continue the call on the telephone. To be able to do so, your telephone and the other terminal have to have the same internal call number.

2 Dial

1 Announcement: You direct an announcement to other **system terminals**. Under **Dest:** you enter the call number and press the **Enter** softkey.

Announcements can be made to the following terminals: system telephones Forum Phone 5xx, SIP system telephones Forum iPhone 50x0 and DECT system terminals Forum Free 5xx.

Announcements can also be directed to call numbers where multiple subscribers can be reached (e.g. a hunt group call number).

Note: If a called subscriber has announcement protection on, this feature is not executed.

2 Intercom: This function is for directing an announcement **to a single system terminal** and the microphone is switched on on the system terminal called. The subscriber called can answer you immediately without having to press a key. Enter the device ID of the terminal under **Device-ID:** and press the **Enter** softkey. For information on the device IDs available, contact your system administrator.

The **Intercom** function is for contacting the following terminals: system telephones Forum Phone 5xx, SIP system telephones Forum iPhone 50x0 and DECT system terminals Forum Free 5xx.

Note: If a called subscriber has call waiting protection on, this feature is not executed.

4 Phone book: You open the Forum 500 / Forum 5000 phone book and can call one of the subscribers listed there.

6 Suppress number: Your call number is not transmitted to the called person for the following (external or internal) call. This menu entry is dependent on the system setting.

7 Transmit number: Your call number is transmitted to the person you call for the following call. This menu entry is dependent on the system setting.

9 Applications

This menu card is only shown if the system administrator has set up additional programme packages for your communications system and you have the user authorisation to use these programmes.

1 Voicebox: This menu entry is only shown if the system administrator has installed the additional programme package **Forum Voicemail** and configured a voicebox for you.

1 Voicebox mess. (voicebox messages): You see the list of received voicebox messages and can listen to them and edit them.

2 Call voicebox: You call your voicebox. The next steps are voice-controlled.

For detailed information please refer to the guide for the voicebox programme **Forum Voicemail**.

4 ACD: This menu entry is only offered if the **Forum ACD** internal application in your communications system is activated and if you are an agent of one or multiple ACD groups. If your system administrator has granted you the corresponding authorisations, you can operate this application via this menu.

Refer to the “Forum ACD” guide for detailed information.

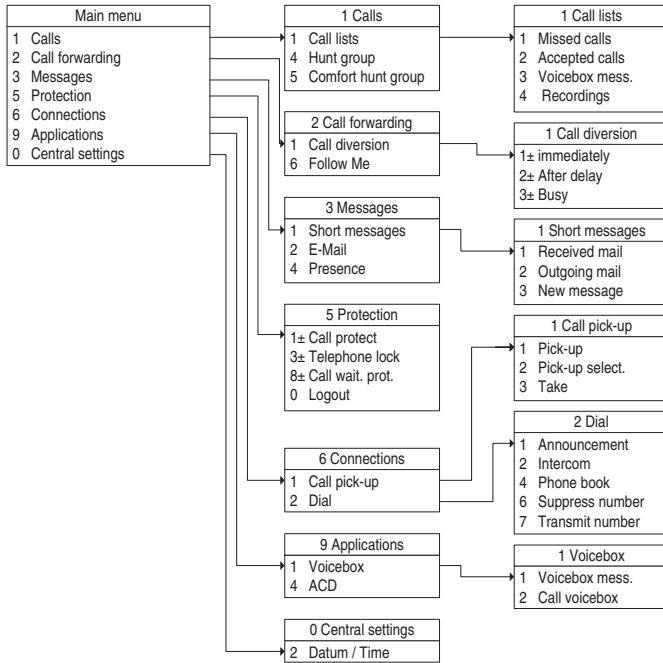
0 Central settings

The **Central settings** menu card is where you can set the date and time of the Forum 500 / Forum 5000 communications system. The **Date/Time** menu entry is only available if the system administrator has assigned the **Expert** service profile to your user group.

2 Date / Time: The date and time are taken over from the exchange on the first external outgoing call. If this information is not transmitted by your network operator, you can set the date and time here yourself.






Select the desired entry (time with **hh:mm**, date with **dd.mm.yy**). Overwrite the active setting. To save the setting activate the **Save** menu entry.

“Main menu” Menu Tree



Configuring the Forum iPhone 512

Settings

1. Press the options key .
The **Options** menu appears.
2. Use the navigation keys  to select the **1 Preferences** menu entry.
Confirm with the right arrow key .
3. Go to the desired setting (please refer to *The “Options” Menu* starting on page 38 and change the setting or the option. Confirm with the right arrow key .
4. Press the goodbye key  to exit the menu.

Function Keys Reference

Forum 500 / Forum 5000 With the Web Configurator, the administrator of the communications system can configure and change the following function keys for your Forum iPhone 512.

When the administrator has assigned you the corresponding user authorisation you can also change these settings yourself in the menu **Telephony: Devices: System phones** of the Configurator. Consult the Configurator online help for further information.

Function keys for Forum iPhone 512

Key type	Parameter	Function
none	–	none
Destination	Call number, Labelling	Direct dialling of a call number or code procedure.
BLF	Call number, Labelling	Busy Lamp Field; LED indicator shows when caller is busy

Function keys for Forum iPhone 512







Key type	Parameter	Function
Main menu	Labelling	Display of entire menu of the SIP system telephone features supported on the Forum 500 / Forum 5000 communicationssystem
Phone book	Labelling	Shows phone book managed by the Forum 500 / Forum 5000 communications system.
Missed calls	Labelling	Shows the list of missed calls which is managed on the Forum 500 / Forum 5000 communications system; LED indicates available calls
Answered calls	Labelling	Shows list of answered calls accepted by the Forum 500 / Forum 5000 communications system.
Speech	Labelling	Shows the list of recorded voice messages; LED indicates available messages
Voicebox	Labelling	Calls your voice box
Messages	Labelling	Displays the list of short messages and e-mails received; LED indicates new messages
Presence	Labelling	Display and changes of your status as present or absent; LED display when status activated (exception: "Available" status not displayed by LED)
Call forward	Labelling, Int. + ext. calls / Int. calls / Ext. calls	Displays "Call forwarding" menu; LED indicates when Immediately type call forwarding activated
Call protection	Labelling	Switches call protection on or off; LED indicates active function
Call waiting protection	Labelling	Switches call waiting protection on or off; LED indicates active function

Function keys for Forum iPhone 512

Key type	Parameter	Function
Pickup from group	Labelling	Picks up a call from another device in your pickup group.
Take	Labelling	Transfers an active call from another device operated using your internal call number.
Phone lock	Labelling	Locks or unlocks the telephone; LED indicates function is active
Logout	Labelling	Logs out the telephone and shows the Login Display
XML	URL, Labelling	Calls the specified URL from a Web server. Programmable function control via XML data retrieval (configured by the administrator).








Restarting the Forum iPhone 512

You have to restart the Forum iPhone 512 sometimes, in order to activate a changed trunk key assignment, for example.

1. Press the options key  .
The **Options** menu appears.
2. Use the navigation keys  to select the **2 Phone Status** menu entry.
Confirm with the right arrow key  .
The **Phone Status** menu appears.
3. Use the navigation keys  to select the **6 Restart phone** menu entry.
Confirm with the right arrow key  .
4. Confirm the restart request by pressing the hash key  .
The Forum iPhone 512 starts and is quickly ready for operation once again.


Deleting a Local Configuration














The Forum iPhone 512 stores speed dialling numbers and - possibly concurrent - function key programmings in a local configuration. This can make it necessary to delete the local configuration of the Forum iPhone 512.

1. Press the options key .
The **Options** menu appears.
2. Use the navigation keys  to select the **2 Phone Status** menu entry.
Confirm with the right arrow key .
The **Phone Status** menu appears.
3. Use the navigation keys  to select the **8 Erase Local Config** menu entry.
Confirm with the right arrow key .
The display shows **Admin Password**.
4. Enter the administrator password with the number keys (please refer to *Forum iPhone 512 Passwords* starting on page 37). Confirm with the right arrow key .
5. Confirm the **Erase local config?** display by pressing the hash key .

Restoring Factory Settings

It is possible that you have been operating the Forum iPhone 512 with another communications system or with an Internet SIP provider. To operate the Forum iPhone 512 with the Forum 500 / Forum 5000 communications system, you should restore factory settings.

1. Disconnect the Ethernet connection of the Forum iPhone 512.
2. If the telephone is not in operation, turn on the power supply. Wait until the Forum iPhone 512 has started. Now press the options key .
If the Forum iPhone 512 has already been operated on the Forum 500 / Forum 5000 communications system, the **Options** menu appears with 3 menu entries. Continue with step 3.
If the Forum iPhone 512 has factory settings only partially active, the **Options** menu appears with 7 menu entries in English. Continue with step 4.


3. Use the navigation keys  to select the **2 Phone Status** menu entry. Confirm with the right arrow key .
 - The **Phone Status** menu appears. Use the  navigation keys to select the **7 Factory Default** menu entry. Confirm with the right arrow key .
 - The display shows **Admin Password**. Enter the administrator password with the number keys (please refer to *Forum iPhone 512 Passwords* starting on page 37). Confirm with the right arrow key .
 - Confirm the **Restore Defaults?** display by pressing the hash key .
 - Confirm the restart request by pressing the hash key .
4. Use the navigation keys  to select the **5 Admin Menu** menu entry. Confirm with the right arrow key .
 - The display shows **Admin password**. Enter the administrator password with the number keys (please refer to *Forum iPhone 512 Passwords* starting on page 37). Confirm with the right arrow key .
 - Select the **4 Factory Default** option. Confirm with the right arrow key .
 - Confirm the **Restore Defaults?** display by pressing the hash key .
 - Confirm the restart request by pressing the hash key .

Forum iPhone 512 Passwords

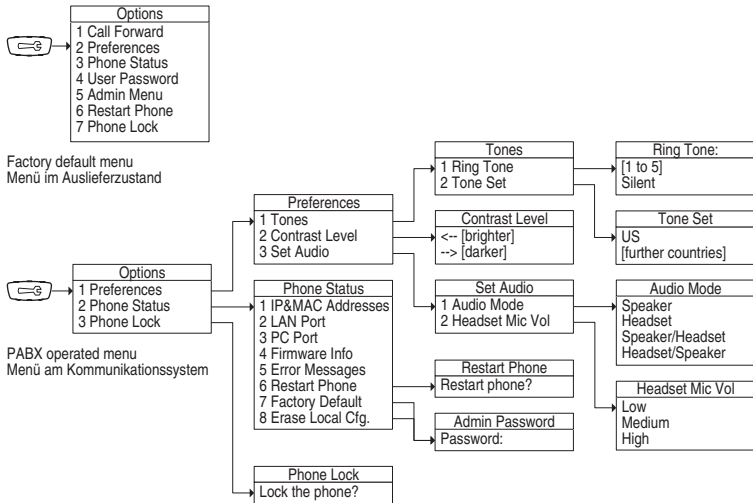
Certain functions of the Forum iPhone 512 can only be accessed via password for security reasons.

- **Login of the Forum iPhone 512:** Under **Phone No.** enter your call number. Under **PIN** enter your user PIN (see *Hot Desking* starting on page 24).
- **Local settings on the telephone:** The factory settings password is “22222”. After the first login of the Forum iPhone 512 onto the Forum 500 / Forum 5000 communications system this password is overwritten by the Forum 500 / Forum 5000 communications system for security reasons.

The "Options" Menu

Press the options key  to configure local settings directly on the Forum iPhone 512.

When factory settings are restored no additional language files are available. In this case, the display language is set to English. The following menu reference simplifies navigating the English-language **Options** menu.



Telephone Options menu reference (English)

Index

A

- AC adapter 6
- ACD 33
- Administrator password 38, 39
- Announcement 32
- Answered calls 36
- Automatic call recording, see call recording 14

B

- Busy lamp field 35

C

- Call diversion 29
 - Follow me 29
- Call forwarding 22, 36
- Call lists 28
- Call number
 - suppress 32
 - transmit 32
- Call protection 17, 30, 36
- Call recording 14
- Call waiting protection 18, 31, 36
- Call waiting tone 12, 18
- Caller list 20
- Calls
 - pick-up 31
- Cleaning 7
- Comfort hunt group 29
- Conference 15, 16
- Connections
 - Call pick-up 31
 - Dial 32

D

- Date
 - set 33
- Destination 35
- Devices menu 5

E

- E-mail 30
- Emergency calls 25
- Enquiry 15

F

- Factory settings 38
- Follow me 29
- Forum iPhone 512 5
- Function keys 9

G

- Goodbye key 8, 14

H

- Handsfree 17
- Hash key 11
- Headset 9
- Hold key 8
- Hot desking 26

I

- Installation site 7
- Intercom 32

L

- Logout 31, 37
- Loudspeaker key 8

M

- Main menu 36
 - Applications 33
 - Call forwarding 29
 - Calls 28
 - Central settings 33
 - Connections 31
 - Menu tree 34
 - Messages 30
 - Protection 30
- Messages 21, 36
- Missed calls 36
- Mute key 8

N

- Navigation keys 9

O

- Open-listening 17
- Options key 8

P

- Password 39
- Phone book 21, 32, 36
- Phone lock 37
- Pick-up 31
 - select 31
- Pickup from group 37
- Presence 30, 36

R

- Recordings 28
- Redial key 8
- Repair 6
- Restarting 37

S

- Safety precautions 6
- Short messages 21, 30, 36
- Speech 36
- Speed dialling 19
- Standard hunt group 28

T

- Take 31, 37
- Telephone lock 30
- Telephone options (English) 40
- Time
 - set 33
- Toggling 15
- Transfer 15, 16
- Trunk keys 8

U

- User password 25

V

- Voicebox 33, 36
- Volume
 - adjusting 17
- Volume control keys 8

X

- XML 37

Support

You can contact our support on the following telephone numbers:

For configuration changes of your Forum™ 500 or Forum™ 5000 communications system

	SMEs and residential customers	Large companies
in Dutch:	0800 22 500	0800 22 200
in French:	0800 33 500	0800 33 200
in German:	0800 44 500	0800 44 200
in English:	0800 55 500	0800 55 200

For repairs

	SMEs and residential customers	Large companies
in Dutch:	0800 22 500	0800 14 888
in French:	0800 33 500	0800 14 888
in German:	0800 44 500	0800 14 888
in English:	0800 55 500	0800 14 888

For more information:

- Visit us in the Internet at www.proximus.be/pabx
- Contact your Proximus dealer